



Manuals.plus /

› Printme /

› Printme Air 39 Capsule Transparent Design TWS Wireless Headphones User Manual

## Printme Air 39

# Printme Air 39 Capsule Transparent Design TWS Wireless Headphones User Manual

Model: Air 39

## 1. INTRODUCTION

---

This manual provides detailed instructions for the use and maintenance of your Printme Air 39 Capsule Transparent Design TWS Wireless Headphones. Please read this manual thoroughly before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are present in your product package:

- Printme Air 39 TWS Wireless Earbuds (Left and Right)
- Wireless Charging Case with Transparent Design
- Charging Cable
- User Manual (this document)

## 3. PRODUCT OVERVIEW

---

The Printme Air 39 TWS Wireless Headphones feature a transparent capsule design and utilize Bluetooth V5.3 for connectivity. They are designed for in-ear use, suitable for gaming and general audio. Key features include Environmental Noise Cancellation (ENC) for calls and an LED display on the charging case.



Image: Printme Air 39 TWS Earbuds shown with their transparent charging case, displaying the LED battery indicator.

## Key Features:

- **Transparent Capsule Design:** The charging case features a transparent design.
- **Bluetooth V5.3 Connectivity:** Provides stable wireless connection.
- **Environmental Noise Cancellation (ENC):** Enhances call clarity by reducing ambient noise.
- **LED Display:** The charging case includes an LED display to show battery levels and charging status.
- **Extended Battery Life:** Designed for prolonged use.
- **Intuitive Touch Controls:** Allows for easy management of audio playback, calls, and volume.
- **Smart Auto-Pause/Auto-Resume:** Audio playback pauses when earbuds are removed and resumes when reinserted.
- **Sweat and Water Resistance:** Suitable for workouts and outdoor activities.

## 4. SETUP

---

### 4.1 Initial Charging

1. Before first use, fully charge the charging case and earbuds.
2. Place both earbuds into the charging case.

3. Connect the charging cable to the charging port on the case and to a USB power source.
4. The LED display on the case will indicate the charging status. Ensure the case and earbuds are fully charged before proceeding.



Image: The Printme Air 39 charging case with earbuds inside, illustrating the charging process and LED display.

## 4.2 Bluetooth Pairing

1. Ensure the earbuds are charged and placed inside the charging case.
2. Open the charging case lid. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "Printme Air 39" from the list.
5. Once connected, a confirmation sound may be heard, and the earbuds will be ready for use.
6. For subsequent uses, the earbuds will automatically connect to the last paired device when removed from the case.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Touch Controls

The Printme Air 39 earbuds feature touch-sensitive areas for control. The specific functions may vary slightly, but common controls include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold on either earbud during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud (functionality depends on your device).
- **Volume Control:** Specific gestures for volume control may be available; refer to the quick start guide for precise details if not listed here.

# *Seamless Touch Control*



Image: Close-up of a Printme Air 39 earbud, highlighting the touch control area.

## **5.2 Call Management with ENC**

The Environmental Noise Cancellation (ENC) technology helps reduce background noise during calls. To manage calls:

- **Answering a Call:** Single tap on either earbud.
- **Ending a Call:** Single tap on either earbud during an active call.
- **Rejecting a Call:** Press and hold on either earbud for approximately 2 seconds.

## 5.3 Smart Auto-Pause/Auto-Resume

The earbuds are equipped with sensors that detect when they are removed from or placed back into your ears. Audio playback will automatically pause when an earbud is removed and resume when it is reinserted.

## 5.4 Gaming Mode

The Printme Air 39 headphones are designed with low latency for gaming. To activate or deactivate gaming mode, refer to the quick start guide or try pressing and holding a specific earbud for a few seconds (e.g., right earbud for 2-3 seconds) until a notification sound is heard. This mode optimizes audio synchronization for gaming.

# 6. MAINTENANCE

---

## 6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Ensure charging contacts on both earbuds and case are clean and free of debris for proper charging.

## 6.2 Water Resistance

The earbuds are sweat and water resistant. This means they can withstand sweat and light splashes of water. They are not designed for swimming or prolonged submersion in water. Do not charge the earbuds or case if they are wet.

# 7. TROUBLESHOOTING

---

If you encounter issues with your Printme Air 39 headphones, refer to the following common solutions:

Problem	Solution
Earbuds not pairing with device.	Ensure earbuds are charged. Place earbuds back in the case, close the lid, then open to re-enter pairing mode. Turn off and on Bluetooth on your device. Forget "Printme Air 39" from your device's Bluetooth list and re-pair.
No sound from one or both earbuds.	Check device volume and earbud volume. Ensure earbuds are properly connected to your device. Re-pair the earbuds. Clean any debris from the earbud speakers.
Charging case not charging.	Ensure the charging cable is securely connected. Try a different USB power source or charging cable. Clean the charging port on the case.
Poor call quality.	Ensure earbuds are properly seated in your ears. Move closer to your connected device. Check for environmental interference.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Name	Air 39 TWS wireless bluetooth
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Ear Placement	In Ear
Control Type	Touch Control
Microphone Technology	Bidirectional, In-Line
Special Features	Sweatproof, Environmental Noise Cancellation (ENC)
Water Resistance Level	Water Resistant
Recommended Uses	Running, Gaming
Charging Case Material	Plastic (Transparent)
Item Weight	100 Grams (total)
Product Dimensions	5 x 5 x 3 cm
Manufacturer	Printme
Country of Origin	China

## 9. WARRANTY AND SUPPORT

---

For warranty information and customer support, please contact Printme directly. The manufacturer's customer care number is 8097 41 99 81.

Extended warranty plans may be available from third-party providers. Please refer to your purchase documentation for details on any additional warranty coverage.

## 10. SAFETY INFORMATION

---

- Do not disassemble, repair, or modify the product. This may cause fire, electric shock, or complete damage to the product.
- Keep the product away from extreme temperatures, direct sunlight, and high humidity.
- Avoid dropping or subjecting the product to strong impacts.
- Keep out of reach of children and pets. Small parts may pose a choking hazard.
- Do not use the earbuds at excessively high volumes for prolonged periods to prevent hearing damage.
- Be aware of your surroundings when using earbuds, especially in traffic or other potentially hazardous situations.
- Dispose of the product and its components responsibly according to local regulations.

