



Manuals.plus /

› Blooy /

› Blooy Presser Foot Instruction Manual for JACK 798D/E4/904E/C4/C5 and Pegasus EX5200 Overlock Sewing Machines

Blooy JACK 798D/E4/904E/C4/C5, Pegasus EX5200, Siruba 988

Blooy Presser Foot Instruction Manual for Overlock Sewing Machines

Models: JACK 798D/E4/904E/C4/C5, Pegasus EX5200, Siruba 988

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your Blooy Presser Foot for 4-thread overlock sewing machines. This genuine presser foot is designed to ensure precise and efficient sewing operations.



Image 1.1: Front view of the Blooy Presser Foot. This image displays the main body of the presser foot, including the attachment mechanism and the foot plate.

2. COMPATIBILITY

This Blooy Presser Foot is specifically designed for use with the following 4-thread overlock sewing machine models:

- JACK 798D
- JACK E4
- JACK 904E
- JACK C4
- JACK C5
- Pegasus EX5200
- Siruba 988

Ensure your sewing machine model is listed above for proper fit and function.

3. INSTALLATION INSTRUCTIONS

Follow these steps to correctly install the presser foot on your compatible overlock sewing machine:

1. **Power Off:** Before beginning, ensure your sewing machine is turned off and unplugged from the power source to prevent accidental operation.
2. **Raise Needle and Presser Foot Lever:** Use the handwheel to raise the needle to its highest position. Lift the presser foot lever to raise the existing presser foot.
3. **Remove Old Presser Foot (if applicable):** Locate the screw that secures the presser foot to the presser bar. Loosen this screw with a screwdriver and carefully remove the old presser foot.
4. **Attach New Presser Foot:** Position the Blooy Presser Foot under the presser bar, aligning the foot's attachment point with the screw hole on the presser bar.
5. **Secure the Foot:** Insert the screw and tighten it firmly to secure the new presser foot in place. Do not overtighten.
6. **Test Functionality:** Plug in and power on your machine. Lower the presser foot lever and manually turn the handwheel a few times to ensure the needle clears the foot and all parts move freely without obstruction.



Image 3.1: Side view of the Blooy Presser Foot. This angle highlights the attachment bracket and the general profile of the foot.

4. OPERATING INSTRUCTIONS

Once installed, the Blooy Presser Foot functions as a standard presser foot for 4-thread overlock machines. Here are general operating guidelines:

- **Fabric Placement:** Place your fabric under the presser foot, ensuring it is flat and aligned with the feed dogs.

- **Lower Presser Foot:** Lower the presser foot lever to hold the fabric securely in place.
- **Start Sewing:** Begin sewing at a moderate speed, guiding the fabric gently. The presser foot will help maintain even pressure and feed the fabric smoothly.
- **Adjustments:** Refer to your sewing machine's main instruction manual for specific tension, stitch length, and differential feed adjustments, as these settings are machine-dependent and crucial for optimal overlock stitching.
- **Safety:** Always keep fingers clear of the needle and cutting blades during operation.



Image 4.1: Angled view of the Blooy Presser Foot from above. This perspective shows the top surface and the various components of the foot.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your presser foot:

- **Cleaning:** Periodically clean the presser foot to remove lint, dust, and fabric fibers that may accumulate. Use a small brush or lint-free cloth.
- **Inspection:** Regularly inspect the presser foot for any signs of wear, damage, or bending. A damaged foot can affect stitch quality.
- **Storage:** When not in use, store the presser foot in a clean, dry place to prevent corrosion or damage.

6. TROUBLESHOOTING

If you encounter issues while using the presser foot, consider the following:

- **Uneven Stitching:**
 - Ensure the presser foot is securely attached and not loose.
 - Check for any lint or debris under the foot that might obstruct fabric feeding.
 - Verify that your machine's tension settings are appropriate for the fabric and thread.
- **Fabric Not Feeding Smoothly:**
 - Confirm the presser foot is lowered correctly.
 - Clean the feed dogs of your sewing machine.
 - Adjust the presser foot pressure if your machine allows (refer to your machine's manual).
- **Needle Hitting Presser Foot:**
 - Immediately stop the machine.
 - Ensure the presser foot is correctly aligned and securely tightened.
 - Check if the needle is bent or installed incorrectly. Replace if necessary.

For persistent issues, consult your sewing machine's instruction manual or contact a qualified service technician.

7. PRODUCT SPECIFICATIONS

Brand	Blooy
Product Type	Presser Foot for Overlock Sewing Machine
Compatible Machine Types	4-Thread Overlock Sewing Machines
Compatible Models	JACK 798D, E4, 904E, C4, C5; Pegasus EX5200; Siruba 988
Product Dimensions	Approximately 6 x 4 x 2 inches (15.24 x 10.16 x 5.08 cm)
Manufacturer	Blooy
ASIN	B0CHXY6FVM
UPC	794697681726
Date First Available	September 13, 2023

8. WARRANTY AND SUPPORT

Specific warranty details for this Blooy Presser Foot are not provided in the product information. For warranty inquiries or technical support, please refer to the retailer where the product was purchased or contact the manufacturer, Blooy, directly through their official channels.
Always retain your proof of purchase for any warranty claims.