

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› YKR-P/001E Replaced Remote Control User Manual

ECONTROLLY YKR-P001E-P002E

User Manual: YKR-P/001E Replaced Remote Control

For York/AUX Air Conditioners

Brand: ECONTROLLY | Model: YKR-P001E-P002E

1. PRODUCT OVERVIEW

The ECONTROLLY YKR-P/001E is a replacement remote control specifically designed for various York/AUX Air Conditioner models. This remote provides essential functions for controlling your air conditioning unit, including temperature adjustment, mode selection, fan speed, and specialized functions. It is designed to work immediately upon battery insertion, requiring no complex programming.





Figure 1: Front view of the ECONTROLLY YKR-P/001E remote control, showing the display screen and various control buttons.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries (not included). For optimal performance and longevity, use new alkaline batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Back view of the remote control with the battery compartment open, showing the slots for two AA batteries.

2.2 Initial Use

This replacement remote control does not require any programming or setup. Once the batteries are correctly installed, it is ready for immediate use with compatible York/AUX Air Conditioner models.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver window. Ensure there are no obstructions between the remote and the unit.

3.1 Basic Functions

- **Power Button:** Press to turn the air conditioner ON or OFF.
- **MODE Button:** Cycles through operating modes such as Auto, Cool, Dry, Fan, and Heat (if supported by your AC unit).
- **Temperature Adjustment Buttons (▲/▼):** Increase or decrease the desired temperature setting.
- **SPEED Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).

3.2 Advanced Functions

- **°C/°F Button:** Switches the temperature display between Celsius and Fahrenheit.
- **SWING ←/→ and SWING ↑/↓ Buttons:** Controls the horizontal and vertical louver swing direction.
- **TURBO Button:** Activates rapid cooling or heating for a short period.
- **TIMER Button:** Sets the auto-on or auto-off timer for the air conditioner. Refer to your air conditioner's manual for specific timer programming details.
- **iFavor Button:** Activates a pre-set preferred operating mode.
- **iFeel Button:** Activates a function where the remote's built-in sensor measures the ambient temperature and adjusts the AC operation for optimal comfort around the remote's location.
- **HEALTH Button:** Activates air purification or health-related functions (if available on your AC model).
- **SLEEP Button:** Adjusts temperature and fan speed settings for comfortable sleep.
- **iClean Button:** Initiates a self-cleaning function for the indoor unit (if available on your AC model).
- **Anti-FUNGUS Button:** Activates a function to prevent mold and mildew growth within the AC unit.
- **DISPLAY Button:** Toggles the display on the air conditioner unit (e.g., turns off LED lights).



Figure 3: Angled view of the remote control, highlighting the ergonomic design and button arrangement.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or the display dims. Always replace both batteries simultaneously with new alkaline batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's electronics or finish.

5. TROUBLESHOOTING

5.1 Remote Control Not Working

- **Check Batteries:** Ensure that two (2) new alkaline AA batteries are correctly installed with the proper polarity. Rechargeable batteries may not provide sufficient power.
- **Obstruction:** Verify that there are no objects blocking the line of sight between the remote control and the air conditioner's infrared receiver.
- **Distance:** Ensure you are within the effective operating range of the air conditioner's receiver.
- **Compatibility:** Confirm that your air conditioner model is compatible with the YKR-P/001E remote control. While this

remote is a replacement for many York/AUX models, specific compatibility may vary.

5.2 Display Issues

- **Dim Display:** Replace the batteries with new ones.
- **Incorrect Temperature Unit:** Press the °C/°F button to switch between Celsius and Fahrenheit.

If issues persist after following these steps, please refer to the Support section for further assistance.

6. SPECIFICATIONS

Model Number	YKR-P001E-P002E
Compatible Models	YKR-P/001E (and others, refer to product listing)
Power Source	2 x AA Batteries (not included)
Product Dimensions	6 x 3 x 0.5 inches (approx.)
Item Weight	2 ounces (approx.)
Color	Black
Special Feature	Ergonomic design





Figure 4: Back view of the remote control, displaying the model number label.

7. WARRANTY INFORMATION

This product is covered by a standard limited warranty provided by the manufacturer, ECONTROLLY. For specific details regarding warranty coverage, duration, and claims procedures, please refer to the documentation included with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

8. SUPPORT

For technical assistance, troubleshooting not covered in this manual, or inquiries regarding product compatibility, please contact the seller or manufacturer directly through the platform where the product was purchased. Provide your product model number (YKR-P001E-P002E) and a detailed description of the issue for faster support.

Manufacturer: ECONTROLLY

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question