

- Manuals.plus /
- › [ECONTROLLY](#) /
- › ECONTROLLY Replacement Remote Control User Manual for Supersonic LEDTV/DVD Combo Models

ECONTROLLY MB1689

ECONTROLLY Replacement Remote Control User Manual

For Supersonic LEDTV/DVD Combo Models: SC-1312, SC-1512, SC1912, SC-2212, SC-2412

1. PRODUCT OVERVIEW

This ECONTROLLY replacement remote control is designed to function with various Supersonic LEDTV/DVD Combo models. It provides a direct replacement for your original remote, offering full functionality without the need for complex programming.



Image 1.1: Front view of the remote control, displaying the layout of power, number, volume, channel, and navigation buttons.



Image 1.2: Angled view of the remote control, showing its ergonomic shape and button arrangement.

2. SETUP INSTRUCTIONS

This remote control requires no programming. Simply install the batteries to begin operation.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.





Image 2.1: Back view of the remote control, showing the battery compartment cover.

3. Insert two (2) new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams

inside the compartment.





Image 2.2: Battery compartment with cover removed, illustrating where to insert AA batteries.

4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Batteries are not included. Use only new alkaline batteries for optimal performance. Rechargeable batteries may not provide sufficient power.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for immediate use with compatible Supersonic LEDTV/DVD Combo models. Point the remote directly at your television or DVD combo unit.

3.1 Basic Functions

- **POWER:** Turns the TV/DVD Combo unit on or off.
- **MUTE:** Mutes or unmutes the audio.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the television channel.
- **Number Buttons (0-9):** Directly select channels.
- **MENU:** Accesses the main menu of the TV/DVD Combo.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigate through menus and confirm selections.
- **SOURCE:** Selects input sources (e.g., HDMI, AV, DVD).
- **PLAY/PAUSE, STOP, REW, FF:** Controls DVD playback functions.

The remote is designed to replicate the functionality of your original remote control. Refer to your Supersonic LEDTV/DVD Combo's original manual for specific functions of less common buttons if needed.

4. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Always use new alkaline batteries.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight.
- **Durability:** The remote is constructed from durable ABS material, designed for wear resistance. However, avoid dropping the remote or exposing it to excessive force.

5. TROUBLESHOOTING

If you experience issues with your ECONTROLLY replacement remote control, please refer to the following troubleshooting steps:

- **Remote Not Responding:**

- Ensure new AA alkaline batteries are correctly installed with the correct polarity. Replace old batteries with fresh ones.
- Check for any obstructions between the remote control and the TV/DVD Combo unit's infrared receiver.
- Verify that the remote is pointed directly at the TV/DVD Combo unit.

- **Specific Buttons Not Working:**

- This remote does not require programming. If a specific button is not functioning, ensure it is a feature supported by your Supersonic LEDTV/DVD Combo model.

- **Remote Still Not Working:**

- If the remote continues to malfunction after trying the above steps, please contact customer support. It is helpful to have a picture of your original remote control and your TV/DVD Combo model number ready.

6. SPECIFICATIONS

Model Number	MB1689
Compatible Brands	Supersonic
Compatible Models	SC-1312, SC-1512, SC1912, SC-2212, SC-2412
Product Dimensions	6 x 3 x 0.5 inches (approximately)
Item Weight	2 ounces (approximately)
Power Source	2 x AA Batteries (not included)
Material	ABS
Color	Black
Special Feature	Ergonomic design

7. SUPPORT INFORMATION

ECONTROLLY products undergo thorough testing to ensure perfect functionality. If you have any questions or require assistance with your replacement remote control, please do not hesitate to contact our customer support team.

We are committed to resolving any issues and providing you with the best possible service. When contacting support, please provide your product model number (MB1689) and the specific model of your Supersonic LEDTV/DVD Combo unit for faster assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CHY548S4>

More documents and user manuals: **<https://manuals.plus/>**