

Kenmore KW4070

Kenmore KW4070 RevitaLite Pet Portable Carpet Cleaner User Manual

Model: KW4070

INTRODUCTION

The Kenmore KW4070 RevitaLite Pet Portable Carpet Cleaner is designed for effective deep cleaning of carpets, rugs, and upholstery. This manual provides essential instructions for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Always connect to a properly grounded outlet.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.

- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space where vapors are given off from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use for any purpose other than described in this user manual.
- Use only manufacturer's recommended attachments.
- Use only cleaning products intended for use with this appliance to prevent internal component damage.
- Unplug before connecting hose.
- Do not immerse. Use only on surfaces moistened by the cleaning process.
- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

WHAT'S IN THE BOX

Your Kenmore KW4070 RevitaLite Pet Portable Carpet Cleaner package includes the following components:

- Kenmore KW4070 RevitaLite Pet Portable Carpet Cleaner Unit
- 3.5" Tough Stain Tool
- 6.5" Wide Path Tool
- 8ft Hose
- 2 x 8oz. Trial Size Bottles of Cleaning Formula
- Accessory Bag
- Nozzle Cleaning Tool



Figure 1: Kenmore KW4070 RevitaLite Pet Portable Carpet Cleaner with all included accessories.

ASSEMBLY

The Kenmore KW4070 RevitaLite Pet Portable Carpet Cleaner is designed for quick and easy assembly. Simply connect the main handle to the base unit and ensure all tanks are securely in place.

Your browser does not support the video tag.

Video 1: Product Overview and Basic Assembly. This video demonstrates the components and simple assembly steps for the Kenmore KW4070 carpet cleaner.

OPERATING INSTRUCTIONS

1. Filling the Tanks

1. Remove the clean water tank from the top of the unit.
2. Unscrew the yellow cap and fill the tank with warm water up to the indicated fill line.
3. Add the recommended amount of Kenmore cleaning formula to the concentrate line.
4. Securely replace the yellow cap and reattach the clean water tank to the unit.

2. Cleaning Carpets and Rugs

For optimal results, vacuum the area thoroughly before deep cleaning.

- Plug in the carpet cleaner to a grounded outlet.
- Press the power button to turn on the unit.
- Hold down the trigger on the handle to dispense cleaning solution. Push the cleaner forward and pull it backward over the carpet. This constitutes one wet pass.
- Release the trigger and push the cleaner forward and pull it backward over the same area. This constitutes one dry pass, which suctions up the dirty solution.
- Repeat the wet and dry passes until the carpet is clean and the dirty water tank shows clear water being extracted.



DUAL POWERED BRUSH ROLLS

Removes embedded dirt, stains & odors

Figure 2: Dual Powered Brush Rolls effectively remove embedded dirt, stains, and odors from carpets and rugs.

3. Cleaning Upholstery and Stairs

- Attach the 8ft hose to the designated port on the main unit.
- Select either the 3.5" Tough Stain Tool or the 6.5" Wide Path Tool, depending on the area to be cleaned, and attach it to the end of the hose.
- Hold the tool firmly against the surface. Press the trigger to spray solution and scrub the area.
- Release the trigger and apply pressure to suction up the dirty solution.
- Continue until the area is clean.



TWO VERSATILE TOOLS

to remove stains from upholstery, stairs & more

Figure 3: The 8ft hose and versatile tools allow for quick cleaning of messes on stairs or upholstery.



REMOVABLE BRUSH ROLL COVER

for easy cleanup after you vacuum

Figure 4: Two versatile tools are included to remove stains from upholstery, stairs, and more.

MAINTENANCE

1. Emptying and Cleaning the Dirty Water Tank

- After each use, remove the dirty water tank from the lower part of the unit.
- Carefully open the tank and dispose of the dirty water.
- Rinse the tank thoroughly with clean water and allow it to air dry before reattaching.

2. Cleaning Brush Rolls and Nozzle

- The removable brush roll cover provides convenient access for cleaning underneath the brush rolls.
- Remove the brush roll cover and carefully remove the dual powered brush rolls.
- Clean any hair or debris from the brush rolls and the brush chamber.
- Use the included nozzle cleaning tool to clear any blockages in the nozzle.
- Rinse the brush roll cover and brush rolls with water and allow them to dry completely before reassembling.







6.5" Tough Stain Tool	2 x 8 oz. Carpet Cleaning Formula
	
	
3.5" Tough Stain Tool	8' Attachment Hose

Figure 5: The easy-clean removable cover allows for convenient access to clean underneath the brush roll cover after use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Not plugged in; circuit breaker tripped	Ensure plug is fully inserted; reset circuit breaker
No solution dispensing	Clean water tank empty; tank not seated correctly; nozzle clogged	Refill tank; re-seat tank firmly; clear nozzle blockage
Poor suction	Dirty water tank full; dirty water tank not seated correctly; hose/nozzle clogged	Empty dirty water tank; re-seat tank firmly; clear hose/nozzle blockage
Brush rolls not spinning	Brush roll jammed with debris; belt broken	Clear debris from brush rolls; contact customer support for belt replacement

SPECIFICATIONS

<div><div><div>Use & Care Guide</div><div>Manuel de l'us y el cuidado</div><div>Manuel d'utilisation et d'entretien</div></div><div><div>Kenmore.</div><div>Pet Friendly POP-N-GO™</div><div>Bagged Canister Vacuum Cleaner</div><div>Aspiradora con tanque en bolsa</div><div>POP-N-GO™ que admite mascotas</div><div>POP-N-GO™ pour animaux avec</div><div>aspirateur-balluchon en sac</div><div>10000</div><div>Vacuum Cleaner Help Line:</div><div>1-877-251-7229 / 1-866-4-251-7229 (CA)</div><div>800a-m-305pm EST, M-F</div><div>www.kenmore.com</div></div><div></div></div>	<p>Kenmore Pet Friendly POP-N-GO Bagged Canister Vacuum Cleaner User Manual</p> <p>This user manual provides instructions for the Kenmore Pet Friendly POP-N-GO Bagged Canister Vacuum Cleaner, including assembly, operation, maintenance, and troubleshooting.</p>
<div><div><div>Use & Care Guide</div><div>Manuel de l'us y el cuidado</div></div><div><div>Kenmore.</div><div>Canister Vacuum Cleaner</div><div>Aspiradora con tanque</div><div>10000</div><div>Vacuum Cleaner Help Line:</div><div>1-877-251-7229 / 1-866-4-251-7229 (CA)</div><div>800a-m-305pm EST, M-F</div><div>www.kenmore.com</div></div><div><div>Kenmore and the Kenmore logo are registered trademarks of Sears, Roebuck and Company, LLC. All other marks are the property of their respective owners.</div><div></div></div></div>	<p>Kenmore BC4026 Canister Vacuum Cleaner Use & Care Guide</p> <p>Comprehensive guide for the Kenmore BC4026 Canister Vacuum Cleaner, covering assembly, operation, safety instructions, maintenance, and troubleshooting.</p>
<div><div><div>Use & Care Guide</div><div>Manuel de l'us y el cuidado</div></div><div><div>Kenmore.</div><div>Canister Vacuum Cleaner</div><div>Aspiradora con tanque</div><div>10000</div><div>Vacuum Cleaner Help Line:</div><div>1-877-251-7229 / 1-866-4-251-7229 (CA)</div><div>800a-m-305pm EST, M-F</div><div>www.kenmore.com</div></div><div><div>Kenmore and the Kenmore logo are registered trademarks of Sears, Roebuck and Company, LLC. All other marks are the property of their respective owners.</div><div></div></div></div>	<p>Kenmore BC4026 Canister Vacuum Cleaner Use & Care Guide</p> <p>A comprehensive guide for the Kenmore BC4026 Canister Vacuum Cleaner, detailing assembly, operation, safety, maintenance, and troubleshooting for optimal home cleaning.</p>