

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Arafuna](#) /

› [ARAFUNA Desktop CD Player Portable, Bluetooth CD Player for Home, CD Radio Player AUX USB, with Speakers, LED Display Remote Control User Manual](#)

Arafuna CD533W

ARAFUNA Desktop CD Player User Manual

Model: CD533W

Brand: Arafuna

1. INTRODUCTION

Thank you for purchasing the Arafuna Desktop CD Player. This versatile device combines a portable CD player with Bluetooth capabilities, FM radio, AUX input, and USB playback, offering a comprehensive audio experience for your home. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.



Figure 1: Arafuna Desktop CD Player and Remote Control.

2. WHAT'S IN THE BOX

Please check the package contents upon unboxing:

- CD Player Portable with Remote Control
- Charging Cable and AC Adapter
- AUX Cable
- Wall Mounted Plate
- User Manual



Figure 2: Package Contents.

3. PRODUCT FEATURES

- **Bluetooth 5.0 Connectivity:** Functions as both a Bluetooth receiver and transmitter. Connect to Bluetooth-enabled devices like phones, tablets, or headphones (receiver mode) or transmit audio to Bluetooth speakers (transmitter mode). Offers a 33-foot connectivity range for stable and fast transmission.

Bluetooth connection

Goodbye to Tangled Cords CD Player with Bluetooth
Stream music to Bluetooth speaker or earphones Bluetooth connection



(Use the CD player as the bluetooth Speaker)

Figure 3: Bluetooth Connection Feature.

- **FM Radio Function:** Built-in full-band FM radio (76 MHz-108 MHz) for listening to news, music, and weather.
- **LED Display:** Front-facing LED screen displays current playback mode (CD/Bluetooth/FM/AUX/USB) and playing time for easy operation.

CD Player With LCD Screen

All kinds of function in one Bluetooth 5.0



Figure 4: LED Display and Function Icons.

- **USB Input:** Supports USB flash drives (up to 32 GB) with MP3, WMA, and FLAC formats.
- **AUX Input/Output:** 3.5mm jack for connecting external audio devices (MP3 players, mobile phones) or connecting to headphones.
- **Last Memory Function:** Remembers the last playback track and resumes from where it left off.
- **Remote Control:** Conveniently control the player from up to ten meters away.
- **A-B Repeat Playback & Speed +/-:** Ideal for language learners and audio book enthusiasts.
- **Built-in Speakers:** Integrated HIFI loud speakers for direct audio playback.

HIFI Loud Speaker

If the speaker is connected to Bluetooth on your mobile phone, you need to turn off Bluetooth Smart Sound on your mobile phone, otherwise the sound may be distorted.



Figure 5: HIFI Loud Speakers and Connectivity.

4. SETUP GUIDE

4.1 Power Connection

1. Connect the provided AC adapter to the DC 5V port on the CD player.
2. Plug the AC adapter into a standard wall outlet.
3. Slide the Power On/Off switch to the "ON" position. The LED display will light up.

4.2 Wall Mounting (Optional)

Use the included wall-mounted plate and screws to securely attach the CD player to a wall. Ensure the mounting surface is stable and can support the device's weight.

Your browser does not support the video tag.

Video 1: Demonstrates the Arafuna Portable CD Player's features, including wall mounting, Bluetooth connectivity, and various playback modes. This video is provided by the seller.

5. OPERATING INSTRUCTIONS



Figure 6: Labeled Parts of the CD Player.

5.1 CD Playback

1. Open the CD cover by pressing the "CD Cover Open" button (12).
2. Insert a CD with the label side facing up.
3. Close the CD cover. The player will automatically detect the CD and begin playback.
4. Use the **Play/Pause** (6), **Stop** (7), **Previous** (8), and **Next** (9) buttons to control playback.
5. Adjust volume using **VOL-** (10) and **VOL+** (11).
6. Press the **Repeat** (5) button to cycle through repeat modes (e.g., repeat one, repeat all, random).
7. Press the **EQ** (3) button to select different equalizer modes (Flat, Jazz, Pop, Rock, Classic).

5.2 Bluetooth Mode

The player supports both Bluetooth receiver and transmitter functions.

5.2.1 Bluetooth Receiver (Connect phone/tablet to CD player)

1. Press the **MODE** (2) button until "BT" appears on the LED screen (1).
2. On your mobile device, enable Bluetooth and search for "ARAFUNA CD Player".
3. Select the device to pair. Once connected, you can play audio from your mobile device through the CD player's speakers.

5.2.2 Bluetooth Transmitter (Connect CD player to Bluetooth speaker/headphones)

1. Ensure your Bluetooth speaker or headphones are in pairing mode.
2. Press the **BT TX** (4) button on the CD player. The player will search for nearby Bluetooth audio devices.
3. Once connected, audio from the CD player (CD, FM, AUX, USB) will be transmitted to your external Bluetooth device.

5.3 FM Radio

1. Press the **MODE** (2) button until "FM" appears on the LED screen (1).
2. Use the **Previous** (8) and **Next** (9) buttons to tune to desired radio stations.
3. The player can automatically scan and save stations. Refer to the full user manual for detailed scanning instructions.

5.4 AUX Input

1. Connect one end of the provided AUX cable to the AUX IN port (16) on the CD player.
2. Connect the other end to the audio output jack of your external device (e.g., MP3 player, smartphone).
3. Press the **MODE** (2) button until "AUX" appears on the LED screen (1).
4. Play audio from your external device. The sound will be output through the CD player's speakers or connected headphones.

5.5 USB Playback

1. Insert a USB flash drive (formatted to FAT32, max 32GB) into the USB Port (17).
2. Press the **MODE** (2) button until "USB" appears on the LED screen (1).
3. The player will automatically detect and begin playing compatible audio files (MP3, WMA, FLAC).
4. Use the **Play/Pause** (6), **Stop** (7), **Previous** (8), and **Next** (9) buttons to control playback.

5.6 Remote Control Usage

The included remote control allows for convenient operation of all functions from a distance. Ensure there are no obstructions between the remote and the player's IR receiver.

Functions available on the remote include: Power On/Off, Mode selection, Play/Pause, Stop, Previous/Next track, Volume Up/Down, EQ mode, Repeat mode, A-B Repeat, and Speed +/-.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. Do not use abrasive cleaners or solvents.
- **Disc Care:** Handle CDs by their edges. Keep them clean and free of scratches. Store discs in their cases when not in use.
- **Storage:** When not in use for extended periods, unplug the player and store it in a cool, dry place.
- **Laser Lens:** Do not touch the laser lens inside the CD compartment. If cleaning is necessary, use a specialized CD lens cleaner disc.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------|--|--|
| Player does not power on. | Power cable not connected; Power switch off. | Ensure AC adapter is securely plugged in and power switch is ON. |
| "NO DISC" error displayed. | No CD inserted; CD inserted incorrectly; Damaged/dirty CD. | Insert a CD, ensure it's label side up. Clean or try another CD. |
| No sound from speakers. | Volume too low; Mute activated; Incorrect mode selected. | Increase volume. Check if muted. Ensure correct mode (CD, BT, AUX, USB, FM) is selected. |
| Bluetooth pairing failed. | Device too far; Pairing mode not active; Interference. | Ensure devices are within 33ft. Put both devices in pairing mode. Restart devices. |
| Remote control not working. | Batteries low/dead; Obstruction; Not pointed at IR receiver. | Replace remote batteries. Remove obstructions. Point remote directly at the player. |

8. SPECIFICATIONS

- **Model Number:** CD533W
- **Product Dimensions:** 24.71 x 18.97 x 4.9 inches
- **Item Weight:** 1.74 pounds
- **Connectivity Technology:** Bluetooth, Auxiliary, USB
- **Color:** White
- **Speaker Type:** Stereo
- **Power Source:** AC Adapter (Note: The unit is not rechargeable and must be powered by the included AC adapter. 1 12V battery is included for the remote control.)
- **FM Radio Range:** 76 MHz - 108 MHz
- **USB Support:** Up to 32GB, MP3/WMA/FLAC formats

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Arafuna website. Keep your purchase receipt for warranty claims.

Manufacturer: Arafuna