

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RMT-D257A Remote Control Instruction Manual for Sony DVD Recorders

ECONTROLLY RMT-D257A

ECONTROLLY RMT-D257A Remote Control Instruction Manual

For Sony DVD Recorder Models RDR-GX257 and RDR-GX380

1. PRODUCT OVERVIEW

The ECONTROLLY RMT-D257A is a replacement infrared remote control designed for specific Sony DVD Recorder models. It provides full functionality for operating your compatible DVD recorder without the need for programming.





Image 1.1: Angled view of the ECONTROLLY RMT-D257A remote control, showing its ergonomic design and button layout.

2. SETUP

2.1 Battery Installation

This remote control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Image 2.1: Rear view of the remote control, indicating the location of the battery compartment.

2.2 Initial Use

The ECONTROLLY RMT-D257A remote control is pre-programmed and does not require any additional setup or coding. Once batteries are installed, it is ready for immediate use with compatible Sony DVD Recorder models RDR-GX257 and RDR-GX380.

3. OPERATING INSTRUCTIONS

Point the remote control directly towards the infrared receiver on your Sony DVD Recorder. Ensure there are no obstructions between the remote and the device. The maximum effective range is approximately 33 feet (10 meters).



Image 3.1: Front view of the remote control, displaying all buttons and their labels.

3.1 Key Functions

The remote control features standard buttons for DVD recorder operation. Refer to your Sony DVD Recorder's original manual for specific functions of each button if needed. Common functions include:

- **POWER (I/O):** Turns the DVD recorder on or off.
- **INPUT:** Selects input sources.
- **VOL +/-:** Adjusts volume.
- **CH +/-:** Changes channels.
- **PLAY (▶), PAUSE (⏸), STOP (■), REC (●):** Standard playback and recording controls.
- **PREV (◀◀), NEXT (▶▶):** Skips tracks or chapters.
- **REWIND (◀◀◀), FAST FORWARD (▶▶▶):** Fast playback in reverse or forward.
- **NUMBER BUTTONS (0-9):** For direct channel or track selection.
- **SYSTEM MENU, TOP MENU, TITLE LIST:** Accesses various menu options.

- **ENTER, ARROW BUTTONS:** Navigates menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA ALKALINE batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or buttons.

4.3 Storage

When storing the remote control for extended periods, remove the batteries to prevent leakage, which can cause damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Remote control is not working:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA ALKALINE batteries.
 - Check for any obstructions between the remote control and the DVD recorder's infrared sensor.
 - Ensure you are within the effective operating range (approximately 33 feet).
- **Buttons are unresponsive or sticky:**
 - Clean the remote control as described in the Maintenance section.
 - If cleaning does not resolve the issue, the remote may require replacement.

If troubleshooting steps do not resolve the issue, please refer to the Support section for further assistance.

6. SPECIFICATIONS

Model Name:	RMT-D257A
Brand:	ECONTROLLY
Compatible Devices:	Sony DVD Recorder RDR-GX257, RDR-GX380
Connectivity Technology:	Infrared
Max Number of Supported Devices:	1
Power Source:	2 x AAA ALKALINE batteries (not included)
Maximum Range:	33 feet (10 meters)
Item Weight:	50 g
Item Dimensions (L x W x H):	8.93" x 2" x 0.56"

Special Feature:	Pre Programmed
Color:	Black

7. WARRANTY INFORMATION

This ECONTROLLY RMT-D257A remote control comes with a **12-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

8. SUPPORT

For any questions, concerns, or assistance regarding your ECONTROLLY RMT-D257A remote control, please contact the seller directly through the platform where the purchase was made. Provide your order details for faster service.

© 2026 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

