

[manuals.plus](#) /

› [classy leaves](#) /

› [classy leaves Black Outdoor Wall Lights Instruction Manual](#)

classy leaves Black Outdoor Wall Lights

classy leaves Black Outdoor Wall Lights Instruction Manual

Model: Black Outdoor Wall Lights

1. PRODUCT OVERVIEW

The classy leaves Black Outdoor Wall Light is a modern farmhouse-style rectangular light fixture designed for exterior use. It features a durable metal framework with a textured black finish and clear glass panels, providing an elegant aesthetic and warm illumination. The open-bottom design facilitates easy bulb installation and replacement. This fixture is suitable for various outdoor spaces including front entrances, patios, garages, hallways, and porches.



Image 1.1: The classy leaves Black Outdoor Wall Light, showcasing its modern rectangular design with clear glass and a black frame, installed on a house exterior.

1.1 Package Contents

Please verify that all components are present before beginning installation.

- 1 x Outdoor Light Fixture
- 1 x Complete Accessories Kit (mounting hardware)
- 1 x Instruction Manual

Note: An E26 base bulb (maximum 60W) is **not included** and must be purchased separately.

2. SAFETY INFORMATION

Read all instructions carefully before installation and retain for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installing or servicing.
- Ensure the electrical rating of the fixture is compatible with your power supply.
- All wiring connections must be in accordance with local and national electrical codes (NEC). If you are unfamiliar with proper electrical wiring connections, consult a qualified electrician.
- Do not install on surfaces that are not structurally sound.
- Do not exceed the maximum wattage specified for the bulb (60W).
- This fixture is designed for outdoor use only and is waterproof.

3. SETUP AND INSTALLATION

This section provides general guidelines for installing your outdoor wall light. Refer to the detailed user manual included in the package for specific step-by-step instructions and diagrams.

3.1 Tools Required (Not Included)

- Screwdriver (Phillips and Flathead)
- Wire Strippers
- Pliers
- Electrical Tape
- Ladder (if necessary)
- Safety Glasses

3.2 Installation Steps

1. **Turn off Power:** Before starting, ensure the power supply to the installation area is completely turned off at the circuit breaker or fuse box.
2. **Prepare Mounting Surface:** Ensure the mounting surface is clean, dry, and structurally sound.
3. **Attach Mounting Bracket:** Secure the mounting bracket to the junction box using the provided screws.
4. **Wire Connections:**
 - Connect the ground wire (usually bare copper or green) from the fixture to the ground wire from the junction box.
 - Connect the white wire (neutral) from the fixture to the white wire from the junction box.
 - Connect the black wire (live) from the fixture to the black wire from the junction box.
 - Secure all connections with wire nuts and electrical tape.
5. **Mount Fixture:** Carefully align the fixture with the mounting bracket and secure it with the provided screws.
6. **Install Bulb:** Insert one E26 base bulb (max 60W, not included) into the socket. The open-bottom design allows for easy access.
7. **Restore Power:** Once installation is complete and secure, restore power at the circuit breaker.



Image 3.1: A hand demonstrating the easy bulb installation into the E26 socket through the open bottom of the fixture.

4. OPERATING INSTRUCTIONS

The classy leaves Black Outdoor Wall Light operates via a standard wall switch connected to your home's electrical system.

- **Turning On/Off:** Use the connected wall switch to turn the light fixture on or off.
- **Dimming Functionality:** If used with a compatible dimmer switch (not included) and a dimmable E26 bulb, the fixture offers full dimming capabilities. Follow the dimmer switch manufacturer's instructions for operation.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your outdoor wall light.

- **Cleaning:**

- Ensure power is off before cleaning.
 - Wipe the fixture with a soft, damp cloth. Avoid abrasive cleaners or solvents that may damage the finish or glass.
 - Clean the clear glass panels periodically to maintain optimal light output.
- **Bulb Replacement:**
 - Turn off power before replacing the bulb.
 - Allow the bulb to cool completely before touching.
 - Unscrew the old E26 bulb and screw in a new one (max 60W).
 - **Weather Resilience:** The fixture is crafted from high-quality metal materials and is designed to withstand various outdoor elements, including sun, rain, snow, and water spray. No special weather-proofing maintenance is typically required beyond regular cleaning.

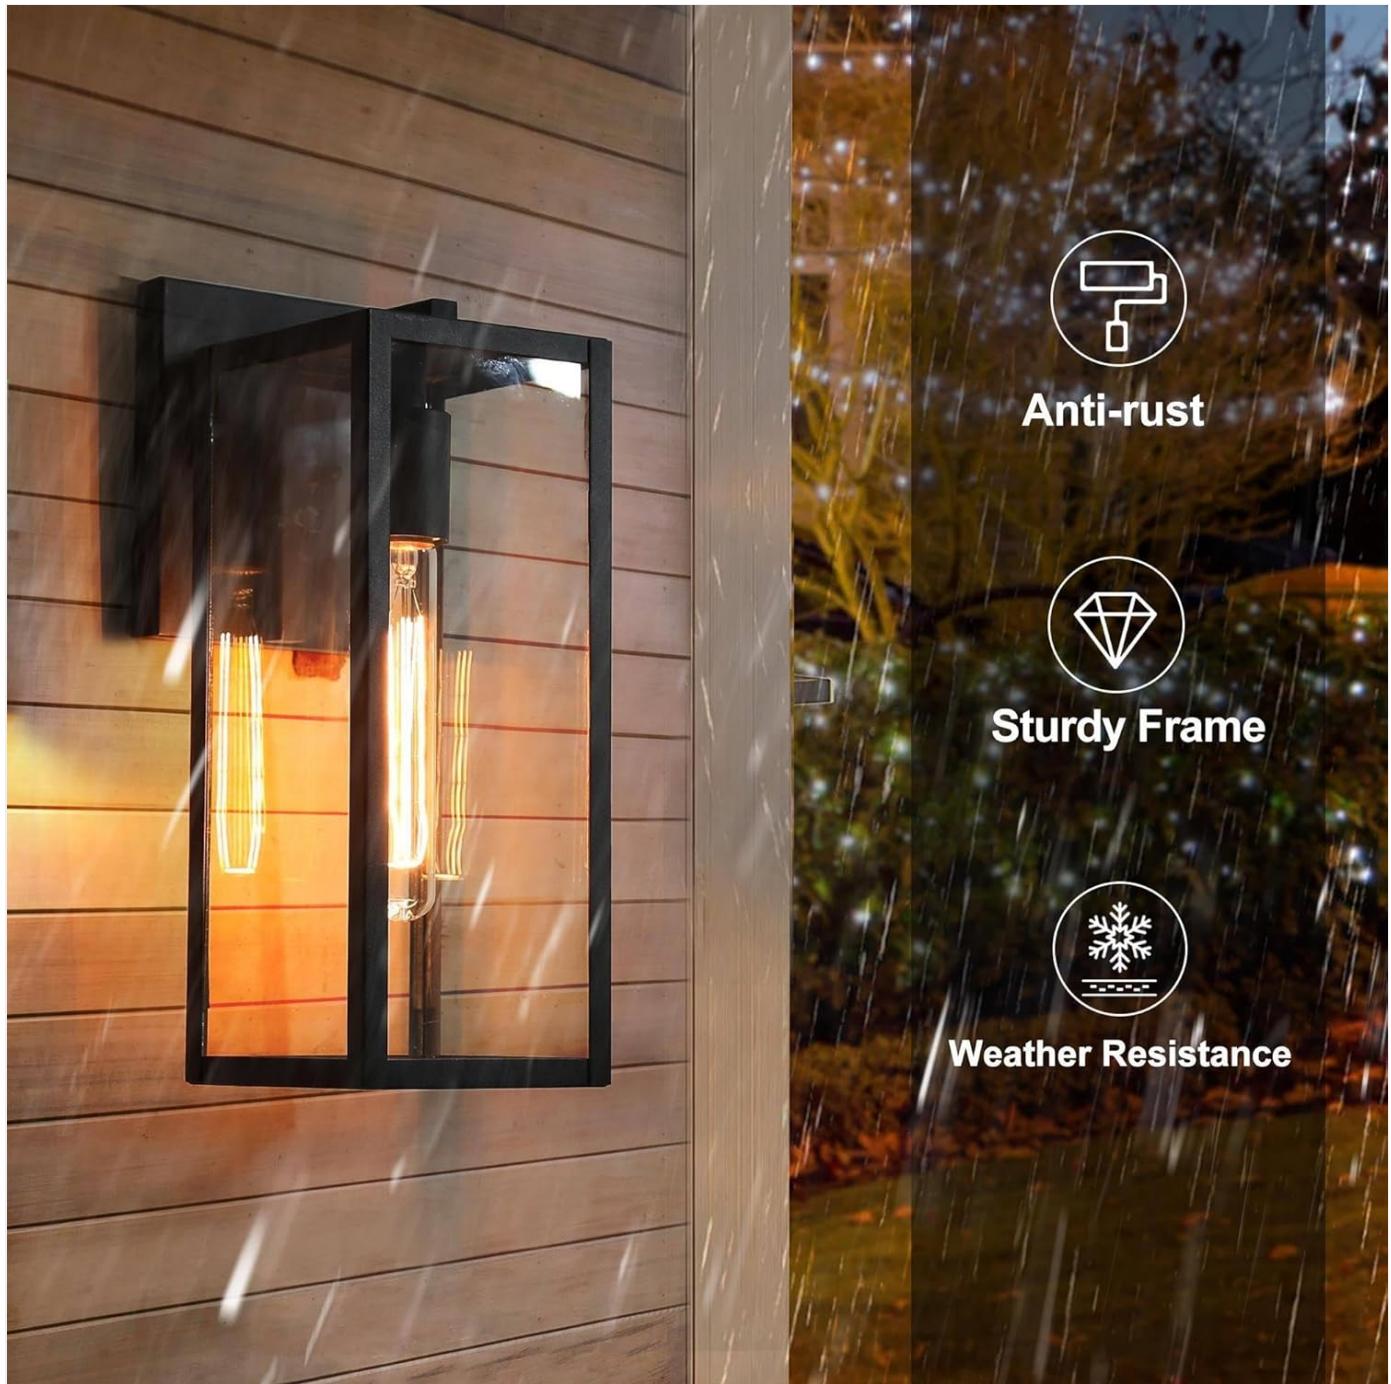


Image 5.1: The outdoor wall light demonstrating its weather resilience, featuring anti-rust properties, a sturdy frame, and resistance to various weather conditions.

6. TROUBLESHOOTING

If you encounter issues with your outdoor wall light, refer to the following common troubleshooting steps.

| Problem | Possible Cause | Solution |
|-------------------------------|---|---|
| Light does not turn on. | <ul style="list-style-type: none">Power is off at the circuit breaker.Bulb is loose or burnt out.Incorrect wiring connection. | <ul style="list-style-type: none">Check the circuit breaker and ensure power is on.Tighten or replace the E26 bulb.Turn off power and recheck wiring connections. Consult an electrician if unsure. |
| Light flickers. | <ul style="list-style-type: none">Loose bulb.Incompatible dimmer switch or bulb. | <ul style="list-style-type: none">Tighten the bulb.Ensure both the bulb and dimmer switch are compatible for dimming. |
| Dimming function not working. | <ul style="list-style-type: none">Non-dimmable bulb installed.Non-compatible dimmer switch. | <ul style="list-style-type: none">Replace with a dimmable E26 bulb.Ensure a compatible dimmer switch is installed. |

7. SPECIFICATIONS

Detailed technical specifications for the classy leaves Black Outdoor Wall Light.

| Feature | Detail |
|-------------------------|-------------------------------------|
| Brand | classy leaves |
| Model Name | Black Outdoor Wall Lights |
| Color | Textured Black |
| Material | Glass, Metal |
| Style | Modern Farmhouse |
| Product Dimensions | 5.1" L x 7.5" W x 14.2" H |
| Item Weight | 4.4 Pounds |
| Indoor/Outdoor Usage | Outdoor |
| Power Source | AC |
| Installation Type | Wall Mount |
| Special Feature | Waterproof |
| Light Source Type | LED (compatible, bulb not included) |
| Shade Material | Clear Glass |
| Number of Light Sources | 1 |

| Feature | Detail |
|------------------------|------------|
| Voltage | 120 Volts |
| Wattage (Max) | 60 watts |
| Bulb Base | E26 |
| Water Resistance Level | Waterproof |
| Certification | ETL |
| Assembly Required | Yes |



Image 7.1: Dimensional diagram of the outdoor wall light, illustrating its height, width, and depth from the mounting surface.

8. WARRANTY AND SUPPORT

The classy leaves Black Outdoor Wall Light comes with a 2-year limited warranty. This warranty covers defects in materials and workmanship under normal use.

- **Warranty Period:** 2 years from the date of purchase.
- **Coverage:** Manufacturing defects in materials and workmanship.
- **Exclusions:** Damage caused by improper installation, misuse, abuse, accidents, modifications, or normal wear and tear.

For warranty claims or technical support, please contact classy leaves customer service through the retailer where the product was purchased. Please have your purchase receipt and product model information ready.

