

KODAK D600

KODAK Dock ERA Plus 4PASS Instant Photo Printer User Manual

Model: D600

Introduction	What's in the Box	Setup	Operating Instructions	Maintenance	Troubleshooting
		Specifications	Warranty & Support		

1. INTRODUCTION

The KODAK Dock ERA Plus 4PASS Instant Photo Printer offers a convenient way to print 4x6 inch photos directly from your mobile devices. Utilizing 4PASS technology, it produces high-quality, durable prints that are fingerprint-proof and water-resistant. This printer supports both docking and wireless Bluetooth connections, making it versatile for use at home, school, or on the go. It also features the ability to charge your device while docked.

This manual provides detailed instructions for setting up, operating, and maintaining your KODAK Dock ERA Plus printer to ensure optimal performance and longevity.



Figure 1.1: KODAK Dock ERA Plus Instant Photo Printer.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- KODAK Dock ERA Plus Photo Printer
- Power Adapter
- Power Cord
- Quick Start Manual
- Lightning Adapter (for older iPhone models)
- Initial Ink Cartridge + 10 sheets of photo paper
- 80 sheets of photo paper + Ink Cartridge Refill (included in this bundle)

KODAK

The **Essential** Cartridge Bundle for Your Kodak Moments



① Power Adapter

② Power Cord

③ Quick Start Manual

④ Lightning Adapter

⑤ Printer

⑥ Initial Ink Cartridge + 10 sheets

⑦ 80 sheets
+ Ink Cartridge Refill

Figure 2.1: Package Contents.

3. SETUP

3.1 Power Connection

Connect the power adapter to the printer's DC 24V input port and plug it into a wall outlet. The power indicator light on the printer will illuminate.

3.2 Loading the Cartridge and Paper

The KODAK Dock ERA Plus uses an integrated cartridge that contains both the ink ribbon and photo paper. Follow these steps to load it:

1. Open the cartridge compartment on the side of the printer.
2. Insert the new cartridge into the slot, ensuring it clicks into place.

3. Open the paper tray cover.
4. Place the photo paper stack into the tray with the glossy side facing up. Ensure the paper is aligned correctly.
5. Close the paper tray cover securely.



Figure 3.1: Paper Loading Steps.

Your browser does not support the video tag.

Video 3.1: Introducing Dock ERA Photo Printer. This video provides a visual overview of the printer's features and basic setup, including cartridge and paper loading.

3.3 App Installation and Device Connection

Download the "KODAK Photo Printer" app from your device's app store (available on Apple App Store and Google Play Store). Once installed, you can connect your device via Bluetooth or by docking it directly:

- **Bluetooth Connection:** Open the app, enable Bluetooth on your device, and select "KODAK Dock ERA" from the list of available devices.
- **Direct Docking:** Use the appropriate adapter (Lightning or USB-C) to dock your smartphone directly onto the printer. This also allows for simultaneous charging.

Dock Printer

Bluetooth Printer

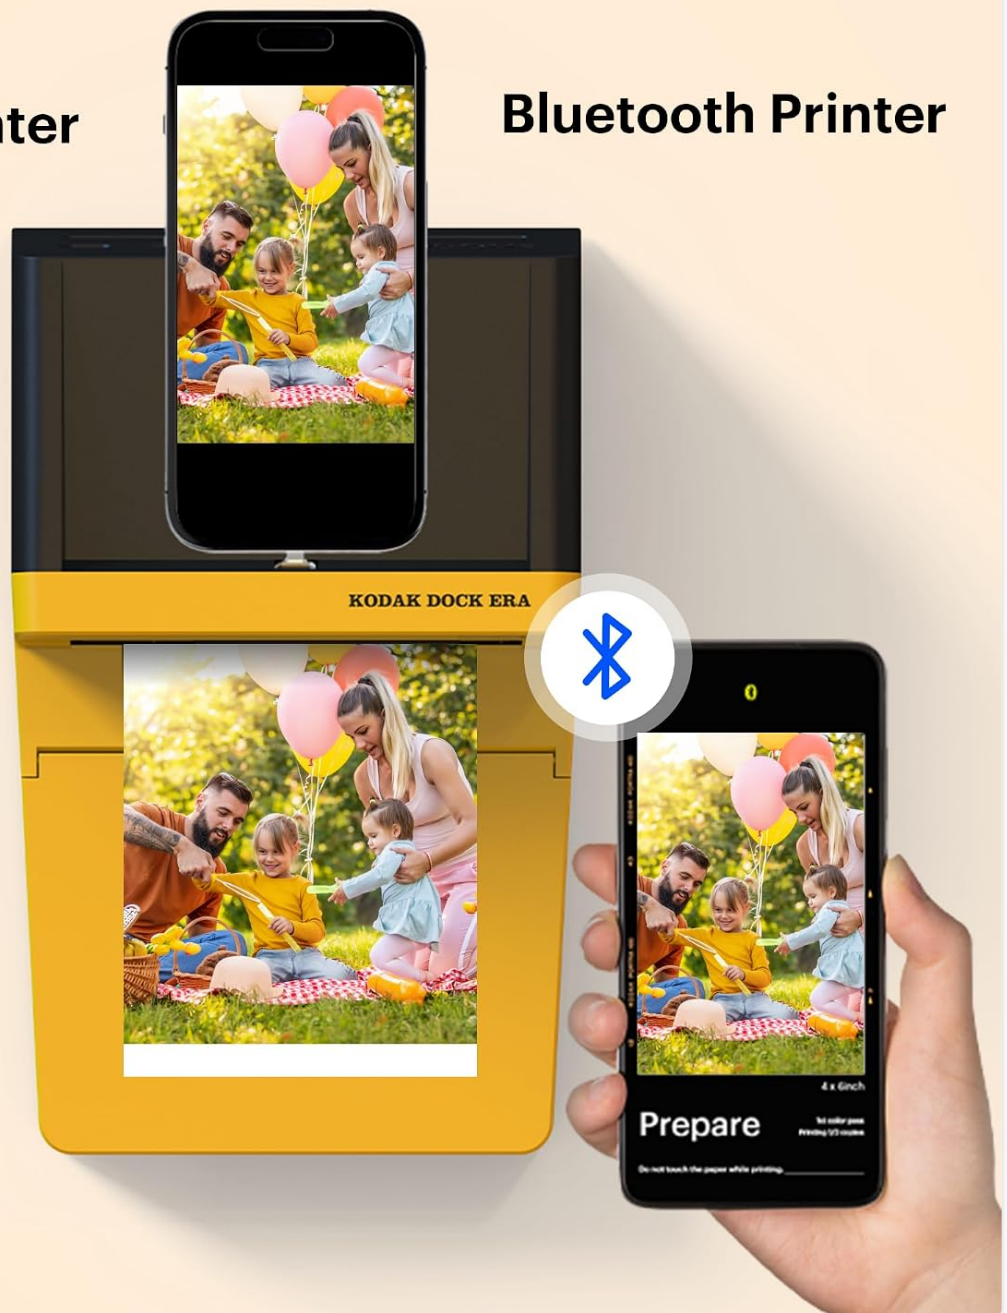


Figure 3.2: Docking vs. Bluetooth Connection.

Print memories, Save phone battery!



Figure 3.3: Smartphone Charging while Docked.

4. OPERATING INSTRUCTIONS

4.1 Selecting and Editing Photos

Once connected, open the KODAK Photo Printer app. You can select photos from your device's gallery. The app provides basic editing features such as cropping, adjusting brightness, and applying filters before printing.

Your browser does not support the video tag.

Video 4.1: How to use Kodak Photo Printer App Dock ERA. This video demonstrates navigating the app, selecting photos, and initiating the print process.

4.2 Choosing Photo Type: Border or Borderless

The printer supports both border and borderless 4x6 inch prints. You can select your preferred option within the app:

- **Border Prints:** Ideal for adding notes or a classic photo album look.
- **Borderless Prints:** Maximizes the image area for a modern, full-bleed appearance.

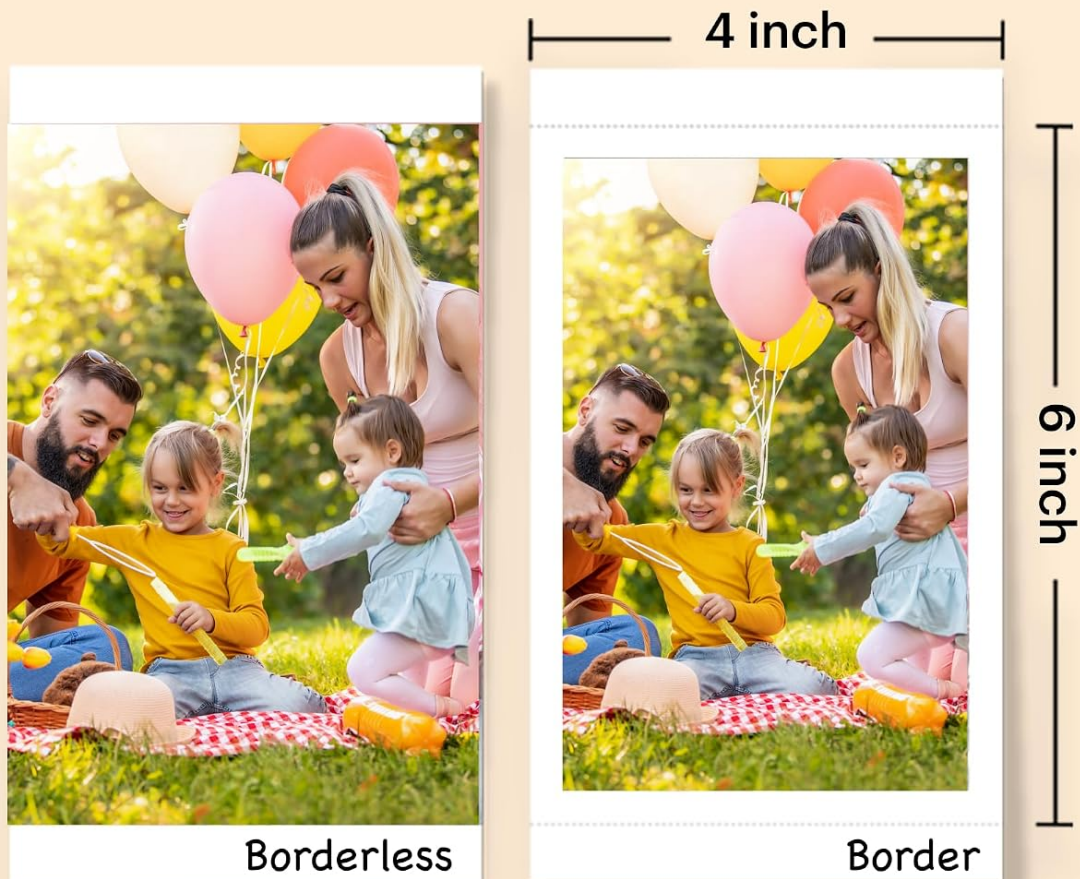


Figure 4.1: Border vs. Borderless Photo Options.

4.3 Printing Process (4PASS Technology)

The KODAK Dock ERA Plus uses 4PASS (Dye Sublimation) technology, which applies colors in successive layers (Yellow, Magenta, Cyan) and finishes with a protective laminating layer. This process ensures vibrant, long-lasting, fingerprint-proof, and water-resistant prints.

During printing, the paper will pass through the printer multiple times as each color layer is applied. Do not touch the paper until the printing and laminating process is complete.

4PASS Superior Image Quality



Figure 4.2: 4PASS Superior Image Quality.

5. MAINTENANCE

5.1 Replacing the Cartridge

When the ink ribbon or paper runs out, the cartridge will need to be replaced. New cartridges are available for purchase separately. Follow the loading instructions in Section 3.2 to replace the cartridge.

5.2 Cleaning the Printer

To maintain print quality, periodically clean the exterior of the printer with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Do not attempt to clean the internal components unless specifically instructed by customer support.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer not turning on.	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to the printer and a working power outlet.
Cannot connect via Bluetooth.	Bluetooth is off on device or printer is not in pairing mode.	Ensure Bluetooth is enabled on your device and the printer. Restart both devices if necessary.
Poor print quality (streaks, faded colors).	Cartridge low on ink or damaged. Paper loaded incorrectly.	Replace the cartridge. Ensure paper is loaded glossy side up and correctly aligned.
Paper jam.	Paper loaded incorrectly or foreign object in paper path.	Carefully remove any jammed paper. Ensure paper is loaded correctly.

7. SPECIFICATIONS

Feature	Detail
Model Name	D600
Product Dimensions	8"D x 10"W x 8"H
Item Weight	1.94 pounds (0.88 Kilograms)
Connectivity Technology	Bluetooth
Printing Technology	Dye Sublimation (4PASS)
Maximum Media Size	4 x 6 inch
Maximum Color Print Resolution	600 dpi
Compatible Devices	Android devices, iPhone, iPad
Power Input	DC 24V

8. WARRANTY & SUPPORT

8.1 Limited Warranty

The KODAK Dock ERA Plus Photo Printer comes with a limited one-year warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact KODAK customer support. Refer to the Quick Start Manual included in your package for contact information or visit the official KODAK Photo Printer website. Online resources and FAQs may also be available to help resolve common issues.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question