

COSTWAY B0CHYVGKPR

COSTWAY Folding Shopping Cart Instruction Manual

Model: B0CHYVGKPR

1. INTRODUCTION

Thank you for choosing the COSTWAY Folding Shopping Cart. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new utility cart. Please read all instructions carefully before use and retain this manual for future reference.

This portable cart is designed to assist with transporting groceries, laundry, and other items, featuring a sturdy metal frame, smooth-rolling wheels, and a removable waterproof Oxford cloth liner.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 120 lbs (54 kg). Overloading can cause damage to the cart and potential injury.
- **Assembly:** Ensure all components are correctly assembled and securely fastened before using the cart.
- **Folding Mechanism:** Keep hands and fingers clear of the folding and unfolding mechanisms to prevent pinching.
- **Stability:** Always place items evenly in the cart to maintain balance and prevent tipping.
- **Surface Use:** While designed for various surfaces, exercise caution on uneven terrain, stairs, or inclines.
- **Children:** This product is not a toy. Do not allow children to play with or ride in the cart.
- **Maintenance:** Regularly inspect the cart for any signs of wear or damage. Do not use if damaged.

3. PACKAGE CONTENTS

Please verify that all parts are present before beginning assembly:

- 1 x Folding Shopping Cart Frame with pre-attached rear wheels and liner
- 2 x Front Swivel Wheels
- 1 x Instruction Manual (this document)

4. ASSEMBLY AND SETUP

The COSTWAY Folding Shopping Cart is 95% pre-assembled. Only the two front wheels require attachment.

1. **Unfold the Cart Frame:** Gently pull the cart frame apart until it locks into its open position.
2. **Attach Front Wheels:** Locate the two front wheel sockets at the bottom front of the cart frame. Insert the stem of each front swivel wheel into a socket until it clicks securely into place. Ensure both wheels are firmly attached and can rotate freely.
3. **Verify Stability:** Once the front wheels are attached, gently push and pull the cart to ensure all four wheels are stable and the frame is fully extended.



Image: The cart is 95% pre-assembled, requiring only the attachment of the two front wheels. Dimensions are shown for the unfolded and folded states.

5. OPERATING INSTRUCTIONS

5.1 Unfolding the Cart

To unfold the cart from its compact storage position, grasp the handle and gently pull the frame outwards until it fully extends and locks into place. Ensure all four support bars are securely engaged.

5.2 Using the Removable Liner

The cart features a waterproof Oxford cloth liner. This liner can be easily removed for cleaning or to access items. It also includes a fitted cover to protect contents and ensure privacy. To remove, unhook the liner from the top edges of the frame. To re-attach, align the liner with the frame and secure its loops over the frame's top bars.



24 Gallon Inner Capacity
120 lbs Weight Capacity

Image: The cart's interior, highlighting its 24-gallon capacity and dimensions of 18.5" x 17" x 20".

5.3 Transporting Items

Place items evenly inside the liner, ensuring the total weight does not exceed 120 lbs. Use the ergonomic handle to push or pull the cart. The two universal front wheels provide 360-degree rotation for easy maneuverability, while the fixed rear wheels offer stability.



Image: A person confidently pushing the COSTWAY Folding Shopping Cart, filled with groceries, along an outdoor pathway.

4 Smooth Wheels

- Universal Front Wheels
- Fixed Rear Wheels



Image: A close-up view of the cart's wheels, illustrating the universal front wheels for maneuverability and fixed rear wheels for stability.

6. MAINTENANCE

- **Cleaning the Liner:** The Oxford cloth liner is removable and washable. Hand wash with mild soap and water, then air dry. Do not bleach or tumble dry.
- **Cleaning the Frame:** Wipe the metal frame with a damp cloth and mild detergent if necessary. Dry thoroughly to prevent rust.
- **Wheel Inspection:** Periodically check the wheels for debris, hair, or other obstructions that may hinder smooth movement. Ensure all wheels are securely attached.
- **Storage:** Store the cart in a clean, dry place away from direct sunlight and extreme temperatures.

7. STORAGE

The cart features a convenient folding design for compact storage.

1. **Empty the Cart:** Remove all contents from the liner.

2. **Fold the Frame:** Locate the folding release mechanisms (usually levers or buttons) on the frame. Engage these mechanisms and gently push the sides of the cart inwards until it collapses into its folded position.
3. **Secure:** Ensure the cart is fully folded and any locking clips are engaged to prevent accidental unfolding.

The folded dimensions are approximately 8"L x 10"W x 43"H, allowing it to be stored in small spaces, such as a car trunk or closet corner.

Folding Design



9lbs



Lightweight

Space-saving

Convenient

Image: The COSTWAY Folding Shopping Cart in its compact, folded state, easily fitting into a car trunk for convenient transport and storage.

8. TROUBLESHOOTING

- **Cart not unfolding/folding smoothly:** Check for any obstructions in the folding mechanism. Ensure the frame is clean and free of debris. Apply a small amount of silicone lubricant to moving parts if necessary.
- **Wheels not rolling smoothly:** Inspect wheels for tangled hair, string, or other debris. Clean the wheel axles. Ensure the front wheels are fully inserted and locked into their sockets.
- **Cart feels unstable:** Verify that the cart frame is fully extended and locked into place. Ensure items are distributed evenly within the liner and the weight limit is not exceeded.

9. SPECIFICATIONS

Feature	Specification
Unfolding Dimension (L x W x H)	26" x 18" x 37"
Folding Dimension (L x W x H)	8" x 10" x 43"
Inner Dimension (L x W x H)	18.5" x 17" x 20"
Net Weight	9 lbs
Weight Capacity	120 lbs
Capacity	24 Gallon
Material	Oxford Cloth, Metal
Number of Wheels	4 (2 universal front, 2 fixed rear)

10. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact COSTWAY customer service. Refer to your purchase documentation for specific contact details or visit the official COSTWAY website.

Related Documents - B0CHYVGKPR

	<p>COSTWAY TY576039 Foldable Outdoor Cart User Manual</p> <p>User manual for the COSTWAY TY576039 Foldable Outdoor Cart, providing setup instructions, safety warnings, product specifications, package contents, and folding guide.</p>
---	--



COSTWAY Golf Trolley User Manual: Assembly, Maintenance, and Folding Instructions

Costway TH10081 Folding Hand Truck Assembly and Safety Manual

Costway 3-Tier Rolling Utility Cart User Manual

Costway HU10964 Folding Bed with Mattress Assembly Instructions

Step-by-step assembly guide and safety information for the Costway HU10964 Folding Bed with Mattress. Includes parts list, hardware details, and important usage warnings.