

## SCHNEIDER SCDI30M

# SCHNEIDER Domino Induction Hob SCDI30M

## User Manual

Model: SCDI30M


### 1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before installing or using your SCHNEIDER Domino Induction Hob SCDI30M. Keep this manual for future reference.

- **Electrical Safety:** Ensure the hob is correctly installed by a qualified electrician and connected to a suitable power supply. Do not operate with wet hands.
- **Heat and Burns:** The hob surface will become hot during and after use. Do not touch hot surfaces. Use oven mitts.
- **Ventilation:** Ensure adequate ventilation around the hob as per installation instructions to prevent overheating.
- **Cookware:** Only use induction-compatible cookware. Non-compatible cookware will not heat.
- **Children and Pets:** Keep children and pets away from the hob during operation and while it is cooling down.
- **Cleaning:** Always disconnect the power supply before cleaning. Allow the hob to cool completely.

### 2. PRODUCT OVERVIEW

The SCHNEIDER Domino Induction Hob SCDI30M is a compact and efficient cooking solution featuring two induction zones with precise knob controls. Its total power output of 3500 watts ensures rapid heating and uniform cooking.

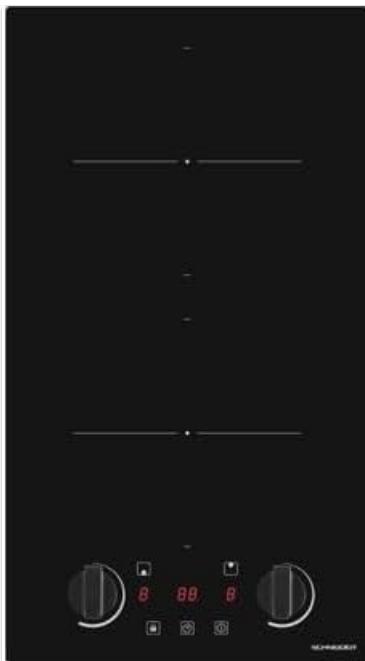


*Image 1: Front view of the SCHNEIDER Domino Induction Hob SCDI30M, showing its sleek black glass surface and two control knobs at the bottom.*

## **Key Features:**

- Domino induction hob design
- Two cooking zones with individual boosters
- Total power output of 3500 Watts
- Compact dimensions: 28.8 cm (width) x 52 cm (depth)
- Intuitive knob controls for precise temperature adjustment
- 9 cooking levels per zone
- Integrated timer function

## **3. INSTALLATION AND SETUP**

Installation of the SCHNEIDER Domino Induction Hob SCDI30M should only be performed by a qualified professional to ensure electrical safety and proper ventilation.

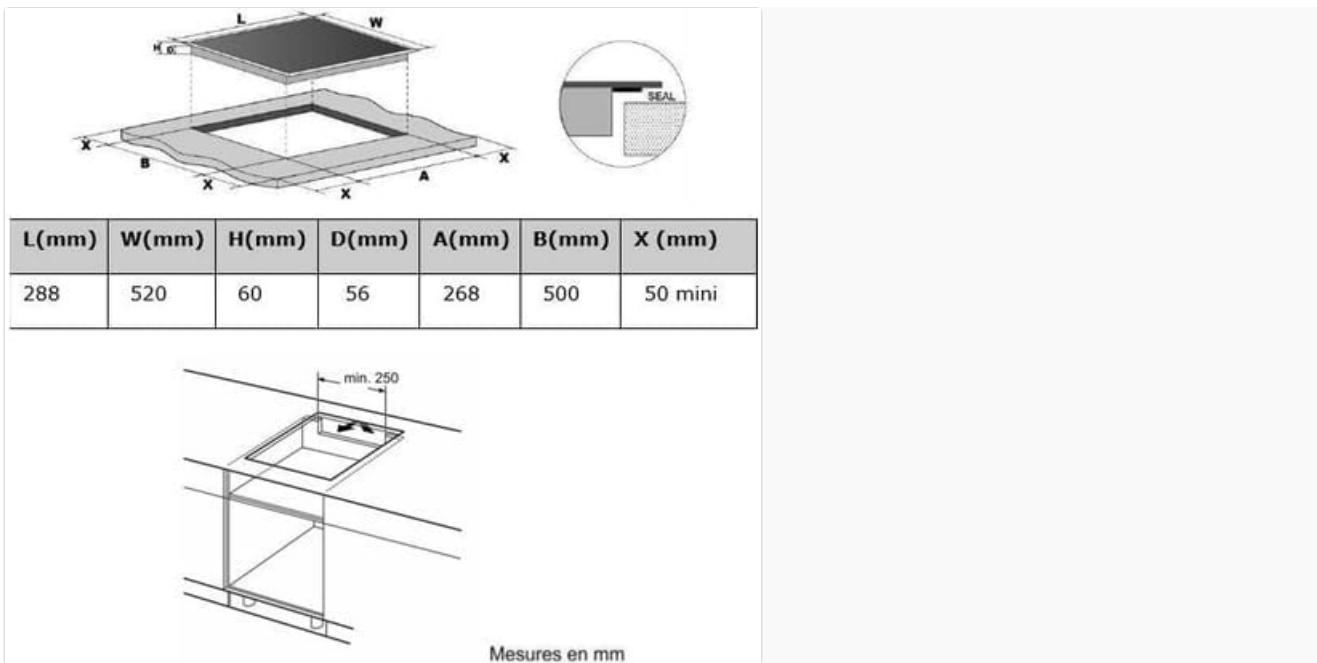

*Image 2: Technical drawing showing the dimensions for the hob and the required cutout in the countertop, with measurements in millimeters.*

## Cutout Dimensions (in mm):

Dimension	Value (mm)
Hob Length (L)	288
Hob Width (W)	520
Hob Height (H)	60
Cutout Depth (D)	56
Cutout Length (A)	268
Cutout Width (B)	500
Minimum Clearance (X)	50

Ensure a minimum clearance of 250mm below the hob for proper ventilation, as indicated in the diagram. The hob is designed for flush mounting with a seal to prevent liquid ingress.

## 4. OPERATING INSTRUCTIONS

The SCHNEIDER Domino Induction Hob SCIDI30M is controlled via two intuitive rotary knobs, one for each cooking zone.

### 4.1 Turning On/Off and Adjusting Power

1. Place an induction-compatible pan on the desired cooking zone.
2. Turn the corresponding control knob clockwise to activate the zone and select a power level from 1 to 9. The display will show the selected level.
3. To turn off a zone, turn its knob counter-clockwise until the display turns off.

## 4.2 Booster Function

Each cooking zone is equipped with a booster function for rapid heating. This provides direct access to maximum power.

- To activate the booster, turn the knob past level 9 to the 'B' (Booster) setting.
- The booster will operate for a set period or until manually deactivated, providing intense heat for boiling water quickly or searing.
- To deactivate, simply turn the knob back to a numbered power level.

## 4.3 Timer Function

The integrated timer allows you to set a cooking duration for precise results.

- While a cooking zone is active, press the timer button (usually indicated by a clock icon).
- Use the +/- buttons or turn the knob (depending on model specifics) to set the desired cooking time.
- Once the time expires, the cooking zone will automatically switch off, and an audible signal may sound.

## 4.4 Suitable Cookware

Induction hobs require cookware with a magnetic base. Test your cookware by placing a magnet on the bottom; if it sticks, it's compatible.

- Compatible materials include cast iron, enameled steel, and stainless steel with a magnetic base.
- Avoid glass, ceramic, aluminum, copper, or non-magnetic stainless steel cookware.

## 5. MAINTENANCE AND CLEANING

Regular cleaning will keep your SCHNEIDER Domino Induction Hob in optimal condition.

- **Before Cleaning:** Always ensure the hob is switched off and has completely cooled down. Disconnect from the power supply if possible.
- **Daily Cleaning:** For light spills and general cleaning, wipe the glass surface with a soft cloth dampened with warm soapy water. Dry thoroughly with a clean, soft cloth.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob scraper (held at a shallow angle) to gently remove residue, followed by a ceramic hob cleaner.
- **Avoid:** Do not use abrasive sponges, scouring pads, harsh chemical cleaners, or steam cleaners, as these can damage the glass surface.
- **Control Knobs:** The control knobs can usually be pulled off for cleaning. Wash them in warm soapy water, dry, and reattach.

## 6. TROUBLESHOOTING

If you encounter issues with your hob, refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Hob does not turn on	No power supply; Child lock activated; Overheating protection	Check power connection; Deactivate child lock (if applicable); Allow hob to cool down.
Cooking zone not heating	Non-compatible cookware; Pan not centered; Pan too small/large	Use induction-compatible cookware; Center pan on zone; Use appropriate pan size.
Display shows an error code (e.g., 'E' followed by numbers)	Specific internal fault or condition	Refer to the specific error code in a more detailed manual (if available) or contact customer service. Try resetting power.
Unusual noise during operation	Normal fan noise; Cookware vibration	A low hum or fan noise is normal. Some cookware may vibrate slightly. This is not a fault.

If the problem persists after attempting these solutions, please contact SCHNEIDER customer support.

## 7. SPECIFICATIONS


Feature	Specification
Brand	SCHNEIDER
Model	SCDI30M
Type of Hob	Induction
Number of Cooking Zones	2
Total Power Output	3500 Watts
Control Type	Knob controls
Cooking Levels	9 per zone
Booster Function	Yes, on both zones
Timer Function	Integrated
Material	Glass
Dimensions (W x D)	28.8 cm x 52 cm
Power Source	Electric cable

## 8. WARRANTY AND SUPPORT

Your SCHNEIDER Domino Induction Hob SCDI30M comes with a manufacturer's commercial warranty of 2 years. For warranty claims, technical support, or spare parts inquiries, please contact SCHNEIDER customer service. Keep your proof of purchase for warranty validation.

**Note:** Information regarding the availability of spare parts is not provided in the product details. Please contact SCHNEIDER directly for such inquiries.

## Documents - SCHNEIDER – SCIDI30M

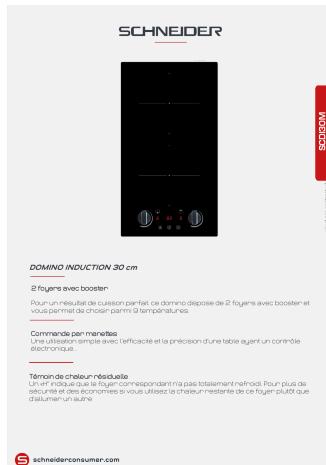

### [\[pdf\] Dimension Guide](#)

Présentation PowerPoint Mathieu Touron Fiche technique Domino induction SCHNEIDER SCIDI30M U Techno fr u techno media 66 41 f5 1694539648 |||

**SCDI30M** visuel non contractuel DOMINO INDUCTION 30 cm 2 foyers avec booster  
Pour un résultat de cuisson parfait, ce domino dispose de 2 foyers avec booster et vous permet de choisir parmi 9 températures. Commande par manettes Une utilisation simple avec l'efficacité et la précision d'une table ayant un contrôle électronique

lang:fr score:22 filesize: 254.52 K page\_count: 2 document date: 2023-04-26



### [Schneider SCIDI30M Induction Cooktop User Manual](#)

Comprehensive user manual for the Schneider SCIDI30M induction cooktop, covering safety instructions, installation, usage, and maintenance. Learn how to operate your induction cooktop safely and efficiently.

lang:fr score:20 filesize: 1.7 M page\_count: 173 document date: 2023-06-16



### [\[pdf\]](#)

SCHNEIDER CUISINISTE 2023 EN schneiderconsumer app 2021 07 |||

Built-in and freestanding appliances Built-in and freestanding appliances Eryday For a beautiful ... W, Booster 2,600 W 180 mm x180 mm 1,500 W, Booster 2,000 W 56 58 SCTI9528N3 900 520 64 SCIDI30N1 **SCDI30M** 288 50 50 490 870 500 50 50 46 SCTGI640S 520 590 520 75 64 17 17 min 100 268...

lang:en score:11 filesize: 15.91 M page\_count: 176 document date: 2023-07-11



[\[pdf\]](#)

SCHNEIDER CUISINISTE 2023 NL web schneiderconsumer app sites 2 11 |||  
Elektrische huishoudtoestellen vrijstaand inbouw Elektrische huishoudtoestellen  
vrijstaand inb ... nctie 50 490 50 50 560 50 50 490 50 50 560 50 50 490 50 50 740 50  
44 45 Domino inductie **SCDI30M** 299 \* 30 CM KNOPPEN TIMER AANDUIDING  
RESTWARMTE Belangrijkste kenmerken 2 inductiekoo...  
lang:nl **score:10** filesize: 13.78 M page\_count: 89 document date: 2023-11-16



[\[pdf\]](#)

SCHNEIDER CUISINISTE 2023 FR web schneiderconsumer app sites 2 11 |||  
lectromnager intgrable et pose-libre \* Les prix indiqués ont un caractre uniquement  
indicatif, il a ... 50 490 50 560 50 490 50 560 50 490 50 740 50 50 50 50 50 44 45  
Domino induction **SCDI30M** 299 \* 30 CM MANETTES MINUTEUR TEMOIN  
CHALEUR RSIDUELLE Caractristiques principales 2 ...  
lang:fr **score:10** filesize: 13.87 M page\_count: 89 document date: 2023-11-16