

[Manuals.plus](#) /

› [JEPEErzb](#) /

› JEPEErzb C9 Mini Portable Thermal Printer User Manual

JEPEErzb C9

JEPEErzb C9 Mini Portable Thermal Printer User Manual

Model: C9

1. PRODUCT OVERVIEW

The JEPEErzb C9 Mini Portable Thermal Printer is a compact, inkless printing device designed for convenience and versatility. It connects wirelessly via Bluetooth to your iOS or Android smartphone, allowing you to print photos, labels, memos, and various templates directly from a dedicated application. This printer utilizes thermal paper, eliminating the need for ink cartridges or toner. Its portable design and rechargeable battery make it ideal for on-the-go use.

Image: Overview of the JEPEErzb C9 Mini Portable Thermal Printer's key features, including its inkless operation, free app control, fast Bluetooth connection, clear print quality, rechargeable battery, and user-friendly design.

Key Features:

- **Inkless Thermal Printing:** No need to purchase ink or toner.
- **Bluetooth 4.0 Connectivity:** Seamless wireless connection to iOS and Android devices.
- **High Resolution:** 203dpi for clear black and white images.
- **Versatile Application:** Print photos, diaries, memos, shopping lists, study notes, forms, emojis, QR codes, and web pages.
- **Long-lasting Battery:** Built-in 1200mAh rechargeable battery for extended use.
- **Compact and Portable:** Small size (3.5D x 8W x 11H cm) for easy carrying.
- **Included Paper:** Comes with 8 rolls of thermal printing paper (5 white thermal paper + 3 adhesive colorful thermal paper).

2. SETUP GUIDE

2.1 Unboxing and Initial Charge

Upon unboxing, ensure all components are present: the printer unit, a USB charging cable, and the included thermal paper rolls. Before first use, fully charge the printer using the provided USB cable. The LED indicator will show charging status.

Easy to Use



Step1:
Turn on the printer.
Long press the switch to turn on the printer.




Step2:
Open the Case.
Press the button and the case will be open automatically.




Step3:
Install the paper roll.
Place the printing paper in the correct direction.(- Place note two points. First, leave 1-3mm of the paper before closing the case to print. Secondly, if printing is not possible, please replace the other side of the paper as only one side can be printed.)



Step4:
Download "Fun print" app.
IOS/Andriod.

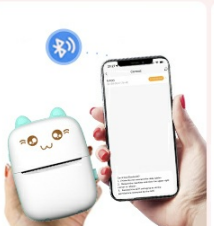

Step5:
Connect bluetooth on the app.
Please connect the bluetooth in the "Fun print", DO NOT connect in the phone setting.

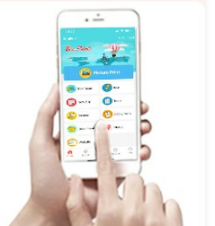

Step6:
Enjoy the fun of printing.
Massive materials.

Image: The printer connected via Bluetooth to a smartphone, illustrating its wireless capability and USB-C charging port.

2.2 Installing Thermal Paper

1. **Turn on the printer:** Long press the power switch to turn on the printer.
2. **Open the case:** Press the button on the side of the printer to open the paper compartment cover.
3. **Insert paper roll:** Tear off the green sticker from the paper roll. Ensure the printing side of the paper (usually smoother) is facing downwards. Align the paper roll with the notch inside the printer and insert it vertically.
4. **Position paper:** Pull out 1-2 cm of the paper from the printer slot before closing the cover.
5. **Close the cover:** Close the printer cover firmly until it clicks into place.



Image: A visual guide demonstrating the steps to install thermal paper into the printer, from opening the cover to pulling out the paper and closing the lid.

2.3 App Download and Bluetooth Connection

1. **Download the App:** Search for "Fun Print" in your device's app store (iOS or Android) and install it.
2. **Enable Bluetooth:** Ensure Bluetooth is enabled on your smartphone.
3. **Connect in App:** Open the "Fun Print" app. Do NOT connect the printer via your phone's Bluetooth settings directly. Instead, use the app's internal connection feature to pair with the printer.

3. OPERATING INSTRUCTIONS

3.1 Printing Images and Text

The "Fun Print" app offers a wide range of functions for printing. You can select images from your phone's gallery, type custom text, or choose from various templates available within the app.

- **Select Content:** Choose whether to print a photo, text, or a template from the app's main interface.
- **Edit/Adjust:** Use the app's editing tools to rotate, resize, crop, or apply filters to your images. For text, adjust font, size, and alignment.
- **Print:** Once your content is ready, tap the "Print" button in the app. The printer will quickly produce your thermal

printout.



Image: The "Fun Print" application interface, showcasing a wide array of free templates and functionalities for printing diverse content.

3.2 Using Sticker Paper

The printer is compatible with adhesive thermal paper, allowing you to create custom stickers. After printing, simply peel off the backing of the thermal paper to reveal the adhesive side and stick it onto your desired surface.

4. MAINTENANCE

4.1 Battery Care

To prolong the battery life of your printer, ensure it is charged regularly, especially if it will not be used for an extended period. Avoid completely draining the battery frequently.

4.2 Cleaning the Print Head

If print quality degrades or lines appear on your printouts, the print head may need cleaning. Gently wipe the print head with a soft, lint-free cloth slightly dampened with isopropyl alcohol. Ensure the printer is turned off and completely dry before resuming use.

Your browser does not support the video tag.

Video: A seller-provided FAQ video for the PM290C model, which includes instructions on how to clean the print head to improve print quality.

5. TROUBLESHOOTING

5.1 Printer Cannot Connect to Bluetooth

- Ensure Bluetooth is enabled on your smartphone.
- Make sure you are connecting through the "Fun Print" app, not directly through your phone's Bluetooth settings.
- Restart both your phone and the printer, then try connecting again.
- Check the app permissions to ensure Bluetooth access is granted.

5.2 Pictures Printed in Light Colors

- In the "Fun Print" app's print settings, adjust the "Density" setting. A larger value typically results in a clearer, darker image.
- Ensure the print head is clean (refer to Section 4.2).
- Verify that you are using genuine thermal paper for optimal print quality.

5.3 No Response After Clicking "Print"

- Ensure the paper roll is correctly installed and fully covers the roller inside the printer. Reopen the paper bin, adjust the paper, and close it again.
- Check the printer's battery level.
- Confirm the Bluetooth connection is active within the app.

Your browser does not support the video tag.

Video: A seller-provided instructional video for the PM230 model, offering guidance on initial use and common troubleshooting steps.

6. SPECIFICATIONS

Feature	Detail
Model	C9
Brand	JEPEERbz
Product Dimensions	3.5D x 8W x 11H Centimetres
Item Weight	358 Grams
Connectivity Technology	Bluetooth 4.0
Printing Technology	Thermal
Printer Output	Monochrome
Maximum Print Resolution	203 dpi (Black and White)
Maximum Media Size	57 x 25 mm (Roll)
Compatible Devices	Smartphones, Tablets (Android 4.0+, iOS 8.0+)
Battery Capacity	1200mAh Lithium Ion
Special Features	Wireless, Inkless, Portable

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact JEPEErz customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.