



[Manuals.plus](#) /

> [Prominence Home](#) /

> Prominence Home Alvina 42-Inch Ceiling Fan User Manual

Prominence Home 80029-01

Prominence Home Alvina 42-Inch Ceiling Fan User Manual

Model: 80029-01

1. IMPORTANT SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product. Failure to follow these instructions could result in electric shock, fire, or serious personal injury.

- Disconnect power at the main circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes.
- Ensure the installation site allows the fan blades to rotate without obstruction.
- The fan must be mounted with a minimum of 7 feet (2.1 meters) clearance from the trailing edge of the blades to the floor.
- Do not operate the fan if any part is damaged.
- Do not insert objects into the path of the fan blades.

2. PACKAGE CONTENTS

Verify that all components listed below are included in your package. If any parts are missing or damaged, contact customer support.

- Motor Housing
- Blade Irons (5)
- Blades (5)
- Canopy
- Light Kit (Frosted Globe, LED Bulb)
- Pull Chains (2)
- Hardware Pack (screws, washers, wire nuts, etc.)

3. INSTALLATION AND SETUP

This section provides general guidance for installing your Prominence Home Alvina ceiling fan. For detailed

step-by-step instructions, refer to the separate installation guide provided with your product.

Mounting the Fan

The Alvina fan is designed for flush mount installation, ideal for rooms with low ceilings. Ensure your electrical box is securely mounted and capable of supporting the fan's weight (approximately 10.5 pounds).

1. Turn off power at the circuit breaker.
2. Attach the mounting bracket to the electrical outlet box.
3. Carefully lift the fan motor assembly and connect the electrical wires according to local codes (typically black to black, white to white, and green/bare copper to ground).
4. Secure the motor housing to the mounting bracket.
5. Attach the fan blades to the blade irons, then secure the blade irons to the motor.
6. Install the light kit, including the LED bulb and frosted globe.



This image displays the Prominence Home Alvina 42-inch ceiling fan. It features a sleek satin nickel motor housing and blade holders, complemented by five reversible blades with a dark wood-grain finish on one side and a lighter wood-grain finish on the other. A frosted white globe light kit is integrated at the center, providing soft illumination. Two pull chains, one for fan speed and the other for light control, are visible with decorative wooden toggles.

4. OPERATING INSTRUCTIONS

Your Prominence Home Alvina ceiling fan is operated using two traditional pull chains.

Fan Speed Control

One pull chain controls the fan speed. Pull the chain repeatedly to cycle through the available speed settings:

- High
- Medium
- Low
- Off

Light Control

The second pull chain controls the integrated LED light kit. Pull the chain to turn the light on or off.

Reversible Motor Function

The fan features a reversible motor for year-round comfort. A slide switch on the fan's motor housing allows you to change the direction of blade rotation.

- **Summer Mode (Counter-clockwise rotation):** Pushes air downward, creating a cooling breeze.
- **Winter Mode (Clockwise rotation):** Pulls air upward, circulating warm air trapped near the ceiling.

To change the direction, ensure the fan is off and the blades have stopped rotating before moving the slide switch.

5. MAINTENANCE

Regular maintenance will help prolong the life and performance of your ceiling fan.

- **Cleaning:** Use a soft brush or lint-free cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Light Bulb Replacement:** The fan uses an A15 / E26 LED light bulb. Ensure power is off before attempting to replace the bulb.
- **Tightening Screws:** Periodically check all screws on the fan and light kit to ensure they are tight. Loose screws can cause noise or wobble.

6. TROUBLESHOOTING

If you experience issues with your ceiling fan, consult the following common troubleshooting steps:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan	Check circuit breaker, wall switch, and wire connections.
Light does not work	Bulb is faulty or loose	Check bulb connection or replace bulb.
Fan wobbles	Loose blades or mounting hardware	Ensure all blade screws and mounting screws are tight. Check blade balance.
Noisy operation	Loose parts or motor issues	Tighten all screws. If noise persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Prominence Home
Model Name	Alvina
Part Number	80029-01
Size	42 Inch
Color	Nickel
Material	Glass, Stainless Steel
Style	Transitional
Installation Type	Flush Mount
Light Source Type	LED
Number of Light Sources	1
Wattage	8.5 watts
Voltage	120 Volts
Bulb Base	E26
Controller Type	Pull Chain
Indoor/Outdoor Usage	Indoor
Item Weight	10.45 pounds
Product Dimensions	23"L x 13"W x 12"H
Assembly Required	Yes
Certification	ETL Listed

8. WARRANTY AND SUPPORT

Prominence Home provides a limited lifetime warranty for this product. For specific details regarding your warranty coverage, please refer to the warranty information included with your purchase or visit the official Prominence Home website.

For technical assistance, replacement parts, or any questions not covered in this manual, please contact Prominence Home customer support. Contact information can typically be found on the product packaging or the brand's official website.