

[Manuals.plus](#) /

› [Midea](#) /

› Midea SV 5.14K14C Fully Integrated Dishwasher User Manual

Midea SV 5.14K14C

Midea SV 5.14K14C Fully Integrated Dishwasher User Manual

Model: SV 5.14K14C | Brand: Midea

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Midea SV 5.14K14C Fully Integrated Dishwasher. Please read this manual carefully before using the appliance to ensure safe and efficient operation.

2. PRODUCT OVERVIEW

The Midea SV 5.14K14C is a fully integrated 60cm dishwasher designed for seamless integration into your kitchen cabinetry. It offers 14 place settings, 8 washing programs, Wi-Fi connectivity, and an automatic door opening feature for enhanced drying.



Figure 2.1: Midea SV 5.14K14C Fully Integrated Dishwasher (furniture front not included).


3. SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your dishwasher. This model is designed for full integration, meaning it will be concealed behind a custom furniture front (not included).

3.1 Dimensions and Clearance

Ensure your kitchen cabinet space meets the required dimensions for installation. The dishwasher dimensions are 55 x 59.8 x 81.5 cm (Depth x Width x Height).

Produktabmessungen & Benötigte Maße für den Einbau

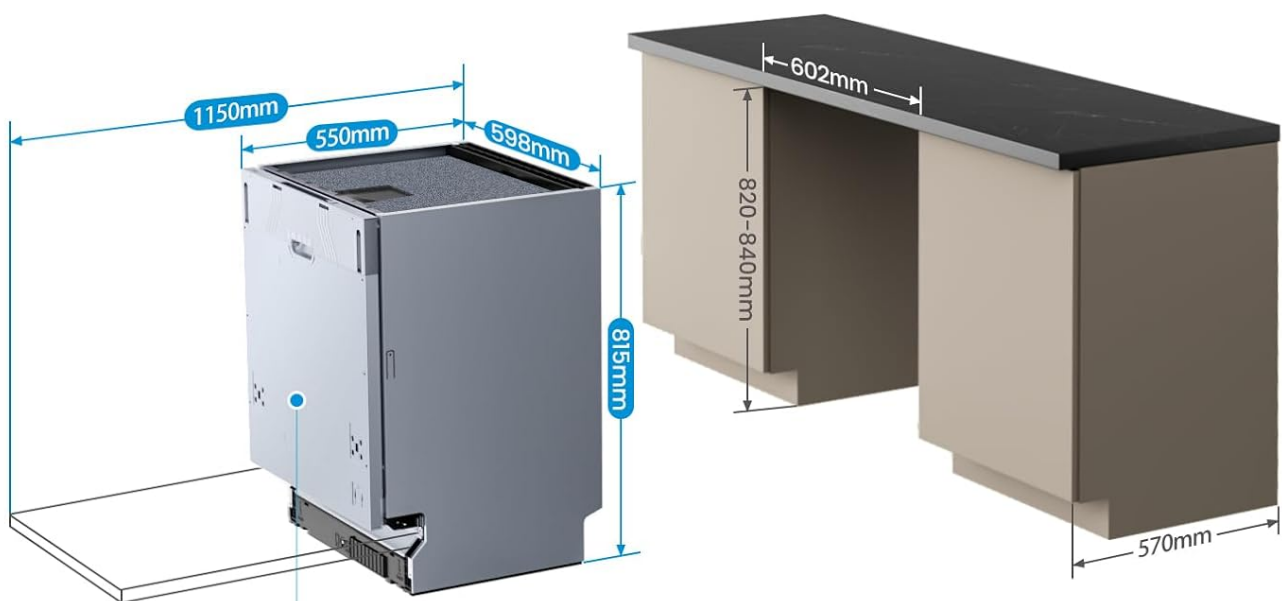

Lieferung ohne Möbelfront



Figure 3.1: Product dimensions and required installation measurements. Note that the furniture front is not included.

3.2 Water and Electrical Connections

Connect the dishwasher to a suitable water supply and electrical outlet (230V). Ensure all connections are secure and comply with local regulations. The appliance includes an Aquastop and overflow float switch for double protection against water damage.

Included components for installation: Drain Hose, Inlet Hose.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

The flexible racking system allows for efficient loading of up to 14 place settings. This includes a multifunctional cutlery basket, a height-adjustable upper basket, and foldable plate holders to accommodate large dishes, salad bowls, and various cooking utensils.

Verstellbarer Oberkorb



Figure 4.1: Flexible loading options with adjustable upper basket and capacity for 14 place settings.

4.2 Program Selection

Your Midea dishwasher offers 8 washing programs to suit various needs:

- **Auto:** Automatically adjusts wash cycle based on soil level.
- **HygieneCare+:** High-temperature wash (up to 72°C) for enhanced hygiene.
- **ECO:** Energy-efficient program.
- **58 Minute:** A quicker wash cycle.
- **Rapid:** For lightly soiled dishes.
- **Whisper:** Reduced noise level for quiet operation (44 dB).
- **Cloud Wash (Glass):** Specialized program for delicate glassware.
- **Cloud Wash (MachineCare+):** Program for cleaning the dishwasher itself.



Figure 4.2: Control panel displaying the 8 wash programs.

4.3 Automatic Door Opening

At the end of the wash cycle, the dishwasher door automatically opens to release moist air, facilitating more efficient drying and preventing water spots on your dishes. This function can be deactivated if desired.



Figure 4.3: Automatic door opening feature for enhanced drying.

4.4 Smart Home Connectivity (Home Connect App)

Utilize the Home Connect app to remotely select programs, start cycles, and monitor your dishwasher's status from anywhere. The app also allows for half-load washing (upper or lower basket only) and provides reminders for rinse aid and salt refills.

Your browser does not support the video tag.

Video 4.1: Demonstrates the Midea Fully Integrated Dishwasher's smart features, including app control, half-load function, and automatic door opening.

Your browser does not support the video tag.

Video 4.2: Overview of the 60 cm fully integrated Midea dishwasher, highlighting its invisible design, powerful cleaning, and efficiency.

5. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

5.1 Filter Cleaning

Periodically clean the filter sieve to prevent blockages and ensure optimal washing performance. The Home Connect app can provide reminders for this task.

5.2 Salt and Rinse Aid Refill

Ensure adequate levels of dishwasher salt and rinse aid. The Home Connect app will provide timely reminders when these need to be refilled.

Included components for maintenance: Salt Refill Funnel.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common solutions before contacting customer service.

- **Dishwasher not starting:** Check power supply, ensure the door is fully closed, and verify program selection.
- **Dishes not clean:** Ensure proper loading, check detergent dispenser, verify water temperature, and clean filters.
- **Water spots on dishes:** Check rinse aid level and adjust dosage if necessary.
- **Unusual odors:** Run a MachineCare+ program, clean filters, and ensure proper drainage.
- **Noise during operation:** Ensure dishes are loaded correctly and not obstructing spray arms. The Whisper program is available for quieter operation.

7. SPECIFICATIONS

Feature	Detail
Model Name	SV 5.14K14C
Form Factor	Fully Integrated
Capacity	14 Place Settings
Programs	8 (Auto, HygieneCare+, ECO, 58 min, Rapid, Whisper, Cloud Wash (Glass), Cloud Wash (MachineCare+))
Noise Level	44 dB
Energy Efficiency Class	C
Annual Energy Consumption	76 kWh per 100 cycles
Water Consumption	9.8 Liters (per cycle for ECO program)
Dimensions (D x W x H)	55 x 59.8 x 81.5 cm
Item Weight	34.5 Kilograms
Voltage	230V
Special Features	Adjustable Basket, Childproof Lock, Digital Display, Timer Delay, Leakage Protection, Automatic Door Opening, Wi-Fi (Home Connect)

Included
Components

User Manual, Salt Refill Funnel, Drain Hose, Inlet Hose, Cutlery Basket



Figure 7.1: Energy Efficiency Class C, requiring only 9.8 liters of water per cycle.

8. WARRANTY AND SUPPORT

Your Midea SV 5.14K14C Dishwasher comes with a standard warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Midea customer support.

For technical assistance, spare parts, or service inquiries, please visit the official Midea website or contact their authorized service centers. Always provide your model number (SV 5.14K14C) and serial number when seeking support.

Return Policy: This item can be returned within 30 days for a refund/replacement (seller: Amazon).

