

Seesii B0CJ2PQD3M

SEESII Cordless Electric Pole Saw Instruction Manual

Model: B0CJ2PQD3M

1. INTRODUCTION

Thank you for purchasing the SEESII Cordless Electric Pole Saw. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new tool. Please read these instructions carefully before use and retain them for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your pole saw.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury when using power tools.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the tool.
- **Wear Personal Protective Equipment (PPE):** Always wear safety glasses, hearing protection, gloves, and sturdy footwear. A hard hat is recommended for overhead work.
- **Keep Work Area Clear:** Ensure the area is free from bystanders, children, and pets. Remove any obstacles that could interfere with operation.
- **Avoid Dangerous Environments:** Do not use the pole saw in wet or damp conditions, or where flammable liquids or gases are present.
- **Secure Grip:** Always maintain a firm grip on the tool with both hands.
- **Proper Balance:** Maintain proper footing and balance at all times. Do not overreach.
- **Battery Safety:** Use only the specified battery pack and charger. Do not expose batteries to extreme temperatures or water.
- **Maintenance:** Regularly inspect the chain for sharpness and tension. Keep the tool clean and well-lubricated.
- **Unplug When Not in Use:** Remove the battery pack when not in use, before cleaning, or when changing accessories.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure you have received the following components. If any parts are missing or damaged, please contact customer support.

- Cordless Electric Pole Saw Unit
- Extension Pole
- Rechargeable Batteries (2x)
- Battery Charger
- Saw Chain
- Guide Bar
- Chain Scabbard
- Safety Gloves
- Safety Glasses
- Shoulder Strap
- User Manual



Image 3.1: Contents of the SEESII Cordless Electric Pole Saw package, including the saw unit, extension pole, two batteries, charger, chain, guide bar, scabbard, gloves, and safety glasses.

4. PRODUCT OVERVIEW

The SEESII Cordless Electric Pole Saw is designed for efficient pruning and cutting of branches. Key features include:

- **Adjustable Length:** The pole can be adjusted from 137cm to 270cm for reaching high branches.
- **Automatic Oiling System:** Ensures continuous lubrication of the chain and guide bar during operation.
- **Tool-less Chain Adjustment:** Easily adjust chain tension without additional tools.
- **Safety Lock Button:** Prevents accidental starting of the saw.
- **Adjustable Head Angle:** The saw head can be adjusted from 0-180 degrees for versatile cutting positions.
- **Shoulder Strap:** Provides support and reduces user fatigue during extended use.



Image 4.1: The SEESII pole saw demonstrating its adjustable length feature for high branch cutting.



Image 4.2: Close-up of the saw head showing the 0-180 degree angle adjustment button for flexible cutting.



Image 4.3: A user demonstrating the use of the shoulder strap for improved comfort and weight distribution.



Image 4.4: Visual representation of the automatic oiling function, tool-less chain adjustment knob, and the safety lock button.

5. SETUP

Follow these steps to assemble and prepare your pole saw for use.

1. **Attach the Saw Unit to the Extension Pole:** Align the saw unit with the extension pole and push them together until they click securely into place.
2. **Secure the Safety Lock:** Ensure the safety lock button on the pole is engaged to prevent accidental detachment.
3. **Insert Battery:** Fully charge the battery before first use. Insert a charged battery pack into the battery slot on the pole.
4. **Adjust Pole Length:** Loosen the locking mechanism on the extension pole, adjust to the desired length (137-270cm), and securely tighten the lock.
5. **Attach Shoulder Strap:** Connect the shoulder strap to the designated attachment points on the pole. Adjust the strap for comfortable weight distribution.
6. **Fill Chain Oil Reservoir:** Open the oil cap and fill the reservoir with appropriate chain lubricant. The automatic oiling system requires a full reservoir for proper function.
7. **Check Chain Tension:** Before each use, ensure the chain tension is correct. The chain should be snug but still able to be pulled freely around the guide bar by hand. Adjust using the tool-less adjustment knob if

necessary.



Image 5.1: Visual guide for assembling the pole saw, including attaching the saw unit, engaging the safety lock, inserting the battery, adjusting pole length, and using the shoulder strap.

6. OPERATION

Always wear appropriate PPE before operating the pole saw.

1. **Starting the Saw:** Press and hold the safety lock button, then squeeze the trigger to start the chain. Release the safety lock button once the saw is running.
2. **Cutting Technique:** Position the saw head against the branch. Allow the chain to reach full speed before making contact. Apply light, steady pressure. Avoid forcing the saw.
3. **Adjusting Head Angle:** Use the angle adjustment button on the saw head to set the desired cutting angle (0-180 degrees) for optimal reach and cutting efficiency.
4. **Using the Shoulder Strap:** The shoulder strap helps distribute the weight of the tool, making it easier to control and reducing strain during prolonged use.
5. **Overhead Cutting:** When cutting overhead, be aware of falling branches. Plan your cuts to ensure a safe falling path.
6. **Stopping the Saw:** Release the trigger to stop the chain. Always engage the safety lock when not actively cutting.



Image 6.1: The pole saw being used for high branch cutting and general pruning tasks, demonstrating its versatility.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your pole saw.

- **Chain Oiling:** Regularly check the chain oil reservoir and refill as needed. Use only recommended chain lubricant.
- **Chain Sharpening/Replacement:** A dull chain will not cut efficiently and can cause kickback. Sharpen the chain regularly or replace it when worn.
- **Cleaning:** After each use, clean the saw unit, guide bar, and chain. Remove sawdust, sap, and debris. Ensure ventilation openings are clear.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged. Charge batteries before long-term storage.
- **Guide Bar Maintenance:** Periodically clean the guide bar groove and check for burrs. Flip the guide bar regularly to ensure even wear.

8. TROUBLESHOOTING

If you encounter issues with your SEESII Cordless Electric Pole Saw, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Saw does not start	Battery not charged or improperly inserted; Safety lock not disengaged; Faulty switch.	Ensure battery is fully charged and correctly inserted. Press safety lock then trigger. If problem persists, contact support.
Chain does not cut efficiently	Dull chain; Incorrect chain tension; Chain installed backward.	Sharpen or replace chain. Adjust chain tension. Ensure chain is installed with cutting edges facing forward.
Chain stops during cutting	Overloading the motor; Low battery charge; Improper cutting technique.	Reduce cutting pressure. Recharge battery. Use proper cutting technique, avoid forcing the saw.
No chain oil flow	Oil reservoir empty; Oil port clogged; Malfunctioning oil pump.	Refill oil reservoir. Clean oil port. If problem persists, contact support.

9. SPECIFICATIONS

Technical details for the SEESII Cordless Electric Pole Saw.

- **Brand:** Seesii
- **Model:** B0CJ2PQD3M
- **Power Source:** Battery operated
- **Product Weight:** 0.7 kg
- **Chain Length:** 6 inches
- **Chain Speed:** 6 m/s
- **Adjustable Pole Length:** 137 cm - 270 cm
- **Head Angle Adjustment:** 0-180 degrees

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact SEESII customer service. Keep your purchase receipt as proof of purchase.