

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROBUD](#) /

› [ROBUD Play Kitchen Instruction Manual](#)

## ROBUD RB-WCF09

# ROBUD Play Kitchen Instruction Manual

Model: RB-WCF09

## INTRODUCTION

---

Thank you for choosing the ROBUD Play Kitchen. This wooden playset is designed to inspire imaginative play and provide a realistic kitchen experience for children aged 3 and up. Crafted from premium materials with a vintage American style, it features a sink, oven, stove, cabinet, and various kitchen essentials.

## SAFETY INFORMATION

---

Please read and understand all safety warnings before assembly and use.

- Adult supervision is required at all times during play.
- Suitable for children aged 3 years and up.
- Avoid exposing the playset to real heat sources or open flames.
- This product contains small parts that may pose a choking hazard for children under 3 years. Keep all small components out of reach of infants.
- Ensure all screws and fasteners are securely tightened during assembly and periodically check for looseness.
- Do not allow children to climb on the playset.

## WHAT'S IN THE BOX

---

The ROBUD Play Kitchen package includes the following components:

- Wooden Kids Play Kitchen Playset (unassembled)
- Assembly hardware (screws, dowels, etc.)
- Instruction manual (this document)
- Kitchen accessories:
  - 2 x Spice jars (P & S)
  - 1 x Eggplant (toy)
  - 1 x Carrot (toy)
  - 1 x Radish (toy)

- 1 x Spoon (toy utensil)
- 1 x Pasta Fork (toy utensil)
- 1 x Spatula (toy utensil)
- 1 x Pot (toy cookware)
- 1 x Pan (toy cookware)
- 1 x Fruit Basket (toy)
- 1 x Lid (for pot/pan)



Figure 1: Included Kitchen Accessories

## SETUP AND ASSEMBLY

The ROBUD Play Kitchen requires adult assembly. Please follow the detailed assembly instructions provided in the separate assembly guide included with your purchase. Ensure all parts are present before beginning assembly.

- Unpack all components and verify against the parts list in the assembly guide.
- Use a clean, flat surface for assembly to prevent scratching the parts.

- Follow the step-by-step diagrams carefully.
- Tighten all screws firmly but do not overtighten to avoid damaging the wood.
- Once assembled, ensure the kitchen is stable and all connections are secure before allowing children to play.



Figure 2: Assembled Play Kitchen Overview

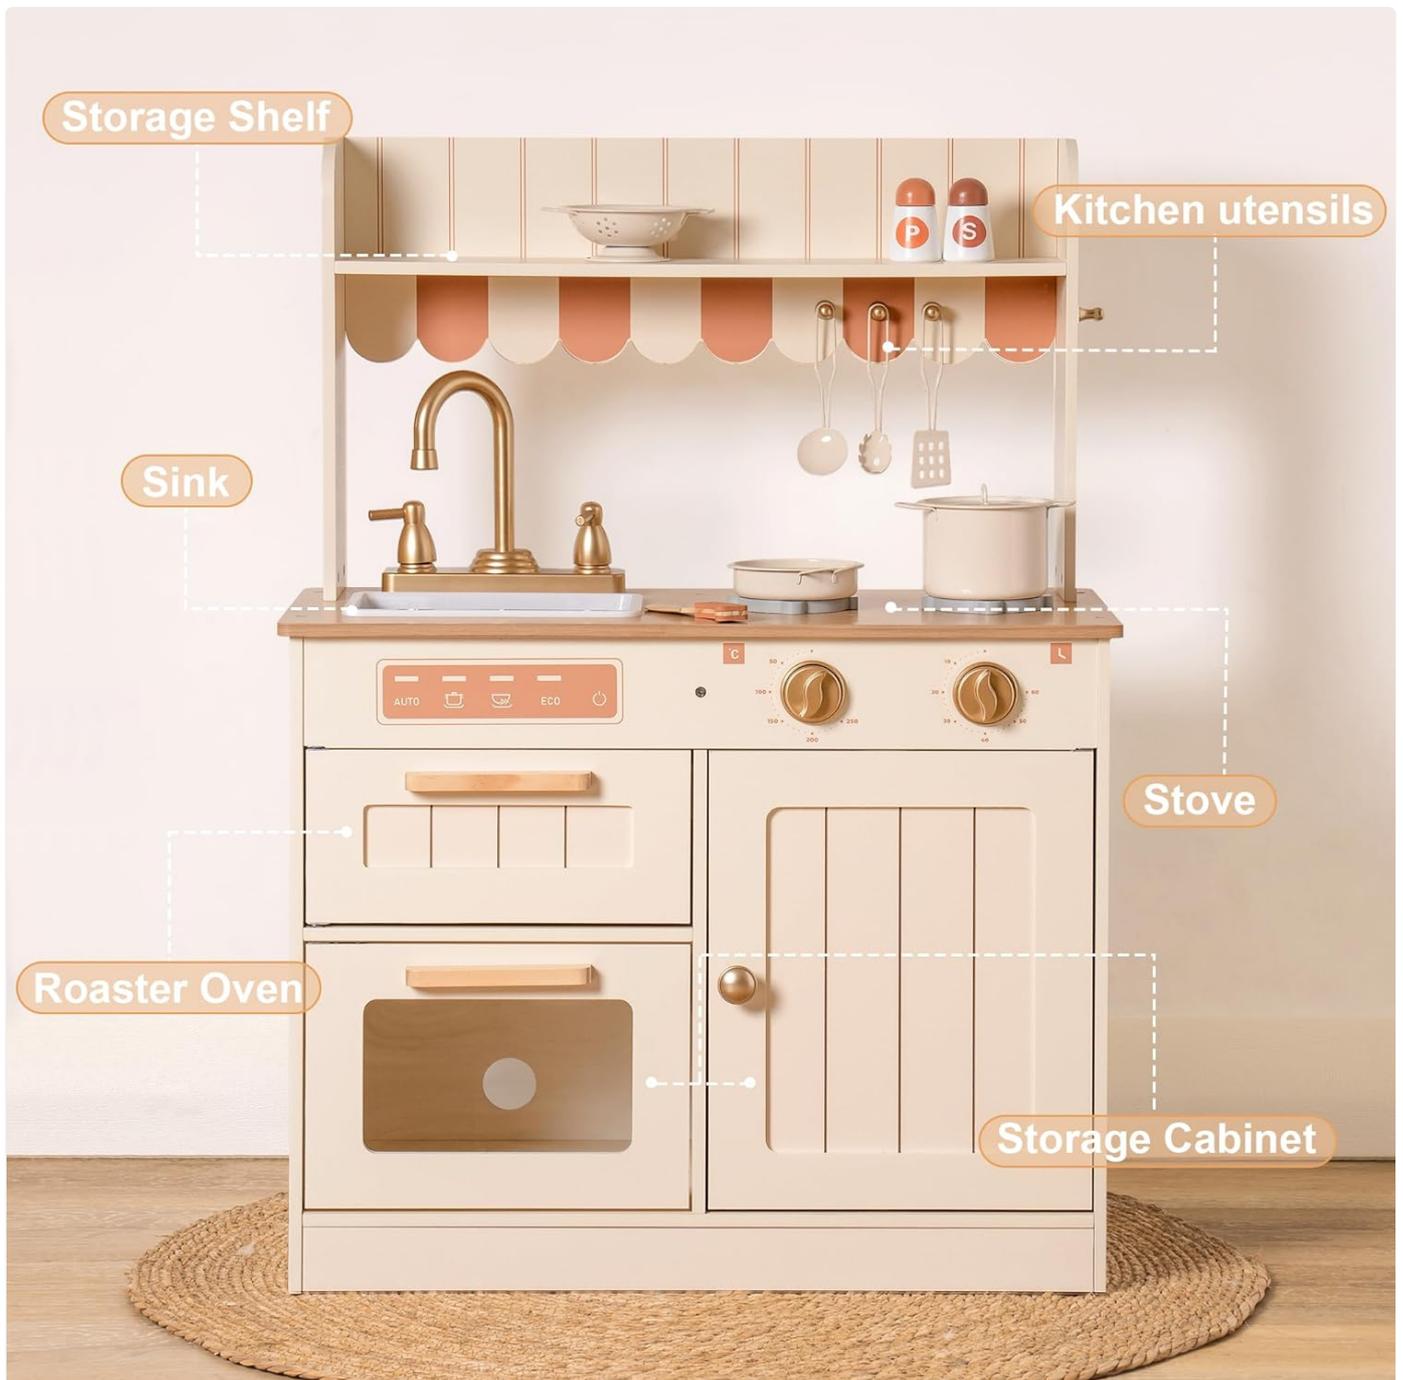


Figure 3: Key Components of the Play Kitchen

## OPERATING INSTRUCTIONS

---

The ROBUD Play Kitchen is designed for interactive and imaginative play. Here's how to use its various features:

### 1. Sink and Faucet

The golden faucet and handles are designed to mimic real kitchen faucets. The taps can rotate in any direction, allowing children to pretend to wash dishes or hands. The sink basin is removable for easy cleaning.



Figure 4: Sink and Faucet Detail

## 2. Stove and Knobs

The stove features two burners and interactive knobs. These imitation metal switches rotate smoothly and produce a satisfying "clacking" sound, simulating real stove operation. Place the toy pot or pan on the burners for pretend cooking.

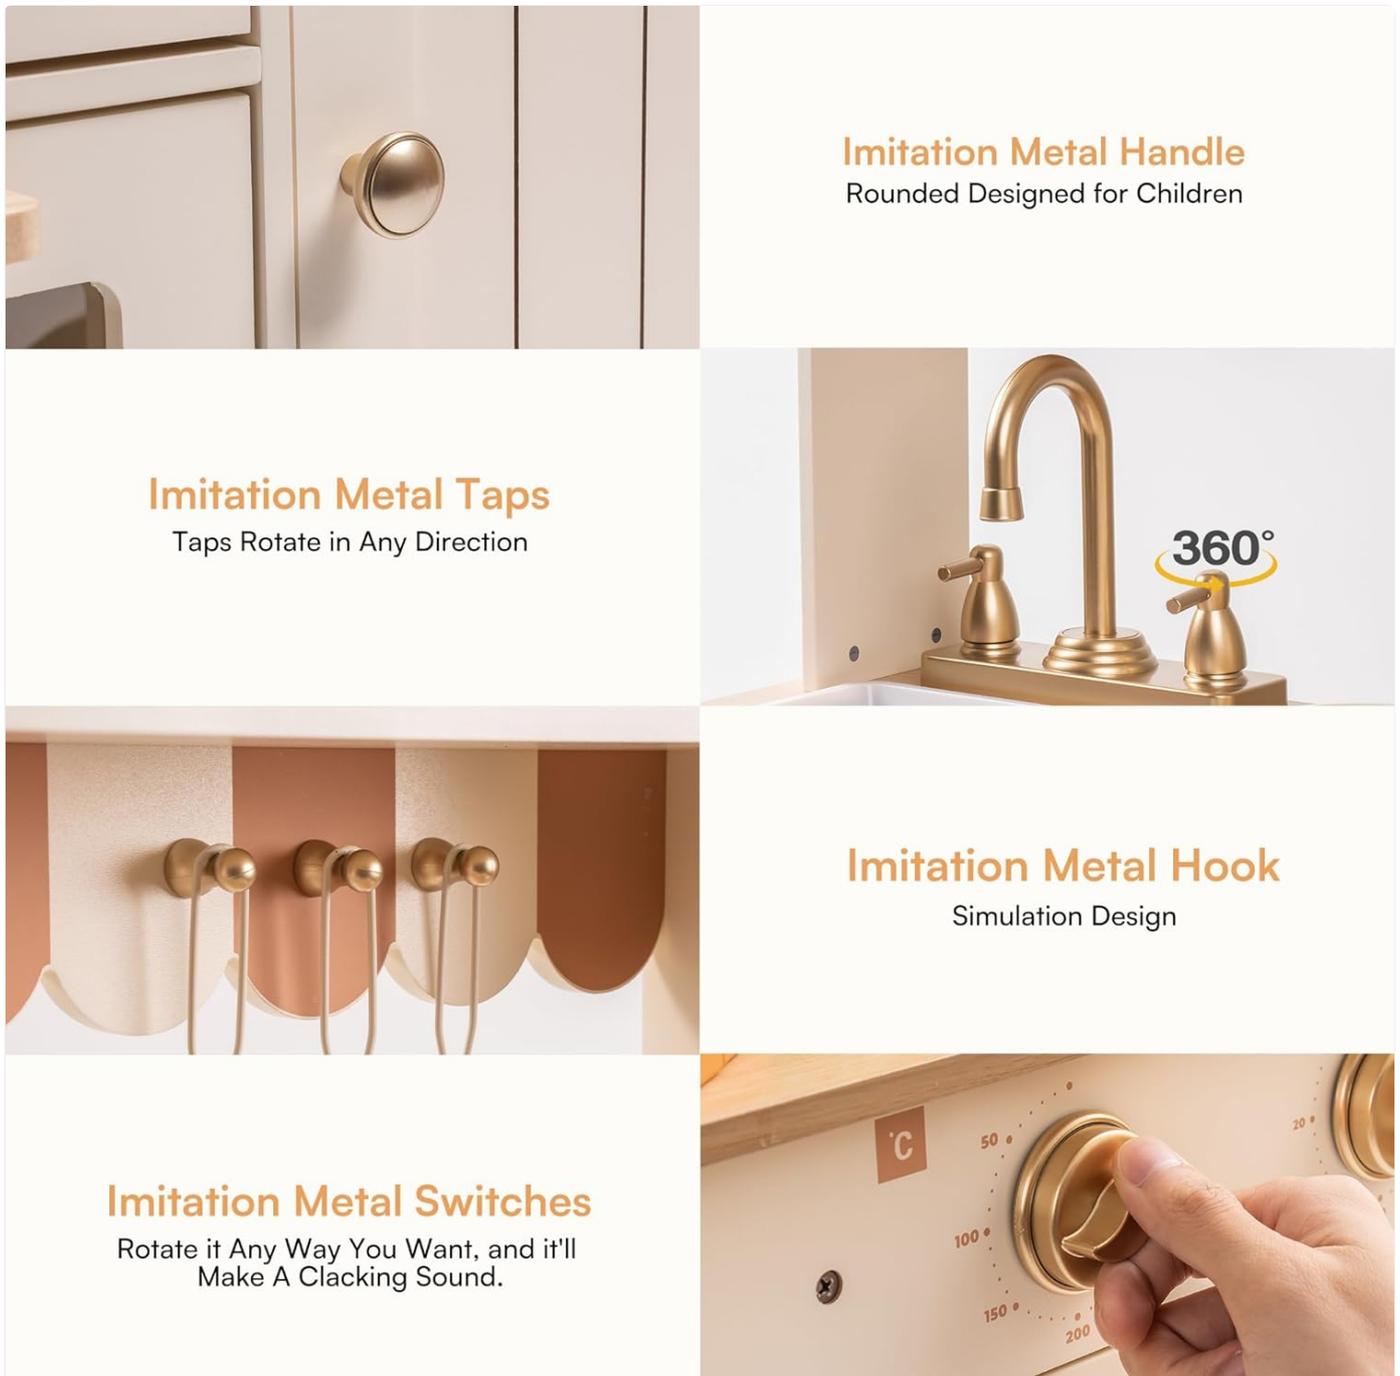


Figure 5: Stove and Knob Interaction

### 3. Oven and Cabinet

The play kitchen includes a roaster oven and a storage cabinet. Both feature doors with imitation metal handles that open and close easily, providing ample space for storing toy food and accessories. Children can pretend to bake in the oven or store their kitchen essentials in the cabinet.

# REALISTIC INTERACTIVE FEATURES


Bring the joy of lifelike cooking and interactive play to your child's world.



The stove knobs rotate smoothly and make a satisfying "click" sound



The cabinet doors open and close easily, providing ample storage space

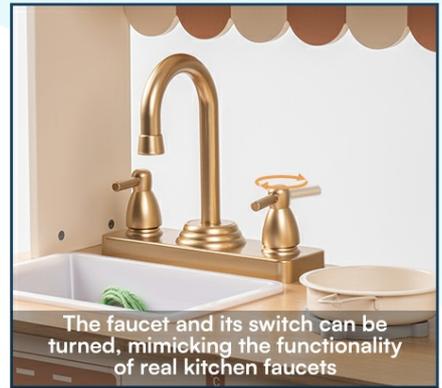

The faucet and its switch can be turned, mimicking the functionality of real kitchen faucets

Figure 6: Interactive Features (Knobs, Cabinet, Faucet)

## 4. Storage Shelf and Utensil Hooks

Above the sink, there is a storage shelf for items like the spice jars and fruit basket. Below the shelf, imitation metal hooks are provided for hanging the included kitchen utensils (spoon, pasta fork, spatula), promoting organization and tidiness.



Figure 7: Storage and Utensil Area

## MAINTENANCE AND CARE

---

To ensure the longevity and cleanliness of your ROBUD Play Kitchen, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Use mild soap if necessary, then wipe dry immediately. Avoid abrasive cleaners or harsh chemicals.
- **Dusting:** Regularly dust the playset to prevent accumulation.
- **Storage:** Store the playset in a dry environment, away from direct sunlight and extreme temperatures, to prevent warping or fading of the wood.
- **Inspection:** Periodically inspect all screws and connections to ensure they remain tight. Retighten if necessary.
- **Damage:** If any part becomes damaged, discontinue use immediately and contact customer support for replacement parts or advice.

## TROUBLESHOOTING

---

This section addresses common concerns you might encounter with your play kitchen.

### 1. Loose Parts

**Issue:** Some parts feel wobbly or loose after assembly or extended use.

**Solution:** Use a screwdriver to gently tighten any loose screws. Do not overtighten, as this can strip the wood. Regularly check all fasteners as part of routine maintenance.

### 2. Knobs Not Clicking

**Issue:** The stove knobs do not produce a clicking sound when turned.

**Solution:** Ensure the knobs are securely attached. If they are loose, gently push them back into place. If the issue persists, inspect the internal mechanism (if accessible) or contact customer support.

### 3. Scratches or Dents

**Issue:** Minor cosmetic damage from play.

**Solution:** For minor scratches, a wood repair marker or touch-up paint (matching the original color) can be used. For deeper dents, wood filler may be applied and sanded smooth before painting. Always ensure any repair materials are child-safe and non-toxic.

## SPECIFICATIONS

---

<b>Product Dimensions</b>	11.7 x 23 x 32 inches (L x W x H)
<b>Item Weight</b>	23.9 pounds
<b>Model Number</b>	RB-WCF09
<b>Recommended Age</b>	3 years and up
<b>Material</b>	Premium Wood, Non-toxic Paint
<b>Color</b>	White

Recommended age

3+

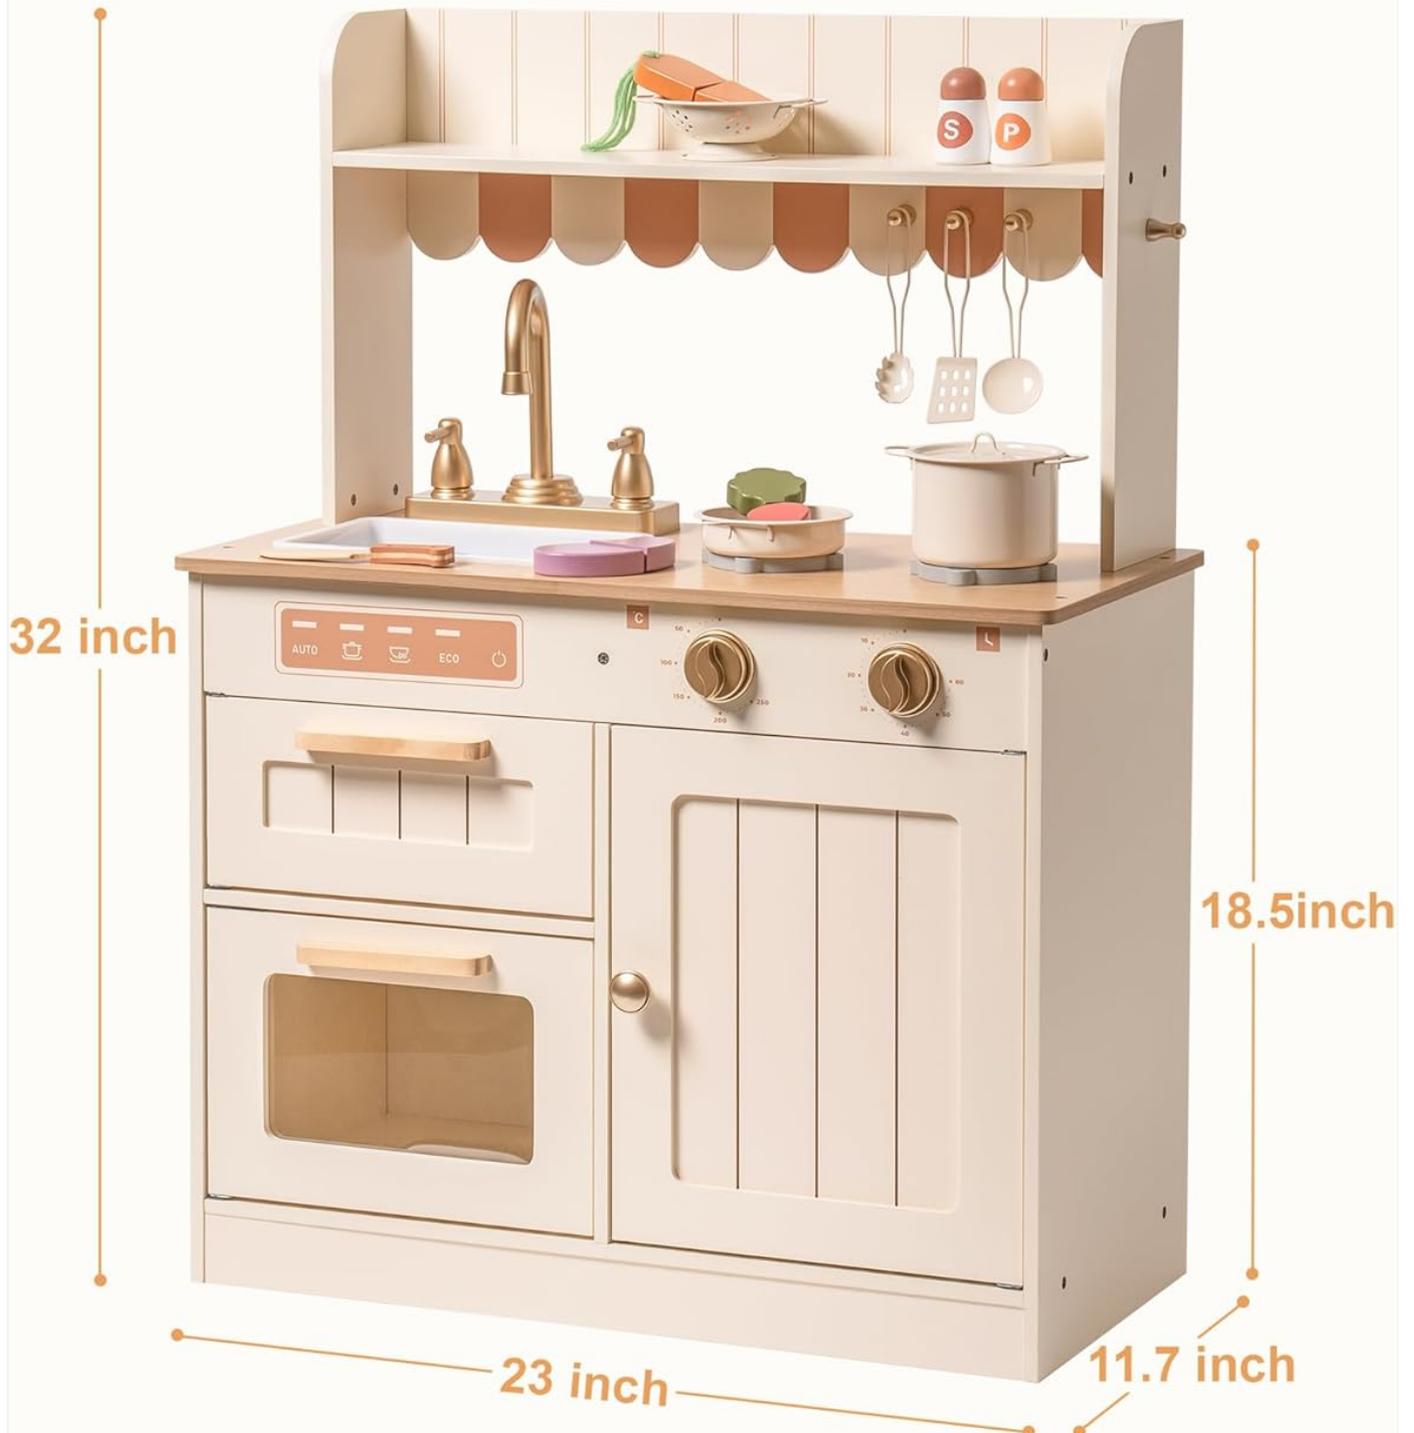


Figure 8: Product Dimensions

## WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official ROBUD website. If you have any questions, require assistance with assembly, or need replacement parts, please contact ROBUD customer support:

**Website:** [Visit the ROBUD Store on Amazon](#)

Please have your model number (RB-WCF09) and purchase date ready when contacting support.



© 2025 ROBUD. All rights reserved.