

SENXINGYAN SXY-US-ET-7-NZ

SENXINGYAN SXY-US-ET-7-NZ Kids Digital Alarm Clock
Instruction Manual

Model: SXY-US-ET-7-NZ

- Instructions
- Introduction
- Maintenance
- Safety Information
- Troubleshooting
- Setup
- Specifications
- Operating
- Warranty & Support

1. INTRODUCTION

Thank you for choosing the SENXINGYAN SXY-US-ET-7-NZ Kids Digital Alarm Clock. This innovative clock is designed to help children learn time management and establish healthy routines with its colorful 7-inch LED display, intuitive settings, and engaging features. Please read this manual carefully to ensure proper use and optimal performance of your new alarm clock.

2. SAFETY INFORMATION

- Keep the device away from water and moisture.
- Do not expose to extreme temperatures or direct sunlight.
- Use only the provided power adapter.
- Keep out of reach of very young children to prevent accidental damage or injury.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

3. SETUP

3.1 Unboxing and Initial Power-On

1. Carefully remove the alarm clock and all accessories from the packaging.
2. Connect the provided power adapter to the DC input port on the back of the clock.
3. Plug the power adapter into a standard electrical outlet. The clock display will illuminate.

7" HD Large Display Digital Alarm Clock

eye-protecting design
super large screen display



Image: The yellow digital alarm clock displaying "MONDAY MORNING 7:30 DECEMBER 25 2023" with dimensions 7.5"W x 5.5"H. This image illustrates the clock's large, colorful display and physical dimensions.

3.2 Basic Settings (Time, Date, Language)

Use the buttons on the back of the clock to navigate the settings menu. The 'MENU' button accesses the main settings, and the arrow keys (Up/Down/Left/Right) are used for navigation and adjustment. The 'OK' button confirms selections.

Your browser does not support the video tag.

Video: This video demonstrates how to access and navigate the settings menu on the Kids Digital Alarm Clock, including setting the time, date, and language. It shows the physical buttons on the back of the device and the corresponding on-screen menu options.

1. Press the **MENU** button to enter the settings interface.
2. Use the **Up/Down** arrow keys to select "Language Set" and press **OK** to choose your preferred language (e.g., English).
3. Navigate to "Time Set" and "Date Set" to adjust the current time and date using the arrow keys and **OK** button.
4. Select "Time Mode" to switch between 12-hour and 24-hour formats.

5. Select "Date Mode" to choose between Month-Day-Year or Day-Month-Year formats.

4. OPERATING INSTRUCTIONS

4.1 Setting Alarms

The clock supports 5 daily alarms and 12 specific scene alarms to help children follow routines.

1. From the settings menu, navigate to "Daily Reminder Set" or "Alarm Clock Setting".
2. Select an alarm slot (e.g., Alarm1, Wake up, Brush teeth).
3. Set the desired time, status (ON/OFF), and mode (Once/Repeat).
4. For scene alarms, the clock will display a cartoon image and play a voice broadcast corresponding to the activity (e.g., "Honey, it's time to go to school").



Image: The digital alarm clock displaying a scene for "Sleeping" at 9:00 PM, with text "Honey, it is time to sleeping". This image highlights the talking alarm clock feature with scene-based reminders.

4.2 Auto Dimming and Brightness Adjustment

The clock features an automatic dimmer that adjusts brightness based on day and night changes, providing an eye-caring display. You can also manually adjust the brightness.

1. In the settings menu, select "Auto Dimming".
2. Choose "Auto" for automatic adjustment or select a specific brightness level (e.g., Low, Mid, High).



Image: A child sleeping next to the digital alarm clock, which displays "MONDAY EVENING 22:30 DECEMBER 2023". Below the clock, three smaller images show different brightness levels, indicating the auto-dimming feature for better sleep.

4.3 Switching Display Modes

The clock offers multiple display modes, including text, digital, and traditional analog clock displays. You can switch between these modes with a single button press.

- Long press the **OK** button on the back of the clock to cycle through different time display modes.



Children's Digital Calendar Clock

Distinctive and practical, it is an ideal gift for your children no matter what holiday it is.

Image: The digital alarm clock displaying "MONDAY MORNING 7:30 DECEMBER 25 2023" in a colorful digital format. This image illustrates the clock's ability to switch between various display modes, including analog and digital representations.

5. MAINTENANCE

- Clean the clock's screen and body with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure the power adapter is securely connected and free from damage.
- The clock has a built-in battery for data retention. If unplugged, settings will be saved.

6. TROUBLESHOOTING

6.1 Display Not Turning On

- Check if the power adapter is properly connected to the clock and the electrical outlet.
- Ensure the electrical outlet is functioning correctly.

6.2 Alarm Not Sounding

- Verify that the alarm is set to ON in the settings menu.
- Check the volume settings to ensure it is not muted or set too low.
- Confirm the alarm time and repeat settings are configured as desired.

6.3 Incorrect Time/Date Display

- Access the "Time Set" and "Date Set" options in the settings menu to correct any discrepancies.
- Ensure the correct time mode (12-hour/24-hour) and date mode (Month-Day-Year/Day-Month-Year) are selected.

7. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	SENXINGYAN
Model Number	SXY-US-ET-7-NZ
Display Type	Digital
Screen Size	7 inch
Product Dimensions	7.5"W x 5.5"H
Power Source	Corded Electric
Special Features	Adjustable Volume, Auto Dimmable, Calendar Display, Large Display, Multilingual, Sleep Trainer, Situational Alarms
Frame Material	Acrylonitrile Butadiene Styrene
Item Weight	1 Pounds

8. WARRANTY & SUPPORT

8.1 Warranty Information

Please refer to your purchase documentation for specific warranty details. Typically, products come with a manufacturer's warranty covering defects in materials and workmanship.

8.2 Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact SENXINGYAN customer support through the retailer where the product was purchased or visit the official SENXINGYAN website for contact information.

© 2024 SENXINGYAN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CJ2ZKFKV>

More documents and user manuals: <https://manuals.plus/>