

[Manuals.plus](#) /

› [Playmobil](#) /

› Playmobil Pirate Ship Modern Instruction Manual

Playmobil 71418

Playmobil Pirate Ship Modern - Instruction Manual

Model: 71418

INTRODUCTION

Welcome aboard the Playmobil Pirate Ship! This set allows you to embark on thrilling pirate adventures, battling sea monsters and searching for hidden treasures. Designed for imaginative play, this ship floats and features interactive elements for an engaging experience.

This manual provides essential information for setting up, operating, and maintaining your Playmobil Pirate Ship. Please read it carefully before assembly and play.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Always supervise children during play, especially when the ship is used in water. Ensure all small parts are securely attached or stored away from very young children to prevent choking.

WHAT'S IN THE BOX

Your Playmobil Pirate Ship set includes 101 pieces, designed for comprehensive play. Please verify all components are present before beginning assembly.

- 1 x Pirate Ship (main hull and deck components)
- 2 x Pirate Figures (brave pirate and fearless pirate queen)
- 1 x Animal Figure (parrot)
- 98 x Additional Accessories, including:
 - Anchor
 - Cannons (functioning, rotating)
 - Treasure Chest
 - Treasure Map and Compass
 - Pirate Flag
 - Various weapons (swords, spears)

- Other small play elements
- 1 x Instruction Manual



Image: All 101 pieces of the Playmobil Pirate Ship set, including the ship's hull, sails, two pirate figures, a parrot, cannons, a treasure chest, and various other accessories, are neatly laid out for inspection.

SETUP AND ASSEMBLY

Assembly of the Playmobil Pirate Ship is straightforward. Follow the included detailed instructions for step-by-step guidance. Ensure all pieces are securely connected for optimal play and stability.

1. Unpack all components and verify against the "What's in the Box" list.
2. Begin by assembling the main hull of the ship.
3. Attach the mast and sails, ensuring the pirate flag is securely fastened.
4. Install the rotating cannons on the ship's deck.
5. Place the pirate figures and other accessories in their designated positions on the ship.
6. For water play, ensure all hatches and openings are properly closed to maintain buoyancy.



Image: The Playmobil Pirate Ship set displayed in its packaging, illustrating the fully assembled ship with its sails, figures, and accessories, ready for adventure.



Image: A visual guide detailing key features of the Playmobil Pirate Ship, such as its firing cannons and movable sails. The image also shows other compatible Playmobil Pirate sets (71419, 71420, 71421) that can expand the play experience.

OPERATING INSTRUCTIONS

The Playmobil Pirate Ship is designed for interactive and imaginative play, both on land and in water.

Water Play

The ship is capable of floating, making it suitable for play in pools, bathtubs, or shallow ponds. For enhanced water movement, the ship can be connected to the PLAYMOBIL Underwater Motor (#7350 - sold separately).



Image: The Playmobil Pirate Ship gracefully floating on water, demonstrating its buoyancy. An optional blue underwater motor is visible beneath the hull, indicating its compatibility for motorized movement.

Functioning Cannons

The ship is equipped with functioning cannons that can fire projectiles. Load the projectiles into the cannons and press the trigger mechanism to launch them, simulating exciting sea battles.



Image: A detailed view of a Playmobil pirate figure positioned at a cannon on the ship's deck. The cannon is shown in action, firing a red projectile, highlighting the interactive play feature.

Movable Sails and Steering

The ship features movable sails that can be adjusted for different play scenarios. The rudder at the back of the ship can also be turned to simulate steering.



Image: An overhead perspective of the Playmobil Pirate Ship, illustrating its adjustable sails and the ship's ability to turn in water, suggesting dynamic play possibilities.

Product Overview Video

Your browser does not support the video tag.

Video: A detailed product overview showcasing the Playmobil Pirate Ship's features, assembly, and play capabilities. This video provides a comprehensive look at the set in action.

PLAYMOBIL Pirates Collection Video

Your browser does not support the video tag.

Video: An official video from Playmobil showcasing the broader Pirates Collection, including the Pirate Ship and other related sets, demonstrating how they can be combined for expanded play scenarios.

MAINTENANCE

To ensure the longevity of your Playmobil Pirate Ship, follow these simple maintenance guidelines:

- **Cleaning:** Easily clean the plastic pieces by placing them under running water. Avoid using harsh chemicals, as they may damage the material or paint.
- **Drying:** After water play, thoroughly dry all components to prevent water spots or residue buildup.
- **Storage:** Store the set in a clean, dry place away from direct sunlight and extreme temperatures to preserve its colors and structural integrity.
- **Inspection:** Periodically inspect all parts for any signs of wear or damage. Replace any broken or worn-out pieces if necessary.

TROUBLESHOOTING

If you encounter any issues with your Playmobil Pirate Ship, consider the following common solutions:

- **Ship not floating properly:** Ensure all components are correctly assembled and securely attached. Check for any open compartments or gaps that might allow water ingress.
- **Cannons not firing:** Verify that projectiles are correctly loaded and the firing mechanism is clear of obstructions.
- **Figures or accessories not staying in place:** Ensure they are properly inserted into their designated slots or pegs.
- **Missing pieces:** Refer to the "What's in the Box" section and the included parts list. If a piece is genuinely missing from a new set, contact Playmobil customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions (LxWxH)	Approx. 15 x 7.9 x 11.8 inches (38.1 x 20.1 x 30 cm)
Item Weight	2.08 pounds (0.94 kg)
Item Model Number	71418
Manufacturer Recommended Age	4 - 10 years
Material	High-quality, durable plastic
Country of Origin	Bosnia and Herzegovina
Release Date	March 15, 2024

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For details regarding warranty, replacement parts, or further support, please refer to the official Playmobil website or contact their customer service directly. You can visit the official Playmobil store for more products and information:[Playmobil Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question