

Zimati 0202002

Zimati 14-inch 82LEDs Christmas Wreath Window Lights Instruction Manual

Model: 0202002

1. INTRODUCTION

Thank you for choosing the Zimati Christmas Wreath Window Lights. This instruction manual provides important information regarding the safe setup, operation, and maintenance of your new window decoration. Please read this manual thoroughly before use and retain it for future reference.

2. PRODUCT OVERVIEW

The Zimati Christmas Wreath Window Light is a decorative LED light designed for indoor use. It features a 14-inch diameter wreath with a bow design, illuminated by 82 red and green LEDs. The light is USB-powered and includes a remote control for adjusting lighting modes and setting a timer.




Image 2.1: The Zimati Christmas Wreath Window Light, showcasing its red bow and green wreath outline with LEDs, displayed in a window setting.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Zimati 14-inch Christmas Wreath Window Light
- 1 x Remote Control
- 2 x Suction Cup Hooks
- 1 x USB Power Cable (USB adapter not included)

1 Pack 14" Wreath Window Lights

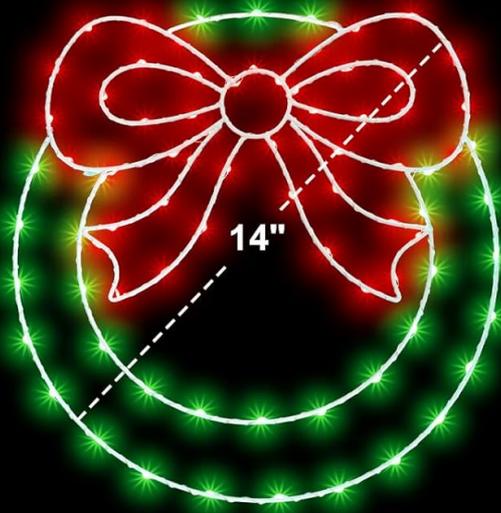

X1




49 Red LEDs
+
33 Green LEDs



Remote Control
X1



Suction Cup Hook
X2

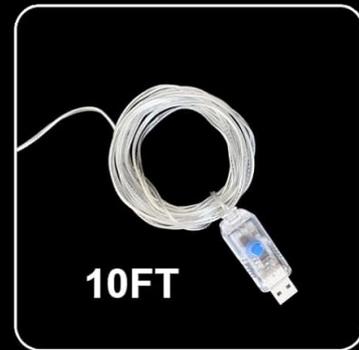

10FT
USB Powered X1
Adaptor Not Included

Image 3.1: An illustration of the Zimati Christmas Wreath Window Light package contents, including the wreath light, remote control, two suction cup hooks, and the USB power cable.

4. SAFETY INFORMATION

- **Indoor Use Only:** This product is designed for indoor decoration. Do not use it outdoors or expose it to rain or moisture.
- **Not Water Resistant:** The light is not water resistant. Avoid contact with water or damp environments.
- **Power Source:** Use a standard USB power adapter (5V/1A recommended, not included) or a compatible USB port.
- **Battery for Remote:** The remote control requires one CR2 battery (not included). Ensure correct polarity when inserting.
- **Avoid Overheating:** Do not cover the light or place it near heat sources.
- **Handle with Care:** The wreath frame is made of iron. Handle gently to avoid bending or damage.

5. SETUP INSTRUCTIONS

1. **Attach Suction Cups:** Ensure the surface where you intend to hang the wreath (e.g., glass window, ceramic tile) is clean and dry. Press the suction cup hooks firmly onto the desired surface.



Image 5.1: A clear suction cup hook, used for hanging the wreath light.

2. **Hang the Wreath:** Locate the hanging hole at the top of the wreath light. Carefully hang the wreath onto the attached suction cup hooks.



Image 5.2: The Zimati Christmas Wreath Window Light securely hanging on a window, demonstrating the use of the suction cup hook.

3. **Connect Power:** Plug the USB cable into a compatible USB power adapter (not included) or a USB port on a device such as a computer or power bank.



Image 5.3: A diagram illustrating various compatible USB power sources for the wreath light, including a USB charger, USB socket, power bank, and computer.

6. OPERATING INSTRUCTIONS

6.1 Using the Remote Control

The included remote control allows you to manage the light's functions. Ensure the remote has a CR2 battery installed (not included) and is pointed towards the USB receiver.



Image 6.1: The remote control for the Zimati Christmas Wreath Window Light, detailing buttons for power, timer, 8 lighting modes, and brightness adjustment.

- **ON/OFF Button:** Press to turn the lights on or off.
- **MODE Buttons (1-8):** Press a numbered button to select one of the 8 lighting modes. To lock a specific mode, press and hold the corresponding mode number button for approximately 5 seconds.
- **TIMER Button:** Activates the timer function (6 hours on, 18 hours off).
- **DIM +/- Buttons:** Adjust the brightness level of the lights.

6.2 Using the USB Button

If the remote control is not available, you can cycle through the lighting modes by pressing the button located on the USB connector.



Image 6.2: A close-up view of the USB power cable, highlighting the integrated button for adjusting light modes directly.

6.3 Lighting Modes

The wreath light features 8 distinct lighting modes:

1. Combination
2. In Wave
3. Sequential
4. Slow Glow
5. Flash
6. Slow Fade
7. Twinkle
8. Steady On

6.4 Timer Function

When the timer function is activated via the remote control, the lights will remain on for 6 hours and then automatically turn off for 18 hours. This cycle will repeat daily until the timer is deactivated.

7. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the wreath light gently with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, store the wreath light in its original packaging or a protective container in a cool, dry place, away from direct sunlight and moisture.
- **Remote Battery Replacement:** If the remote control stops responding, replace the CR2 battery.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	No power supply; loose USB connection; faulty USB adapter.	Ensure USB cable is securely plugged into a working USB port/adapter. Try a different USB adapter or port.
Remote control is not working.	CR2 battery is dead or incorrectly inserted; remote not pointed at receiver; obstruction.	Replace the CR2 battery, ensuring correct polarity. Point the remote directly at the USB receiver. Remove any obstructions between the remote and the receiver.

Problem	Possible Cause	Solution
Lights change modes unexpectedly or do not stay on desired mode.	Mode not locked in.	After selecting a mode (1-8) with the remote, press and hold the corresponding mode number button for approximately 5 seconds to lock it.
Timer function is not working correctly.	Timer not activated; power interruption.	Press the TIMER button on the remote to activate. If power is interrupted, the timer may need to be reset.

9. SPECIFICATIONS

- **Model:** 0202002
- **Dimensions:** 13.8 x 0.02 x 13.8 inches (L x W x H)
- **Item Weight:** 10.5 ounces (0.3 Kilograms)
- **Light Source:** 82 LEDs (Red, Green)
- **Power Source:** USB (5V)
- **Voltage:** 55 Volts (Input to LEDs, via USB conversion)
- **Controller Type:** Remote Control, USB Button
- **Lighting Modes:** 8
- **Timer Function:** 6 hours ON / 18 hours OFF
- **Material:** Iron frame
- **Indoor/Outdoor Usage:** Indoor Only
- **Water Resistance:** Not Water Resistant
- **Remote Battery:** 1 x CR2 (not included)

10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer or your retailer. Keep your purchase receipt as proof of purchase.