

BEMOONY A4-W

BEMOONY Automatic Cat Feeder User Manual

Model: A4-W

Brand: BEMOONY

INTRODUCTION

The BEMOONY Automatic Cat Feeder is designed to provide scheduled and portion-controlled meals for your pets, ensuring they are fed consistently even when you are away. This manual will guide you through the setup, operation, and maintenance of your new feeder.

SAFETY INFORMATION

- Use only dry pet food with a diameter between 2-10mm.
- Do not immerse the main unit in water. Clean only the removable parts.
- Keep out of reach of children and pets when not in use or during cleaning.
- Ensure the power adapter is securely connected and the battery compartment is closed if using batteries.
- Do not use outdoors or in wet conditions.
- Unplug the feeder before cleaning or adding food.

PRODUCT OVERVIEW

The BEMOONY Automatic Cat Feeder (Model A4-W) features a 3-liter capacity, programmable meal times, customizable voice recording, and dual power supply options.



Image: Front view of the BEMOONY Automatic Cat Feeder, showing the transparent food hopper, control panel, and food bowl.

Key Components:

- **Food Hopper:** Transparent container for dry pet food.
- **Lid with Desiccant Bag Slot:** Keeps food fresh and prevents moisture.
- **Control Panel:** Digital display, +/- buttons, SET button, and voice record button.
- **Food Dispenser Outlet:** Where food is dispensed into the bowl.

- **Food Bowl:** Removable bowl for dispensed food.
- **Main Unit:** Houses the motor, electronics, and battery compartment.
- **Power Adapter Port:** For connecting to AC power.
- **Battery Compartment:** For backup power (requires 3 x D batteries, not included).

SETUP

Initial Assembly:

1. Unpack all components: main unit, food hopper, lid, food bowl, power adapter.
2. Insert the food hopper onto the main unit, ensuring it is securely seated.
3. Place the desiccant bag (if included) into the designated slot under the lid. Close the lid firmly.
4. Attach the food bowl to the front of the main unit.
5. For power, connect the power adapter to the feeder and a wall outlet. For backup power, install 3 x D batteries (not included) into the battery compartment at the bottom of the unit.
6. Fill the food hopper with dry pet food.



Image: Visual guide demonstrating the assembly steps: unpacking, attaching hopper, inserting desiccant, cleaning, installing bowl, and connecting power.

OPERATING INSTRUCTIONS

Setting the Clock:

1. Press and hold the "SET" button until the hour digit flashes.
2. Use the "+" and "-" buttons to adjust the hour.
3. Press "SET" again to confirm the hour and move to minutes.
4. Use "+" and "-" to adjust the minutes.
5. Press "SET" to save the time.

Programming Meal Times and Portions:

The feeder supports 1 to 6 meals per day, with 1 to 9 portions per meal (approximately 11g per portion).

1. Press "SET" once to enter meal programming mode. The meal number (e.g., "1") will flash.

2. Use "+" and "-" to select the meal number you wish to program (1-6).
3. Press "SET" to confirm the meal number. The hour for that meal will flash.
4. Adjust the hour using "+" and "-". Press "SET".
5. Adjust the minutes using "+" and "-". Press "SET".
6. The portion number will flash. Use "+" and "-" to set the number of portions (1-9) for this meal.
7. Press "SET" to save the settings for this meal.
8. Repeat for additional meals. To exit programming, press "SET" until the clock is displayed, or wait a few seconds.



Image: Visual representation of the feeder's programming capabilities, allowing up to 6 meals and 9 portions per meal.

Voice Recording Function:

You can record a 10-second personalized voice message that will play before each meal.

1. Press and hold the microphone button (usually labeled with a microphone icon) until you hear a beep.
2. Speak your message clearly into the microphone.
3. Release the button when finished. The message will automatically save.
4. To test the recording, briefly press the microphone button.

Customised Voice

Enhance your cat's interest



Image: A cat approaching the feeder, illustrating the customized voice feature that enhances pet engagement.

Manual Feeding:

To dispense food manually, briefly press the "+" button. One portion will be dispensed.

MAINTENANCE AND CLEANING


Regular cleaning ensures hygiene and extends the life of your feeder.

1. Unplug the feeder from the power source and remove any batteries.

2. Remove the food hopper and food bowl.
3. Wash the food hopper and food bowl with mild soap and water. Rinse thoroughly.
4. Wipe the main unit with a clean, damp cloth. **Do not immerse the main unit in water.**
5. Ensure all parts are completely dry before reassembling and adding food.
6. Replace the desiccant bag every 1-2 months for optimal food freshness.

Easy To Clean

Simple disassembly

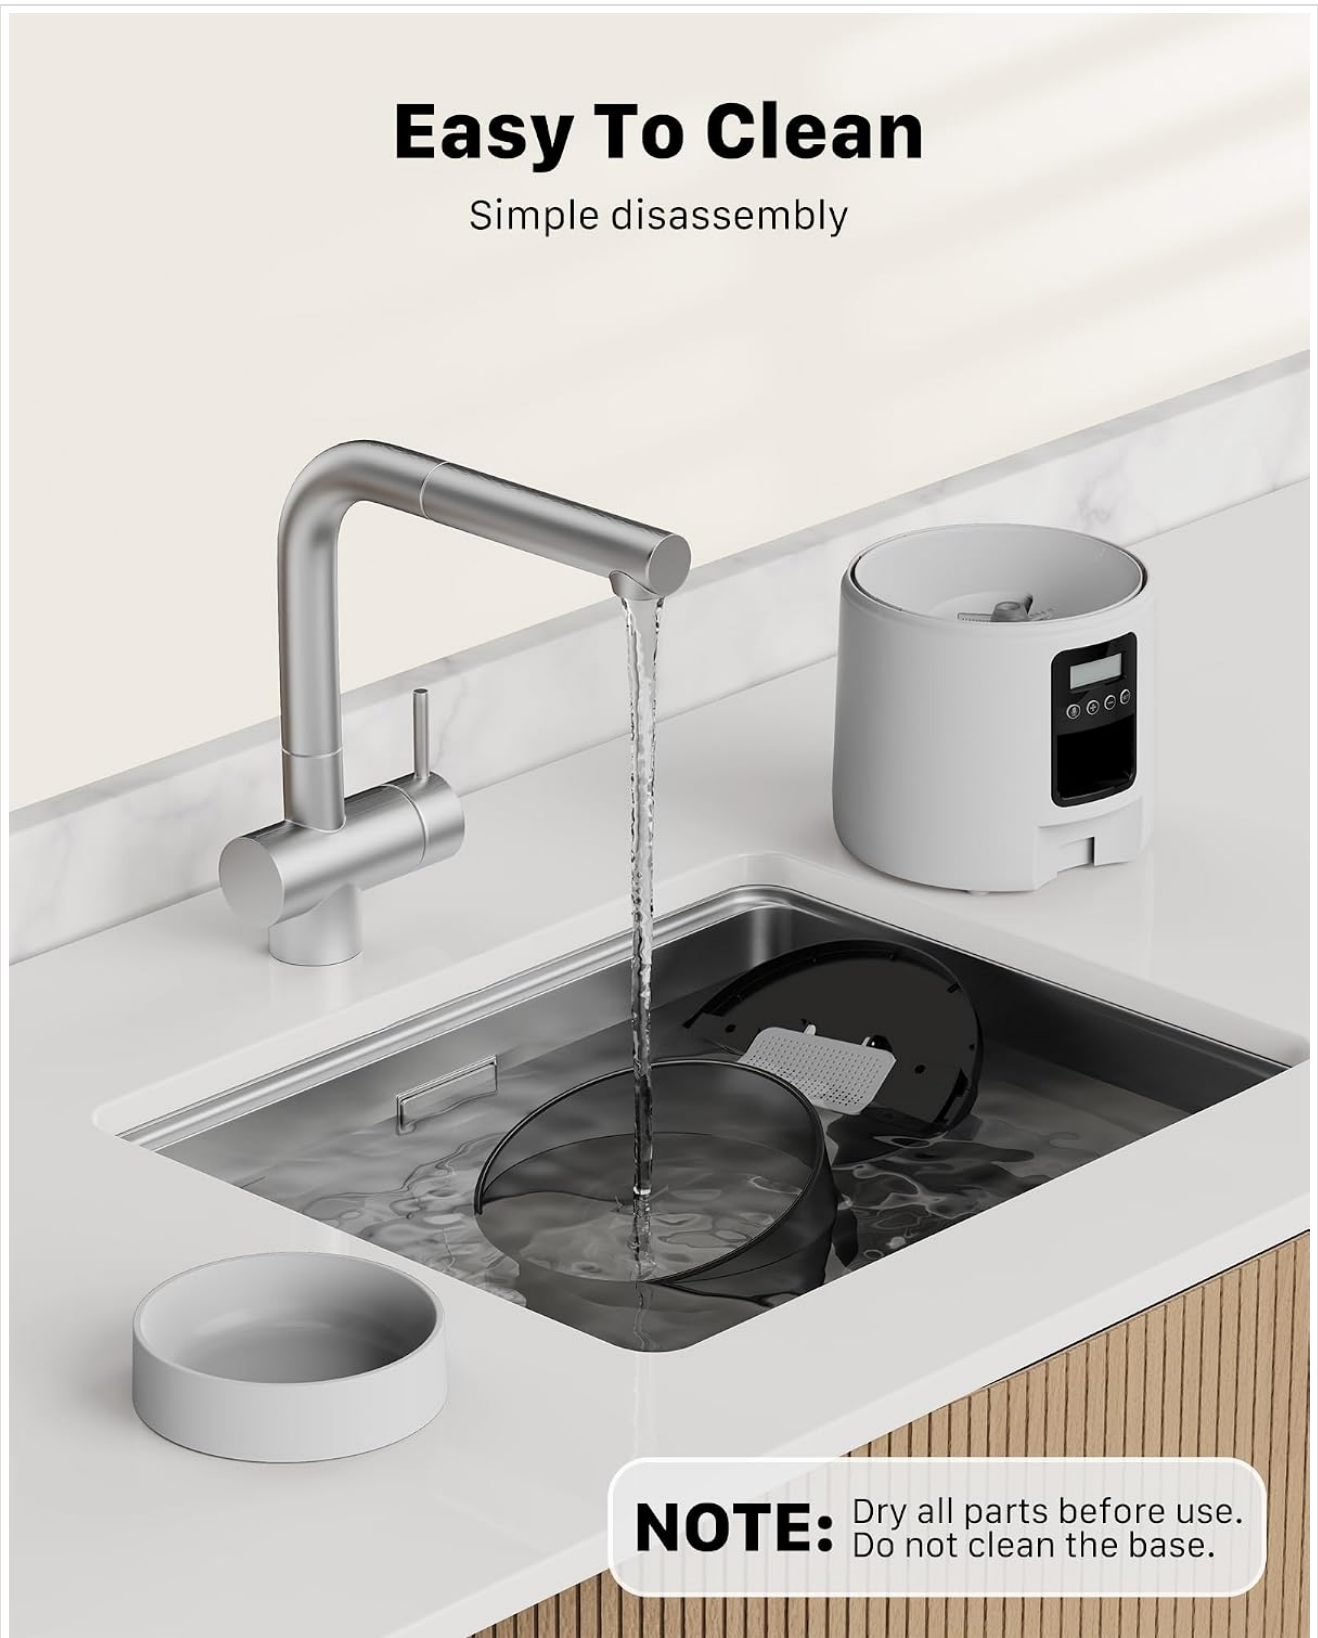

NOTE: Dry all parts before use.
Do not clean the base.

Image: Illustration of the feeder's removable parts (hopper and bowl) being washed in a sink, emphasizing easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder not dispensing food.	Food hopper empty; food jammed; power issue.	Refill hopper; clear any food blockages; check power connection/batteries.
Display not working.	No power; batteries low/incorrectly installed.	Ensure power adapter is connected or replace batteries.
Voice recording not playing.	No recording saved; volume too low.	Re-record message; ensure volume is audible.
Food not fresh.	Desiccant bag needs replacement; lid not sealed properly.	Replace desiccant bag; ensure lid is securely closed.

SPECIFICATIONS

- **Model:** A4-W
- **Capacity:** 3 Liters
- **Dimensions:** 20.6 x 19 x 18.8 cm
- **Weight:** 11 grams
- **Material:** Plastic
- **Power Supply:** AC Adapter (included), 3 x D Batteries (not included)
- **Meals per Day:** 1-6
- **Portions per Meal:** 1-9 (approx. 11g per portion)
- **Voice Recording:** 10 seconds
- **Recommended Food Size:** 2-10mm dry kibble

WARRANTY AND SUPPORT

BEMOONY offers a 2-year warranty for this product. For any issues or support inquiries, please contact BEMOONY customer service through the retailer where you purchased the product or visit the official BEMOONY store page on Amazon.

[Visit the BEMOONY Store on Amazon](#)

For returns within 30 days of receipt due to a change of mind, please refer to the retailer's return policy. For defective or damaged products, consult the retailer's help page on returns.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I erase a voice message on the BEMOONY A4-W Automatic Cat Feeder?

To erase or change the voice message on your BEMOONY A4-W Automatic Cat Feeder, you must record over the existing message. The device does not have a dedicated "delete" button for recordings; instead, it...

[Read full answer](#)