

[Manuals.plus](#) /

› [EAGLE PEAK](#) /

› EAGLE PEAK 17x10 Pop-Up Gazebo Canopy Tent Instruction Manual

EAGLE PEAK 17x10 Pop-Up Gazebo Canopy Tent

EAGLE PEAK 17x10 Pop-Up Gazebo Canopy Tent Instruction Manual

Model: 17x10 Pop-Up Gazebo Canopy Tent

Brand: EAGLE PEAK

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your EAGLE PEAK 17x10 Pop-Up Gazebo Canopy Tent. Please read all instructions carefully before assembly and operation to ensure proper function and longevity of the product.

SAFETY INFORMATION

Important Safety Warnings:

- Always follow assembly and disassembly instructions carefully.
- Keep away from heat sources and open flames.
- Inspect the product regularly for any signs of wear or damage.
- Secure the product to a stable foundation when in use.
- Do not use in high winds or severe weather conditions.

PRODUCT FEATURES

- **Easy Setup:** Features the Peak Push system, a patented canopy center lock for quick, one-person setup without tools.
- **Unique Dual Awning Design:** Two adjustable dual half awnings provide maximum coverage (170 square feet) and can be adjusted for height.
- **Superior Quality Materials:** CPAI-84 flame resistant 150D oxford fabric canopy top with UPF 50+ UV sun protection. Sturdy high-grade engineered steel frame is powder-coated for rust resistance.
- **Enhanced Frame Construction:** M5 hardened through-bolt reinforced assembly and nylon plastic connection hardware for durability.
- **Compact and Portable:** Includes a 600x300D wheeled carrying bag for easy transport and storage.

- **Ventilated Roof:** Designed with a vent on top to allow air circulation and prevent lift from wind.
- **Water-Resistant Fabric:** Canopy material is water-resistant to keep you dry.
- **UV-Blocking Interior:** Helps reduce heat under the canopy.

Image: Features highlighting comfort, durability, and flexibility, including a ventilated roof, durable weather-resistant fabric, and adjustable height.

MORE SHADE. MORE COVERAGE. MORE COMFORT OUTDOORS

EAGLE PEAK 17x10 Pop Up Canopy with Adjustable Awning for Flexible Shade Control



Vendor booth



Tailgating



Backyard party



Camping

Image: Demonstrates protection in various weather conditions, highlighting the water-resistant canopy and UV-blocking interior.

SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your canopy tent:

1. **Unpack the Frame:** Remove the canopy frame from the wheeled carrying bag. Stand the folded frame upright in your desired location.
2. **Expand the Frame:** With a partner, gently pull the outer legs of the frame outwards, partially expanding it.
3. **Attach the Canopy Top:** Drape the canopy fabric over the partially expanded frame. Secure the corners of the canopy to the frame.
4. **Lock the Center:** Use the patented Peak Push system. Push up on the center hub of the canopy until it clicks into place, fully locking the frame.



Image: Detailed view of the Peak Push system, illustrating the 'Lift, Lock, Done' steps for securing the canopy's central mechanism.

5. **Extend the Legs:** Press the red button on each leg and extend them to your desired height until they click into place. Ensure all four legs are at the same height for stability.
6. **Secure the Awnings:** Attach the awning poles to the frame and extend the awnings as desired. Secure them using the provided clips or ties.

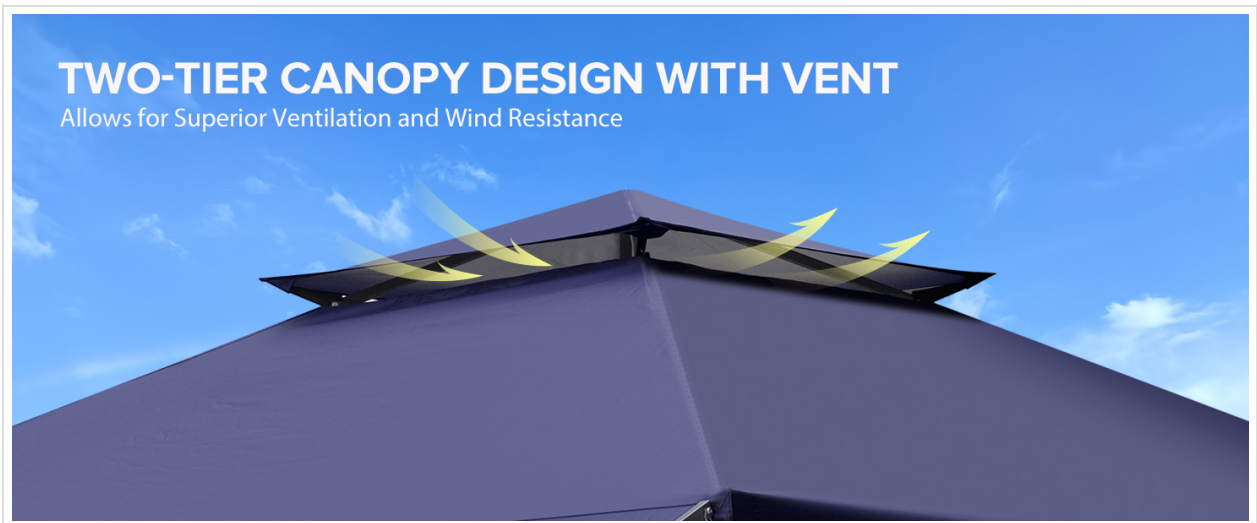


Image: Visual guide for fast and easy setup, including opening the frame, engaging the Peak Push mechanism, and adjusting the height and angle for shade.

7. **Anchor the Canopy:** Use the provided ropes and stakes to anchor the canopy legs securely to the ground, especially in windy conditions.

Video: EAGLE PEAK 17'x10' Pop up Gazebo Canopy Tent Setup

Your browser does not support the video tag.

Video: Official EAGLE PEAK video demonstrating the setup process for the 17x10 Pop-Up Gazebo Canopy Tent, including unfolding the frame, attaching the canopy, and extending the legs.

OPERATING INSTRUCTIONS

Your EAGLE PEAK canopy tent offers versatile usage options:

- **Adjusting Awnings:** The dual half awnings can be adjusted to different angles or fully extended to maximize shade coverage throughout the day. To adjust, locate the pull pins on the awning support poles, pull them out, and reposition the poles to the desired angle. Ensure the pins re-engage securely.



Image: Illustration of the adjustable awning feature, demonstrating closed, half, and fully extended positions for flexible shade control.

- **Height Adjustment:** The canopy legs have multiple height settings. To adjust, press the red button on each leg and slide the inner leg up or down until it locks into the desired position.

- **Wind and Rain Management:** The ventilated roof design allows air to pass through, reducing wind uplift. The water-resistant fabric and mesh on the awnings help prevent water accumulation during rain. In heavy rain or strong winds, it is recommended to lower or collapse the canopy for safety.



Image: Demonstrates the adjustable shade control module, showing the canopy in closed, half, and extended awning configurations.

MAINTENANCE

Proper maintenance ensures the longevity of your canopy tent:

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Wipe down the steel frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before folding to prevent rust.
- **Inspection:** Regularly inspect all parts for wear, tear, or damage. Check for loose bolts, bent poles, or rips in the fabric. Replace damaged parts immediately.

STORAGE

To store your canopy tent:

1. **Disassembly:** Reverse the setup steps. Lower the legs, unlock the center hub, and carefully fold the frame.
2. **Drying:** Ensure the canopy fabric is completely dry before folding and storing to prevent mildew and damage.
3. **Packing:** Place the folded frame and canopy fabric back into the wheeled carrying bag. Ensure all accessories (stakes, ropes) are also stored.
4. **Location:** Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Common issues and their solutions:

- **Difficulty Expanding/Folding Frame:** Ensure all locking mechanisms are disengaged. Apply gentle, even pressure. Do not force the frame.
- **Water Pooling on Canopy:** Ensure the canopy is taut and properly secured to the frame. The integrated mesh on the awnings is designed to allow water to drain, but severe weather may still cause some pooling. Lower the canopy or adjust awning angles to facilitate drainage.
- **Canopy Instability in Wind:** Always use the provided stakes and ropes to anchor the canopy. For added stability in moderate winds, consider purchasing additional weight bags or securing to heavy objects. Avoid use in strong winds.

- **Legs Not Locking:** Ensure the red button is fully depressed and the inner leg is aligned with the locking hole.

SPECIFICATIONS

Brand	EAGLE PEAK
Model	17x10 Pop-Up Gazebo Canopy Tent
Material	Alloy Steel, Polyester
Product Dimensions (L x W x H)	204"L x 120"W x 120"H (17 ft x 10 ft x 10 ft)
Item Weight	57.1 Pounds
Water Resistance Level	Water Resistant
Ultraviolet Light Protection	UPF 50+
Assembly Required	No (Instant Pop-Up Design)
Occupancy	10 people

WARRANTY AND SUPPORT

EAGLE PEAK offers a 1-year limited after-sale protection from the original date of purchase. This warranty covers the frame, canopies, and bags. For any questions or support, please contact our professional service team.