

SYNCWIRE SW-SS126

SYNCWIRE SW-SS126 55" Selfie Stick Phone Tripod

Instruction Manual

[Introduction](#) [What's in the](#)

[Box](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the proper use and care of your SYNCWIRE SW-SS126 55" Selfie Stick Phone Tripod. Please read this manual thoroughly before using the product to ensure optimal performance and safety. This device functions as both an extendable selfie stick and a stable phone tripod, designed for capturing photos and videos with various smartphones.

2. WHAT'S IN THE BOX

Verify that all components are present in the package:

- 55" Selfie Stick Tripod
- Rechargeable Bluetooth Remote Shutter
- USB Type-C Cable
- User Manual (this document)

3. SETUP

3.1 Unfolding the Tripod

To deploy the tripod legs, gently pull the top section of the stick upwards. The legs will automatically extend outwards to form a stable base. Ensure the legs are fully spread for maximum stability.

Height Adjustable

7-section aluminum alloy telescopic pole, with a length ranging from 31cm to 140cm



Image: The SYNCWIRE Selfie Stick Tripod shown in its fully extended tripod configuration, demonstrating stability.

3.2 Attaching Your Smartphone

The phone holder features a spring-loaded clamp. Gently pull the top part of the clamp upwards to open it, then insert your smartphone. Ensure your phone is securely seated within the anti-slip silicone pads. The clamp accommodates phones from 4.7 to 7 inches, with widths between 56mm and 92mm.

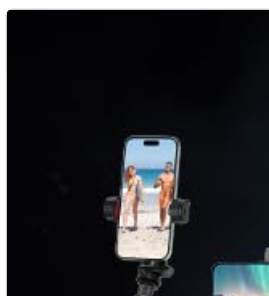


Image: Detail of the phone clamp, highlighting the non-slip silicone pads for secure phone attachment.

3.3 Bluetooth Remote Pairing

The remote shutter is integrated into the stick. Gently push it upwards to detach it. To pair:

1. Turn on the Bluetooth remote control by pressing and holding the button until the indicator light flashes.
2. On your smartphone, navigate to Bluetooth settings and enable Bluetooth.
3. Search for available devices and select "SYNCWIRE" to connect.
4. Once connected, the indicator light on the remote will stop flashing.

The remote is compatible with Bluetooth versions 3.0 and above on Android 5.0 and iOS 7.0 devices. It has a range of up to 10 meters.

Your browser does not support the video tag.

Video: Official SYNCWIRE instruction video demonstrating the setup and use of the selfie stick tripod, including Bluetooth pairing.

4. OPERATING INSTRUCTIONS

4.1 Switching Between Selfie Stick and Tripod Modes

The device is designed for dual functionality. To use as a selfie stick, keep the legs folded and hold the handle. To use as a tripod, extend the legs as described in Section 3.1.



2.53" / 6.42cm
iPhone 13 mini



3.04" / 7.73cm
LG W41



3.02" / 7.66cm
Pixel 7 Pro



3.02" / 7.67cm
iPhone 15 Pro Max



3.07" / 7.81cm
Samsung S23 Ultra

Fit All Type of Phones

Suitable for iOS and Android Phones
clamp ranges from 53.5mm to 91.5mm

91.5mm 53.5mm

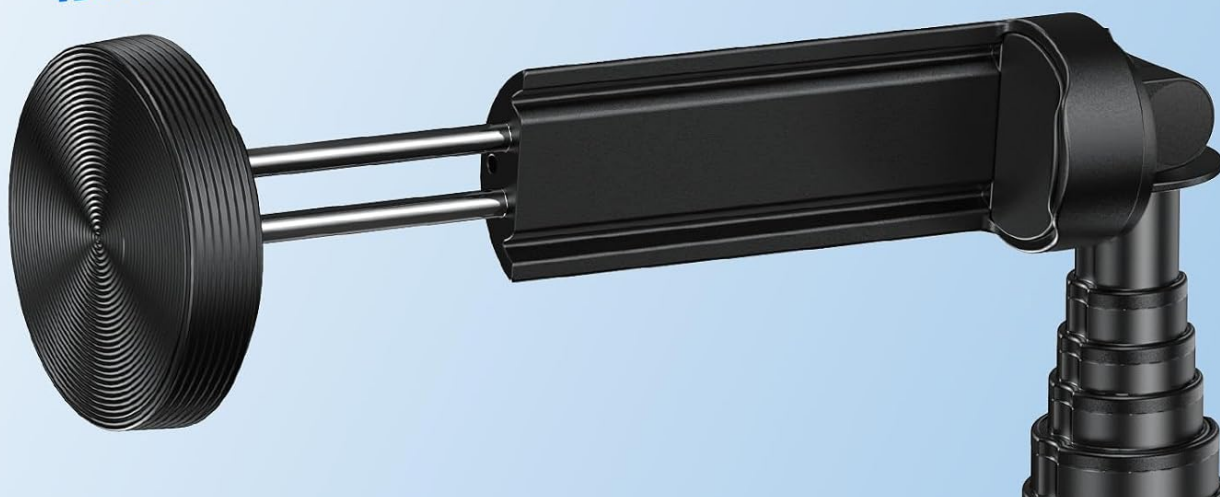


Image: A person using the SYNCWIRE device in selfie stick mode, extending their reach for a wider shot.

4.2 Adjusting Height

The 7-section telescopic pole allows for height adjustment from 31cm (12.2 inches) to 140cm (55 inches). Gently pull the pole sections to extend them to your desired height. Ensure each section is securely locked in place before use.

Adaptable Orientation

Easily switch between portrait/landscape modes and any angle



Phone holder
can be rotated

360°



Tripod head
can be rotated

180°

Image: Visual representation of the tripod extending to different heights, from compact to its maximum 55-inch extension.

4.3 Adjusting Phone Orientation and Angle

The phone holder supports portrait, landscape, and overhead modes. It can rotate vertically up to 180° and horizontally up to 360°.

- **Horizontal Rotation:** The phone holder can be rotated 360° to switch between portrait and landscape orientations.
- **Vertical Tilt:** The tripod head allows for 180° vertical tilt to achieve various shooting angles, including overhead shots.

More Stable Structure



Double-triangle structure



Anti-slip silicone pad

Image: Demonstrates the flexible rotation capabilities of the phone holder and tripod head for diverse shooting angles.

4.4 Using the Bluetooth Remote

After successful pairing (Section 3.3), simply press the button on the remote to trigger your phone's camera shutter. No additional app installation is required for basic photo and video capture.

Your browser does not support the video tag.

Video: Official SYNCWIRE video showcasing the all-in-one design and functionality of the 55" selfie stick tripod.

5. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the selfie stick tripod in a cool, dry place away from direct sunlight and extreme temperatures. Ensure it is fully collapsed before storage.
- **Battery Care:** Recharge the Bluetooth remote using the provided USB Type-C cable when the battery is low. Avoid

overcharging or completely draining the battery for extended periods.

- **Water Resistance:** This product is not water-resistant. Avoid exposure to water or high humidity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not pairing.	Remote battery low; Bluetooth not enabled on phone; remote not in pairing mode; interference.	Charge the remote; enable phone Bluetooth; press and hold remote button to enter pairing mode; move away from other Bluetooth devices.
Remote not taking photos.	Not paired; phone camera app not open; remote out of range.	Ensure remote is paired; open your phone's camera app; move closer to the phone (within 10m).
Tripod unstable.	Legs not fully extended; uneven surface; phone too heavy or off-center.	Ensure legs are fully spread; place on a flat, stable surface; center your phone in the clamp.
Pole sections not extending/retracting smoothly.	Dirt or debris in sections; mechanism stuck.	Gently clean the pole sections; avoid forcing the mechanism.

7. SPECIFICATIONS

Feature	Detail
Model Number	SW-SS126
Brand	SYNCWIRE
Material	Aluminum, Polycarbonate (PC)
Item Weight	350 g
Maximum Height	140 cm (55 inches)
Minimum Height (Folded Size)	31 cm (12.2 inches)
Phone Clamp Width	56mm - 92mm
Compatible Devices	Smartphones 4.7-7 inches (e.g., iPhone 11-17 Series, Samsung Galaxy S/Note/Z Flip Series, Google Pixel, OnePlus, Motorola, Sony Xperia)
Bluetooth Remote	Bluetooth 5.0, Rechargeable (USB-C), 50mAh capacity, >20,000 photos per charge, 10m wireless range
Shooting Modes	Portrait, Landscape, Overhead
Head Type	Pan Heads

Feature	Detail
Water Resistance Level	Not Water Resistant

8. WARRANTY & SUPPORT

8.1 Warranty Information

This SYNCWIRE product comes with a **3-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact SYNCWIRE customer support through the retailer where the product was purchased or visit the official SYNCWIRE website for contact information. Please have your purchase receipt and product model number (SW-SS126) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

