

Intex 44114

Intex 44114 Swing Set Instruction Manual

Model: 44114

1. IMPORTANT SAFETY INFORMATION

Read and understand all instructions before assembly and use. Failure to follow these instructions can result in serious injury. This swing set is designed for domestic outdoor use only. Adult supervision is required at all times.

- **Age Recommendation:** The flexible swing seat is suitable for children aged 3-10 years. The interchangeable child seat with backrest is suitable for children aged 1.5-5 years.
- **Maximum Weight Capacity:** The maximum recommended weight per seat is 50 kg (110 lbs). Do not exceed this limit.
- **Anchoring:** The swing set **must** be securely anchored to the ground using the provided stakes to prevent tipping during use.
- **Clearance Area:** Ensure a safe clearance area of at least 2 meters (6.5 feet) around the entire swing set, free from obstacles such as fences, trees, clotheslines, or other play equipment.
- **Regular Inspection:** Periodically check all nuts, bolts, and connections for tightness. Inspect chains, seats, and frame for signs of wear, damage, or rust. Replace worn or damaged parts immediately.
- **Assembly:** Assembly must be performed by a competent adult.

2. PRODUCT OVERVIEW

The Intex 44114 is a versatile 2-in-1 swing set designed for children, offering both a flexible swing seat and an interchangeable child seat with a backrest. Its robust A-frame design and galvanized steel construction ensure durability and rust resistance.

Key Features:

- 2-in-1 design with interchangeable seats.

- Durable galvanized steel frame with a robust A-design.
- Flexible swing seat with height-adjustable, plastic-coated chains.
- Additional child seat with backrest for younger children.
- Includes ground anchoring stakes for stability.



Image 2.1: The Intex 44114 Swing Set featuring the flexible orange seat.

3. PRODUCT COMPONENTS

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Galvanized Steel Frame Components (various poles and connectors)
- Flexible Swing Seat (orange)
- Child Seat with Backrest (orange)
- Swing Chains (plastic-coated)
- Carabiner Clips (for attaching seats)
- Ground Anchoring Stakes

- Assembly Hardware (bolts, nuts, washers)



Image 3.1: Side view of the swing set, showing the A-frame structure and flexible seat.

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be simple and quick. Follow these steps carefully. It is recommended to have two adults for assembly.

1. **Unpack Components:** Lay out all frame components, hardware, and seats on a clean, flat surface. Verify all parts are present against the component list.
2. **Assemble the A-Frame:** Connect the steel poles according to the diagrams in your separate assembly guide (not provided here). Ensure all bolts are securely tightened.
3. **Attach the Top Bar:** Secure the horizontal top bar to the assembled A-frames. Double-check all connections for stability.
4. **Attach Swing Chains:** Use the provided carabiner clips to attach the swing chains to the designated

loops on the top bar.

5. **Install Seats:** Attach either the flexible swing seat or the child seat to the chains using the carabiner clips. Ensure the clips are fully closed and secure.
6. **Position the Swing Set:** Move the assembled swing set to its final desired location, ensuring it is on level ground and within the required clearance area.
7. **Anchor the Swing Set:** Insert the ground anchoring stakes through the designated holes at the base of the swing set legs and drive them firmly into the ground. This step is critical for safety.

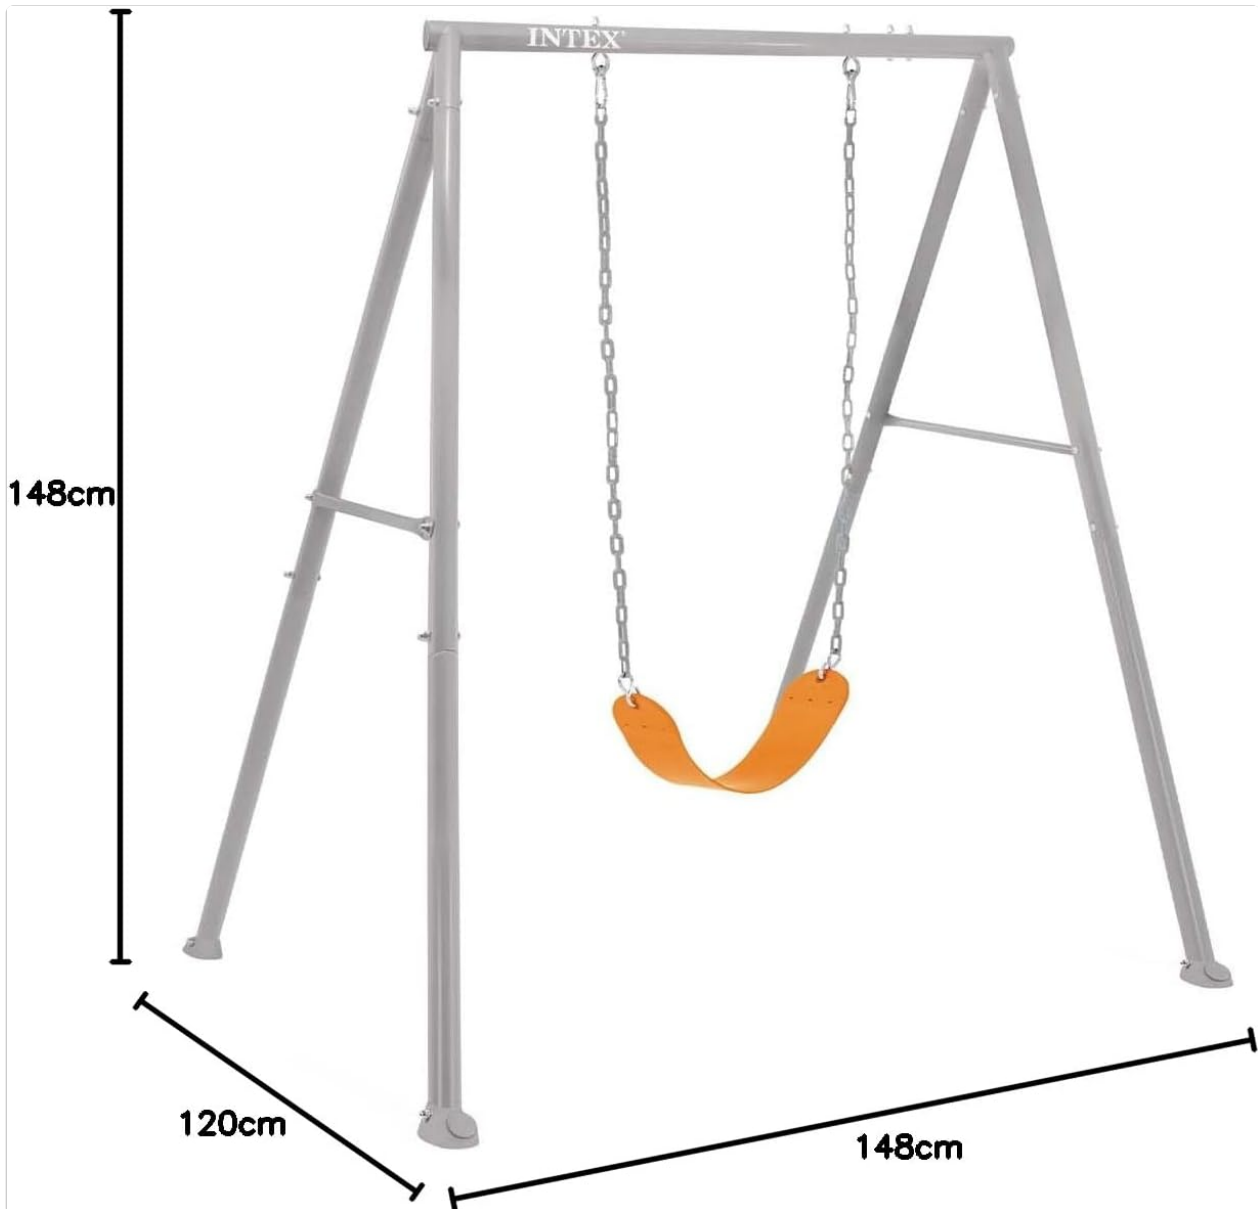


Image 4.1: Dimensions of the assembled swing set, useful for planning placement.



Image 4.2: Detail of the ground anchoring stake for secure installation.

5. OPERATING INSTRUCTIONS

Ensure children use the swing set safely and under adult supervision.

Using the Flexible Swing Seat:

- This seat is for children aged 3-10 years, up to 50 kg.
- Ensure the child can sit securely and hold onto the chains.
- Adjust chain height so the child's feet can comfortably touch the ground when seated, allowing for safe

entry and exit.





Image 5.1: The flexible orange swing seat.

Using the Child Seat with Backrest:

- This seat is for children aged 1.5-5 years, up to 50 kg.
- The backrest provides additional support for younger children.
- Always ensure the child is properly seated and secured before swinging.



Image 5.2: The orange child swing seat with backrest.



Image 5.3: A child enjoying the swing set with the child seat.

Changing Seats:

The seats are interchangeable using the carabiner clips. To change a seat:

1. Ensure no one is on the swing set.
2. Open the carabiner clips at the end of the swing chains.
3. Remove the current seat.
4. Attach the desired seat by hooking its loops onto the open carabiner clips.
5. **Crucially, ensure the carabiner clips are fully closed and locked before use.**



Image 5.4: A closed carabiner clip, ensuring secure attachment.



Image 5.5: An open carabiner clip, ready for seat interchange.

6. MAINTENANCE AND CARE

Regular maintenance will prolong the life of your swing set and ensure continued safety.

- **Monthly Inspection:** Check all nuts, bolts, and connections for tightness. Tighten any loose hardware.
- **Chains and Seats:** Inspect swing chains for wear, rust, or damage. Check seats for cracks, tears, or excessive wear. Replace any damaged components immediately.
- **Frame:** Although made of galvanized steel, inspect the frame for any signs of rust, especially at joints or scratched areas. Clean any dirt or debris from the frame.
- **Anchoring:** Periodically check that the ground anchoring stakes are still firmly in place and the swing set remains stable.
- **Cleaning:** Clean the swing set with mild soap and water. Avoid abrasive cleaners or harsh chemicals.
- **Winter Storage:** In colder climates, consider disassembling and storing the swing set indoors during winter months to protect it from harsh weather conditions and extend its lifespan.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Swing Set Feels Unstable:**
Solution: Ensure the swing set is on level ground. Re-check that all ground anchoring stakes are fully driven into the ground. Verify all frame bolts are securely tightened.
- **Squeaking Noises:**
Solution: Apply a small amount of silicone-based lubricant to the pivot points where the chains attach to the top bar, and to any moving parts of the carabiner clips.
- **Seat Not Attaching Securely:**
Solution: Ensure the carabiner clips are fully closed and the locking mechanism (if present) is engaged. Inspect clips for damage or deformation.
- **Rust Spots Appearing:**
Solution: While the frame is galvanized, minor scratches can expose metal. Clean the rust spot with a wire brush, then apply a rust-inhibiting primer and paint suitable for outdoor metal.

8. PRODUCT SPECIFICATIONS

Specification	Detail
Model Number	44114
Dimensions (L x W x H)	235 cm x 170 cm x 200 cm (92.5 in x 67 in x 78.7 in)
Item Weight	20.6 Kilograms (45.4 lbs)
Material	Galvanized Steel (frame), Metal (general), Plastic (chains coating, seats)
Color	Grey (frame), Orange (seats)
Maximum Weight Recommendation	50 Kilograms (110 lbs) per seat
Number of Seats	2 (1 flexible, 1 child seat)
Assembly Required	Yes
Recommended Age	3-10 years (flexible seat), 1.5-5 years (child seat)

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, replacement parts, or further assistance, please contact Intex customer support. Refer to the packaging or the official Intex website for the most current contact details and warranty terms applicable to your region.

Official Intex Website: www.intexcorp.com

