

## Beko VRT84225VI

# Beko ErgoClean VRT84225VI 350W Cordless Vacuum Cleaner

## User Manual

### 1. INTRODUCTION

---

Welcome to your new Beko ErgoClean VRT84225VI Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Beko ErgoClean VRT84225VI is a powerful 350W cordless vacuum cleaner designed for versatile cleaning across various surfaces. It features multiple suction settings, a long-lasting Lithium-Ion battery, and specialized attachments for comprehensive home cleaning.

### 2. SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger specified by the manufacturer.
- Store the appliance indoors after use to prevent accidents.

### 3. PACKAGE CONTENTS

---

Your Beko ErgoClean VRT84225VI package includes the following components:

- Main Vacuum Unit
- Extension Tube (ActiFlex™)
- Electric Turbo Brush with LED Lighting
- Charging Dock / Wall Mount
- Crevice Tool
- Dusting Brush
- Flexible Hose (if included, check packaging)
- Mop Pads (2x) and Water Tank (300ml)
- Power Adapter
- User Manual



Image: All components of the Beko ErgoClean VRT84225VI Cordless Vacuum Cleaner, including the main unit, extension tube, floor head, various nozzles, wall mount, and mop pads.

## 4. PRODUCT DIAGRAM

---

Familiarize yourself with the different parts of your vacuum cleaner.



Image: The Beko ErgoClean VRT84225VI Cordless Vacuum Cleaner assembled in its stick configuration, showing the main unit, extension tube, and floor head.

1. **Main Unit:** Contains the motor, dustbin, and control panel.
2. **Dustbin Release Button:** For emptying the dust container.
3. **Control Panel:** Displays battery level and suction mode, allows mode selection.
4. **Extension Tube (ActiFlex™):** Connects the main unit to the floor head or other attachments. Features a flexible joint for reaching under furniture.
5. **Floor Head (Electric Turbo Brush):** Equipped with LED lights and a rotating brush for effective cleaning of various floor types.

6. **Attachment Release Buttons:** For detaching accessories.
7. **Charging Port:** For connecting the power adapter.

## 5. SETUP

---

### 5.1 Assembly

1. **Attach the Extension Tube:** Align the extension tube with the main vacuum unit and push until it clicks into place.
2. **Attach the Floor Head:** Connect the electric turbo brush floor head to the other end of the extension tube, ensuring it clicks securely.
3. **Install Wall Mount (Optional):** Choose a suitable location near a power outlet. Secure the charging dock/wall mount to the wall using the provided screws and anchors.

### 5.2 Initial Charging

Before first use, fully charge the vacuum cleaner's battery.

1. Connect the power adapter to the charging port on the main unit or the charging dock.
2. Plug the adapter into a wall outlet.
3. The battery indicator on the control panel will show charging status. A full charge typically takes 4 to 6 hours.
4. Once fully charged, the indicator will show a full battery, and the vacuum is ready for use.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Power On/Off and Suction Settings

1. **Power On:** Press the power button on the handle. The vacuum will start in the default suction mode.
2. **Adjust Suction:** Your vacuum has 3 power levels. Press the mode selection button on the control panel to cycle through the suction settings (Low, Medium, High) to suit your cleaning needs.
3. **Power Off:** Press the power button again to turn off the vacuum cleaner.

### 6.2 Using Attachments

The Beko ErgoClean VRT84225VI comes with various attachments for different cleaning tasks:

- **Electric Turbo Brush:** Ideal for carpets and hard floors. The integrated LED lights illuminate dust and debris.
- **Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **Dusting Brush:** Use for delicate surfaces, upholstery, and curtains.
- **Wet Cleaning Function:** Fill the 300ml water tank and attach the mop pads to the designated area on the floor head for wet cleaning hard floors.



Image: A person operating the Beko ErgoClean VRT84225VI Cordless Vacuum Cleaner on a wooden floor, demonstrating its use in a living space.

### 6.3 ActiFlex™ Feature

The ActiFlex™ extension tube allows the vacuum to bend, making it easier to clean under low furniture without excessive bending. Simply press the release button on the tube to activate the flexible joint.

## 7. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 7.1 Emptying the Dustbin

The 550ml dustbin should be emptied regularly, especially when the MAX fill line is reached.

1. Ensure the vacuum is turned off.
2. Hold the main unit over a trash can.
3. Press the dustbin release button to open the bottom flap and empty the contents.
4. Close the flap securely until it clicks.

## 7.2 Cleaning Filters

The cyclone filter system requires periodic cleaning.

1. Twist and pull to remove the dustbin from the main unit.
2. Remove the filter assembly from the dustbin.
3. Tap the filters gently to remove loose dust. For a deeper clean, rinse the filters under cold running water.
4. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.

## 7.3 Cleaning the Electric Turbo Brush

Hair and debris can get tangled in the brush roll.

1. Turn off the vacuum and detach the floor head.
2. Locate the brush roll access cover (usually on the side or bottom of the floor head) and open it.
3. Remove the brush roll. Use scissors to cut away any tangled hair or fibers.
4. Clean any debris from the brush roll housing.
5. Reinsert the brush roll and close the access cover securely.

## 7.4 Battery Care

To maximize battery life:

- Always fully charge the battery before first use.
- Avoid completely draining the battery before recharging.
- Store the vacuum in a cool, dry place when not in use.

## 8. TROUBLESHOOTING

If you encounter issues with your Beko ErgoClean VRT84225VI, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is discharged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dustbin is full Filters are clogged Hose/nozzle is blocked Brush roll is tangled	Empty the dustbin Clean or replace filters Check and clear any blockages Clean the brush roll
Battery not charging	Charger not connected properly Power outlet not working Damaged charger/battery	Ensure charger is securely plugged in Test the outlet with another appliance Contact customer support for replacement parts
Brush roll not rotating	Brush roll is tangled Obstruction in the floor head	Clean the brush roll of hair and debris Remove any obstructions from the floor head

If the problem persists after trying these solutions, please contact Beko customer support.

## 9. SPECIFICATIONS

Feature	Specification
Model Number	VRT84225VI
Brand	Beko
Power	350 Watts
Voltage	25.2 Volts
Battery Type	Lithium-Ion
Run Time	Up to 45 minutes
Charge Time	4-6 hours
Dustbin Capacity	550 ml
Water Tank Capacity	300 ml
Filter Type	Cyclone
Suction Settings	3 levels
Noise Level	85 Decibels
Weight	2.4 Kilograms
Dimensions (L x W x H)	26 cm x 22 cm x 110 cm
Recommended Use	Indoor cleaning of floors, carpets, and surfaces

## 10. WARRANTY AND SUPPORT

### 10.1 Warranty Information

Your Beko ErgoClean VRT84225VI Cordless Vacuum Cleaner is covered by a standard Beko warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

### 10.2 Customer Support

For technical assistance, spare parts, or service inquiries, please contact Beko customer support. You can find contact details on the Beko official website or on your product's warranty documentation.

**Online Support:** Visit the official Beko website for FAQs, troubleshooting guides, and service center locations.

**Phone Support:** Refer to your warranty card or the Beko website for local customer service telephone numbers.

© 2026 Beko. All rights reserved.