

[Manuals.plus](#) /

› [eKids](#) /

› eKids Spiderman Kids Camera SM-533 User Manual

eKids SM-533

eKids Spiderman Kids Camera User Manual

Model: SM-533

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your eKids Spiderman Kids Camera, model SM-533. This digital camera is designed for children, offering easy-to-use controls for capturing photos and videos, along with built-in digital stickers and games for enhanced fun. Please read this manual thoroughly before operating the device.

WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- eKids Spiderman Kids Camera (SM-533)
- 512MB SD Card
- Micro USB Cable
- Wrist Strap



Image: The eKids Spiderman Kids Camera, showing the front and back views, along with the included 512MB SD card, micro USB cable, and wrist strap.

SETUP

Battery Installation

The camera requires 3 AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the camera.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

SD Card Insertion

The camera comes with a 512MB SD card. This card must be inserted for the camera to store photos and videos.

1. Locate the SD card slot on the side of the camera.

2. Gently insert the 512MB SD card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove the SD card, gently push it inward until it springs out.



Image: A detailed diagram illustrating the various components of the eKids Spiderman Kids Camera, including the camera lens, display, speaker, microphone, control buttons (Power, Up, Forward/Photo Frames, Reverse/Mode Select, Down, Reset, Camera Shutter/OK Button), indicator light, SD card slot, and Micro USB port. Dimensions are also shown.

OPERATING THE CAMERA

Power On/Off

- To power on the camera, press and hold the **Power** button.
- To power off the camera, press and hold the **Power** button again.

Basic Functions: Photo and Video

The camera features a 2-inch full-color screen for viewing your captures.



Image: A child holding the eKids Spiderman Kids Camera, with an overlay showing icons representing its features: Photo, Video, 8 Level Zoom, 5 Games, 512 MB SD Card, Self Timer, and Funny Filters & Spiderman Graphics.

- **Taking Photos:** In photo mode, press the **Camera Shutter / OK** button to capture a still image.
- **Recording Videos:** In video mode, press the **Camera Shutter / OK** button once to start recording and again to stop recording. The camera records 1080p video.



Image: Four screen captures from the camera's display, illustrating the main functions: 'Play Games!', 'Play Music!', 'Take Photos!', and 'Record Video!'.

Special Features

- **Digital Stickers & Photo Frames:** Enhance your photos with over 25 built-in Spiderman-inspired photo frames and digital stickers. Use the **Forward / Photo Frames** button to browse options.
- **Built-in Games:** The camera includes 5 built-in games for entertainment. Navigate to the game menu using the **Mode Select** button and select a game using the **Up** and **Down** buttons.



Image: The back of the eKids Spiderman Kids Camera, displaying one of the built-in games on its screen. Below the camera, icons for the 5 included games are shown.

- **Self-Timer:** Utilize the self-timer function for delayed photo capture. Options typically include 2, 5, or 10-second delays.
- **Digital Zoom:** The camera features an 8-level digital zoom for both photos and videos.

Viewing and Transferring Content

- **Viewing on Camera:** Use the **Forward** and **Reverse** buttons to scroll through your captured photos and videos on the 2-inch color screen.
- **Connecting to Computer:** To transfer photos and videos, connect the camera to your computer using the included Micro USB cable. The camera will appear as a removable storage device, allowing you to copy files.



Image: The eKids Spiderman Kids Camera displayed next to text indicating it can 'Store up to 1200 Photos & Record Videos'. Examples of photos enhanced with digital Spiderman graphics are also shown.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the screen, use a microfiber cloth specifically designed for electronics. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** This camera is **not** water resistant. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Batteries are dead or incorrectly installed.	Replace with new AA batteries, ensuring correct polarity.
Cannot take photos/videos.	SD card is full or not inserted.	Ensure SD card is properly inserted. Transfer files to a computer to free up space or replace with a new SD card.
Images/videos are blurry.	Lens is dirty or lighting is poor.	Clean the camera lens with a soft cloth. Ensure adequate lighting when taking photos/videos.
Accidentally deleted all photos.	The camera has a 'Delete All' function.	Exercise caution when navigating menus, especially the delete options. There is no recovery function on the camera itself once files are deleted.

SPECIFICATIONS

Feature	Specification
Model Name	SM-533
Brand	eKids
Display Screen Size	2 Inches
Display Type	LCD, Full Color
Photo Sensor Resolution	1.95 MP (Maximum Webcam Image Resolution)
Effective Still Resolution	16 MP
Video Resolution	1080p
Supported File Formats	JPEG (Photos), AVI (Video)
Internal Memory	Not specified (uses SD card)
External Memory	512 MB SD Card included (expandable)
Power Source	3 x AA Batteries (not included)
Connectivity	Micro USB
Dimensions (D x W x H)	4.16" x 1.26" x 3.26"
Special Features	Built-in Spiderman stickers/frames, 5 built-in games, Digital Zoom, Self-Timer
Water Resistance	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official eKids website. Keep your purchase receipt as proof of purchase for any warranty claims. You can also visit the [eKids Store on Amazon](#) for more information and products.

© 2024 eKids. All rights reserved. Spiderman and related characters are trademarks of Marvel.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question