

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BRUNO](#) /

› [BRUNO Compact Multi Grill Pot BOE115 User Manual](#)

BRUNO BOE115

BRUNO Compact Multi Grill Pot BOE115 User Manual

Model: BOE115

1. INTRODUCTION AND OVERVIEW

The BRUNO Compact Multi Grill Pot BOE115 is a versatile tabletop electric pot designed for 1-2 people. This appliance is capable of performing four primary cooking functions: boiling, grilling, steaming, and cooking. Its compact size and interchangeable plates make it suitable for preparing a wide range of dishes, from main courses to appetizers and desserts. Enjoy easy hot pot meals, healthy steamed dishes, and engaging grilled foods all year round with this single unit. All removable plates are designed for easy cleaning, making daily cooking and cleanup more convenient.

煮る・焼く・蒸す・炊くをマルチにこなす

1台4役の卓上電気鍋

煮る



鍋物やおでん、カレーなど
煮込み料理に

焼く



肉や魚、野菜などの
グリル料理に

蒸す



本格蒸し料理が
おうちで手軽に

炊く



白米はもちろん
玄米や炊き込みご飯も

おかず・おつまみ・スイーツなど
付属プレートを変えてメインからサブ使いまで活躍！

Image 1: The BRUNO Compact Multi Grill Pot demonstrating its four cooking functions: boiling, grilling, steaming, and cooking rice.

2. SAFETY PRECAUTIONS

- Always read all instructions thoroughly before using the appliance.
- Do not immerse the main unit, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and pets.
- Use the appliance only on a stable, flat, and heat-resistant surface.
- Unplug the appliance from the power outlet when not in use, before cleaning, or before attaching/removing parts.
- Do not touch hot surfaces. Always use oven mitts or handles when moving or handling hot parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure the voltage rating of the appliance matches your local power supply.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Main Unit
- Lid (Glass)
- Pot (Stainless Steel)
- Grill Plate (Non-stick coated)
- Steamer

シンプルなパーツ

ガラス蓋

耐熱ガラス製で、蓋をしたまま調理の様子を確認できます。



蒸す 蒸し器

鍋と組み合わせてさまざまな食材が蒸せて、水分や旨味を逃さず調理できます。



本体

600Wの低消費電力設計。



焼く グリルプレート

底面の凹凸できれいな焼き目に。ふっ素加工で焦げつきにくく、洗しやすい仕様です。



炊く 焼く 鍋

ステンレス製の洗しやすい仕様です。鍋物や煮込み料理にぴったりです。



Image 2: All components of the BRUNO Compact Multi Grill Pot.

4. PRODUCT FEATURES

- **Multi-functional Design:** This single appliance can boil, grill, steam, and cook, offering diverse culinary options.
- **Compact Size:** Perfectly sized for 1-2 servings, making it ideal for small households or individual use.
- **Interchangeable Plates:** Easily switch between the pot, grill plate, and steamer to prepare various dishes.
- **Stepless Temperature Control:** Adjust the heat precisely from 'Warm' to 'High' for optimal cooking results.
- **Easy to Clean:** All removable plates are fully washable, simplifying post-cooking cleanup.
- **Portable:** Equipped with two handles for convenient carrying and storage.
- **Durable Glass Lid:** Allows for easy monitoring of the cooking process without lifting the lid.
- **Non-stick Grill Plate:** Features a fluorine resin coating to prevent food from sticking, ensuring easy grilling and cleaning.



Image 3: The BRUNO Compact Multi Grill Pot.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the pot, grill plate, steamer, and glass lid with warm water and mild dish soap. Rinse thoroughly and dry completely. Do not wash the main unit.
3. **Placement:** Place the main unit on a stable, flat, and heat-resistant surface, ensuring adequate ventilation around the appliance.
4. **Assemble:** Insert the desired cooking plate (pot, grill plate, or steamer) into the main unit.
5. **Power Connection:** Plug the power cord into a suitable electrical outlet. Ensure the temperature dial is set to 'OFF' before plugging in.

6. OPERATING INSTRUCTIONS

Temperature Control

The appliance features a stepless temperature control dial. Turn the dial to select the desired heat level, ranging from 'OFF' to 'WARM', 'LOW', 'MED', and 'HI'. The indicator light will illuminate when the unit is heating.

無段階温度調節



保温から強火まで温度調節が可能です。鍋料理やヘルシーな蒸し料理、肉料理に最適なグリルプレートを使って、幅広い料理がこれ1台でオールシーズン楽しめます。



Image 4: Temperature control dial.

Cooking Functions

- **Boiling/Stewing (Using the Pot):** Place the pot into the main unit. Add ingredients and liquid. Select the desired temperature setting. The pot is suitable for hot pot dishes, stews, curries, and soups.
- **Grilling (Using the Grill Plate):** Place the grill plate into the main unit. Lightly brush the grill plate with cooking oil. Preheat the grill plate to 'HI' for a few minutes. Place food items like meat, fish, or vegetables directly onto the hot grill plate. Adjust temperature as needed.
- **Steaming (Using the Steamer):** Place the pot into the main unit and add water (ensure water level is below the steamer). Place the steamer into the pot. Arrange food items in the steamer. Cover with the glass lid. Set the temperature to 'HI' until steam is produced, then adjust to maintain a steady steam.
- **Cooking Rice (Using the Pot):** The pot has an approximate capacity of 800ml, suitable for cooking up to 2 cups of white rice. Follow standard rice cooking ratios for water and rice.



Image 5: The grill pot in use for a meal.

7. CLEANING AND MAINTENANCE

- **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
- **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Removable Parts:** The pot, grill plate, steamer, and glass lid are fully washable. Wash them with warm water and mild dish soap using a soft sponge. Rinse thoroughly to remove all soap residue.

- **Drying:** Ensure all parts are completely dry before reassembling or storing the appliance.
- **Avoid Abrasives:** Do not use abrasive cleaners, metal scouring pads, or harsh chemicals, as these can damage the non-stick coating and other surfaces.
- **Storage:** Store the clean and dry appliance in a cool, dry place. The parts can be stacked for compact storage.

お手入れ簡単



本体は拭き取りやすい構造でお手入れ簡単。
本体以外の各プレートは丸洗い可能です。

Image 6: Easy cleaning of the main unit.

8. TROUBLESHOOTING

- **Appliance does not turn on:**
 - Check if the power cord is securely plugged into both the appliance and the electrical outlet.
 - Ensure the temperature dial is not set to 'OFF'. Turn it to a heat setting.
- **Food not cooking evenly:**
 - Ensure ingredients are spread out evenly on the cooking surface.
 - Adjust the temperature setting as needed. Allow the appliance to preheat sufficiently before adding food.
- **Excessive smoke or unusual odor:**
 - A slight odor may occur during the first few uses, which is normal.
 - If excessive smoke or a persistent unusual odor occurs, immediately unplug the appliance and contact customer support. Ensure no food residue is burning on the heating element.
- **Food sticking to the grill plate:**
 - Ensure the grill plate was lightly oiled before adding food.
 - Avoid using metal utensils that can damage the non-stick coating.

9. SPECIFICATIONS

Specification	Detail
Brand	BRUNO

Model Number	BOE115
Color	Blue Green
Product Dimensions (D x W x H)	23 cm x 20 cm x 19.5 cm
Wattage	600 W
Voltage	100 V
Product Weight	1500 grams
Country of Origin	China
Included Items	Lid



Image 7: Product dimensions.

10. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official BRUNO website. In case of any issues or for customer support, please contact your retailer or the BRUNO customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

11. PRODUCT VIDEOS

Electric Pot Usage

Video 1: This video demonstrates the general usage of an electric pot, showcasing various cooking applications and ease of operation. It highlights the versatility of such appliances in preparing different meals.