

Mosonnytee YYK-580

Mosonnytee YYK-580 Pro Wireless Earbuds

Instruction Manual

INTRODUCTION

Thank you for choosing the Mosonnytee YYK-580 Pro Wireless Earbuds. These earbuds are designed to provide a comfortable and secure audio experience, particularly for active lifestyles. Featuring advanced sound technology and robust battery life, they are suitable for various activities including workouts, running, and daily commutes.

- **Ultra Comfort & Fit:** Designed with 15° micro-tilt and ergonomic TPU flexible earhooks for a secure and comfortable fit during exercise.
- **Premium Bass Sound Quality:** Equipped with a built-in 13MM dynamic drive coil unit, enhanced by a high-performance algorithm and special echo chamber structure for rich bass and clear mid-range/treble.
- **Extended Playtime & Fast Charging:** Offers up to 8 hours of single usage playtime, with the wireless charging case providing an additional 60 hours of power. Features USB-C fast charging, fully charging in 2 hours.
- **IPX7 Waterproof & Sweatproof:** Provides protection against sweat and rain, ensuring durability during intense physical activity.
- **Multi-scenario Use:** Ergonomic design with anti-slip structure ensures stable fitting for activities like running, gym training, cycling, and boxing.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- Mosonnytee YYK-580 Pro Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Ear Tips
- Instruction Manual


Your browser does not support the video tag.

Video: Unboxing the Mosonnytee YYK-580 Pro Wireless Earbuds, showing the earbuds, charging case, USB-C cable, and ear tips.

PRODUCT OVERVIEW




Earbuds in Charging Case with LED Display

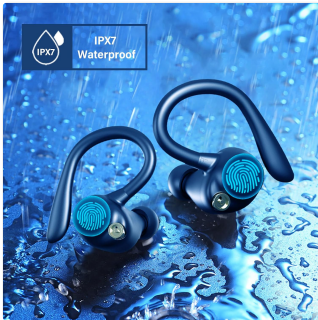

Ergonomic Earhook Design



13MM Dynamic Driver for Sound Quality

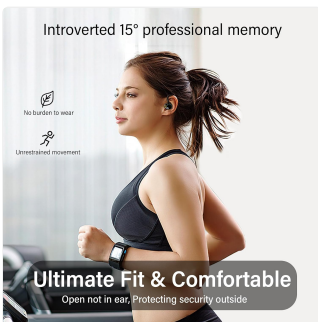

Secure Fit for Active Use

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case.

1. Place the earbuds into the charging case. Ensure they are correctly seated.
2. Connect the USB-C charging cable to the charging port on the case and plug the other end into a USB power adapter (not included) or a computer's USB port.

3. The LED display on the charging case will indicate the charging status. A full charge typically takes about 2 hours.

2. Pairing with Your Device

The earbuds will automatically enter pairing mode when removed from the charging case.

1. Open the charging case and remove both earbuds. They will automatically power on and attempt to pair with each other.
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn on Bluetooth.
3. Look for "YYK-580 Pro" in the list of available devices and select it to connect.
4. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

3. Wearing the Earbuds

For optimal sound quality and secure fit, ensure the earbuds are worn correctly.

1. Identify the Left (L) and Right (R) earbuds.
2. Gently place the earbud into your ear canal and rotate it slightly to ensure a snug fit.
3. Adjust the flexible earhook over your ear to secure the earbud in place.
4. Experiment with different ear tip sizes to find the most comfortable and secure fit.

Your browser does not support the video tag.

Video: Demonstrates the lightweight design and secure fit of the earbuds with earhooks, ideal for running and workouts.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on. Alternatively, press and hold the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off. Alternatively, press and hold the touch control area on both earbuds for 5 seconds.

Music Playback

- **Play/Pause:** Single tap the touch control area on either earbud.
- **Next Track:** Double tap the touch control area on the Right earbud.
- **Previous Track:** Double tap the touch control area on the Left earbud.

Call Management

- **Answer/End Call:** Single tap the touch control area on either earbud.
- **Reject Call:** Press and hold the touch control area on either earbud for 2 seconds.

Volume Control

- **Volume Up:** Triple tap the touch control area on the Right earbud.
- **Volume Down:** Triple tap the touch control area on the Left earbud.

Voice Assistant

- **Activate Voice Assistant:** Press and hold the touch control area on either earbud for 2 seconds (when not on a call).

MAINTENANCE

Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical sprays.
- For ear tips, remove them from the earbuds and wash with mild soap and water if necessary. Ensure they are completely dry before reattaching.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

Battery Care

- Avoid fully discharging the battery frequently.
- Charge the earbuds and case regularly, even if not used for extended periods, to maintain battery health.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing with device	<ul style="list-style-type: none">• Ensure earbuds are charged.• Turn off and on Bluetooth on your device.• Forget "YYK-580 Pro" from your device's Bluetooth list and re-pair.• Place earbuds back in case, close lid, wait 5 seconds, then remove to re-enter pairing mode.
No sound from one or both earbuds	<ul style="list-style-type: none">• Check device volume and earbud volume.• Ensure earbuds are properly connected to your device.• Try resetting the earbuds (refer to manufacturer's specific reset instructions if available).
Charging case not charging	<ul style="list-style-type: none">• Verify the USB-C cable is securely connected to both the case and power source.• Try a different USB-C cable or power adapter.• Ensure the charging port is clean and free of debris.
Earbuds fall out during activity	<ul style="list-style-type: none">• Adjust the earhooks to fit snugly over your ears.• Try different sizes of ear tips to find a more secure fit in your ear canal.• Ensure the earbuds are inserted correctly according to the wearing instructions.

SPECIFICATIONS

Feature	Detail
Model Name	YYK-580 Pro

Feature	Detail
Brand	Mosonnytee
Connectivity Technology	Bluetooth 5.0
Ear Placement	Over Ear
Audio Driver Type	13MM Dynamic Driver
Battery Life (Earbuds)	Up to 8 hours (single usage)
Total Playtime (with Charging Case)	Up to 60 hours
Charging Time	Approx. 2 hours
Charging Interface	USB-C
Water Resistance Level	IPX7
Control Type	Touch, Media Control
Noise Control	Active Noise Cancellation
Material	Plastic
Item Weight	10.4 ounces

WARRANTY INFORMATION

For detailed warranty information, please refer to the product packaging or visit the official Mosonnytee brand store on Amazon. Warranty terms and conditions may vary.

SUPPORT

Should you encounter any issues or have questions regarding your Mosonnytee YYK-580 Pro Wireless Earbuds, please contact customer support through the Amazon platform or visit the [Mosonnytee Store on Amazon](#) for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question