

JVD 8661773

JVD Velyss Handheld Steamer Model 8661773 User Manual

1. INTRODUCTION

This manual provides instructions for the safe and effective operation, maintenance, and troubleshooting of your JVD Velyss Handheld Steamer, Model 8661773. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage before connecting.
- Do not immerse the steamer in water or any other liquid.
- Keep the steamer out of reach of children and pets.
- Exercise caution when handling hot steam. Keep hands and face away from the steam nozzle during operation.
- Unplug the steamer from the power outlet before filling with water, cleaning, or when not in use.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Use only distilled or demineralized water to prevent mineral buildup and prolong the life of the appliance.
- Never direct steam at people or animals.

3. PRODUCT OVERVIEW

The JVD Velyss Handheld Steamer is designed for efficient garment care, featuring a powerful 1500W heating element and a 300ml water capacity. It includes a steam burst function, anti-drip, and anti-scale technologies for consistent performance.







This image displays the top of the JVD Velyss Handheld Steamer, highlighting the central power button and the steam indicator lights located above it. These indicators provide visual feedback on the steamer's status.

Components:

- Steam Nozzle
- Water Tank (300ml capacity)
- Power Button
- Steam Indicator Lights
- Power Cord

4. SETUP

1. Ensure the steamer is unplugged from the power outlet.
2. Open the water tank cap.
3. Fill the water tank with distilled or demineralized water up to the maximum fill line. Do not overfill.
4. Close the water tank cap securely.



This image illustrates a hand engaging with the side panel of the JVD Velyss Handheld Steamer, which includes the water filling port and operational icons for water, steam, and power. This demonstrates how to prepare the steamer for use.

5. OPERATING INSTRUCTIONS

1. After filling the water tank, plug the steamer into a 220V-240V power outlet.
2. Press the power button. The indicator lights will illuminate, indicating the steamer is heating up.
3. Wait for the steamer to reach operating temperature. This usually takes a few seconds, and the indicator light may change or stop blinking.
4. Hold the garment taut with one hand and move the steam nozzle over the fabric in a vertical motion.
5. For stubborn wrinkles, use the steam burst function by pressing the designated button (if available) to release an extra powerful burst of steam. The steamer provides a continuous steam output of up to 25 g/min and a 100 g steam boost.
6. The variable steam output allows you to adjust the steam intensity for different fabric types.
7. When finished, press the power button to turn off the steamer and unplug it from the outlet.



This image depicts a man effectively using the JVD Velyss Handheld Steamer to smooth out wrinkles on a suit jacket hanging on a garment rack. It demonstrates the steamer in active use for clothing care.

6. MAINTENANCE AND CLEANING

Emptying the Water Tank:

- After each use, ensure the steamer is unplugged and cooled down.
- Empty any remaining water from the tank to prevent mineral buildup.

Anti-Scale Technology:

The steamer is equipped with anti-scale technology to minimize mineral buildup. Regular use of distilled water further enhances this protection. Refer to the product's specific instructions for any self-cleaning functions or maintenance steps related to scale removal.

Cleaning the Exterior:

- Wipe the exterior of the steamer with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

Storage:

Store the steamer in a dry, cool place. The design allows for convenient hanging storage.



This image shows the JVD Velyss Handheld Steamer conveniently hung on a rail, illustrating a practical storage solution for the device when not in use.

7. TROUBLESHOOTING

- **No Steam:** Check if the steamer is plugged in and powered on. Ensure the water tank is filled. Allow sufficient time for heating.
- **Water Leaking:** Ensure the water tank cap is securely closed. Do not overfill the water tank.
- **Steamer Not Heating:** Verify the power connection. If the issue persists, discontinue use and contact support.
- **Low Steam Output:** Check for mineral buildup. Perform descaling if necessary (refer to specific descaling instructions if provided with the product). Ensure the water tank is adequately filled.

8. SPECIFICATIONS

Brand	JVD
Model Number	8661773
Wattage	1500 watts
Voltage	240 Volts
Capacity	300 Milliliters
Item Weight	1.5 Kilograms
Product Benefits	Fabric Refreshening
Features	Steam Burst, Anti-Drip, Anti-Scale Technology, Variable Steam Output, Non-Stick Coated Sole Plate

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question