

Hihaha EL3Z-14293-A

Fuel Pump Fuse Relocation Kit User Manual

Model: EL3Z-14293-A | Brand: Hihaha

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of your Hihaha Fuel Pump Fuse Relocation Kit. This kit is designed to address common issues associated with the original fuel pump fuse location in compatible Ford F-150 models, such as overheating and premature failure, by relocating the fuse to a more stable environment.

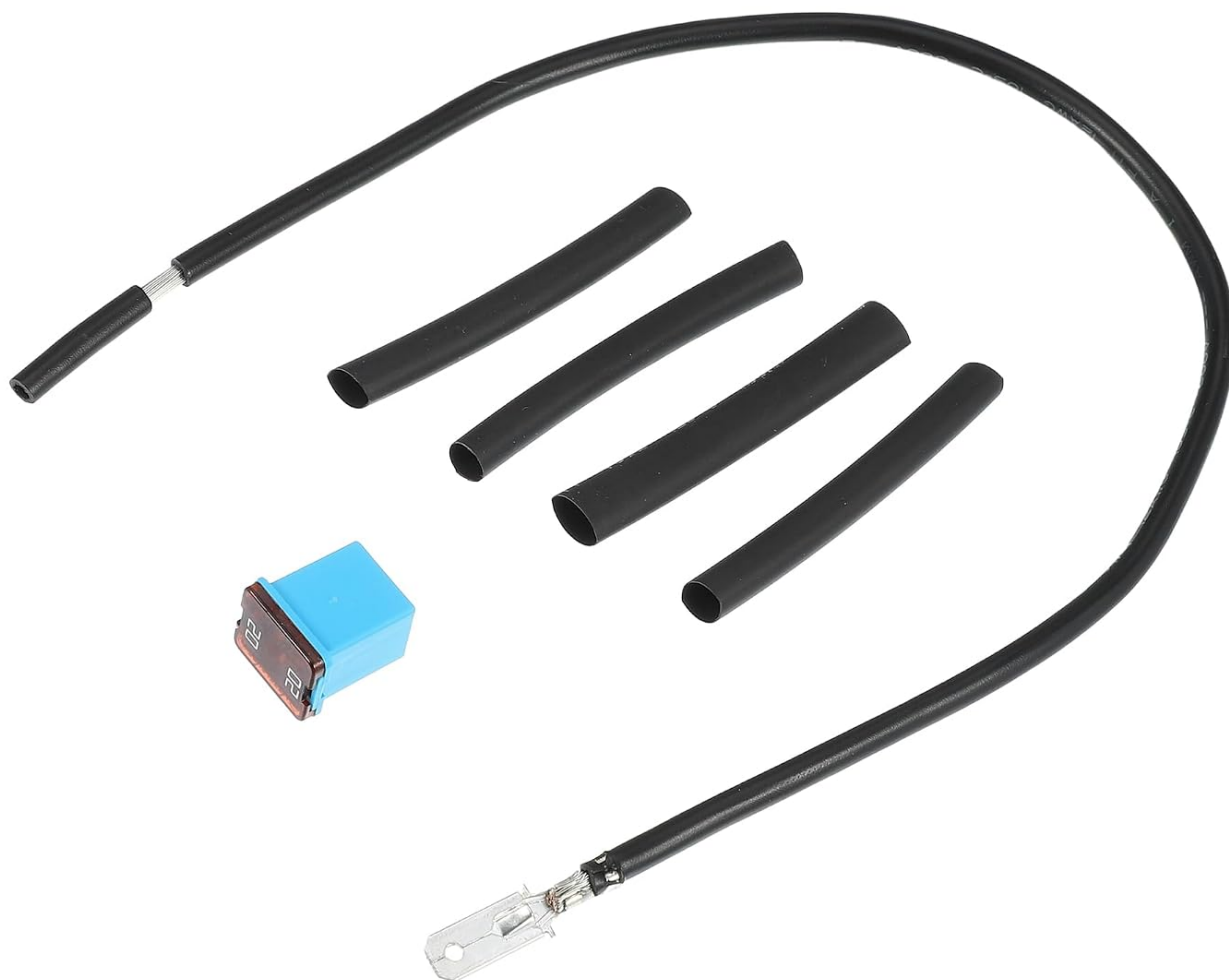


Image: The complete Fuel Pump Fuse Relocation Kit, including the wiring harness, fuse, and heat shrink tubing.

VEHICLE COMPATIBILITY

This Fuel Pump Fuse Relocation Kit is specifically designed for the following vehicle models:

- **Ford F-150:** 2009, 2010, 2011, 2012, 2013, 2014

PACKAGE CONTENTS

Upon opening the package, please ensure all components are present and undamaged:

- 1 Set Fuel Pump Fuse Relocation Kit (includes wiring harness, fuse, and heat shrink tubing)

DIRECT REPLACEMENT

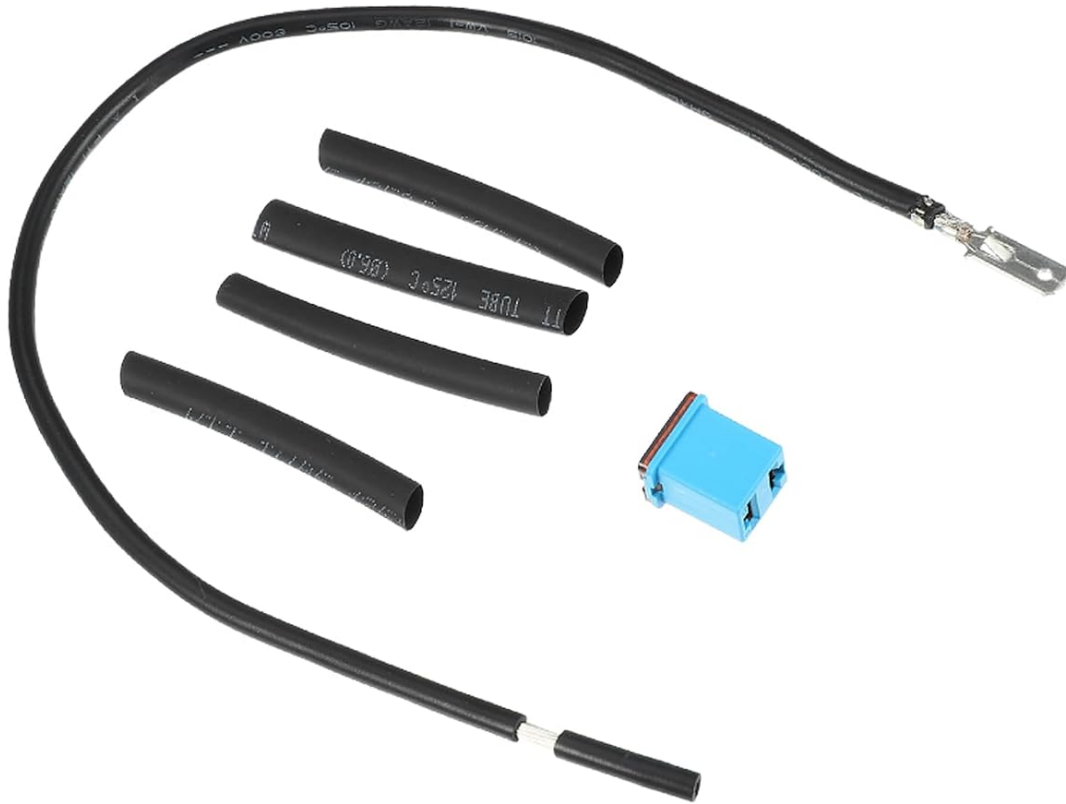


Image: A detailed view of the kit's components, highlighting the quality of the wiring and connectors for direct replacement.

SETUP AND INSTALLATION

Safety First: Before beginning any automotive electrical work, ensure the vehicle's battery is disconnected to prevent electrical shock or damage to the vehicle's systems. It is recommended that installation be performed by a qualified automotive technician.

This kit is designed for direct replacement and relocation of the fuel pump fuse. The process involves identifying the original fuse location and installing the new kit in a more suitable position.

INSTALLATION LOCATION



Image: A conceptual diagram showing the general area for installation of the fuel pump fuse relocation kit on a Ford F-150.

Installation Steps:

1. **Prepare Vehicle:** Park the vehicle on a level surface and engage the parking brake. Disconnect the negative terminal of the vehicle's battery.
2. **Locate Original Fuse:** Identify the existing fuel pump fuse and its wiring within the vehicle's fuse box or associated harness. Refer to your vehicle's service manual for the exact location.
3. **Remove Original Components:** Carefully remove the original fuel pump fuse and any associated wiring that will be replaced by the relocation kit.
4. **Install Relocation Kit:** Connect the Hihaha Fuel Pump Fuse Relocation Kit to the vehicle's wiring harness, ensuring all connections are secure and properly insulated. The kit is designed for a direct fit.
5. **Secure New Fuse Location:** Route the new wiring and secure the relocated fuse in a position that is protected from heat, moisture, and physical damage. Use the provided heat shrink tubing for additional insulation and protection where necessary.
6. **Reconnect Battery:** Once the kit is fully installed and secured, reconnect the negative terminal of the vehicle's battery.

7. **Test System:** Start the vehicle and verify that the fuel pump operates correctly and there are no warning lights related to the fuel system.

OPERATING INSTRUCTIONS

Once correctly installed, the Fuel Pump Fuse Relocation Kit operates automatically as an integral part of your vehicle's electrical system. It ensures a stable and reliable power supply to the fuel pump, mitigating common issues associated with the original fuse placement. No manual operation is required for this kit.

MAINTENANCE

The Hihaha Fuel Pump Fuse Relocation Kit is constructed from durable metal and plastic rubber components, designed for long-term reliability and minimal maintenance. Periodically, it is advisable to:

- **Inspect Connections:** Visually inspect all connections for security and signs of corrosion or wear.
- **Check Fuse:** In the event of a fuel pump malfunction, check the fuse within the relocation kit for continuity. Replace only with a fuse of the correct amperage rating.

No other routine maintenance is typically required for this product.

TROUBLESHOOTING

If you experience issues with your fuel pump after installing the relocation kit, consider the following troubleshooting steps:

- **No Fuel Pump Operation:** Verify that all electrical connections are secure and properly seated. Ensure the fuse within the relocation kit is not blown.
- **Incorrect Fuse:** Confirm that the fuse installed in the kit matches the vehicle manufacturer's specified amperage for the fuel pump circuit.
- **Compatibility Check:** Double-check that the kit is compatible with your specific Ford F-150 model year (2009-2014).
- **Professional Assistance:** If issues persist after checking the above, it is recommended to consult a certified automotive technician for diagnosis and repair.

SPECIFICATIONS

Feature	Detail
Product Name	Fuel Pump Fuse Relocation Kit
Brand	Hihaha
Model Number / OE Number	EL3Z-14293-A
Material	Metal, Plastic Rubber
Package Dimensions (Approx.)	5.51 x 3.94 x 0.59 inches (14 x 10 x 1.5 cm)
Package Weight (Approx.)	1.12 ounces (31.75 grams)
Cable Length (Approx.)	28.5 cm (11.22 inches)

Fuse Dimensions (Approx.)

16mm (0.63 in) H x 12mm (0.47 in) W x 14mm (0.55 in) D

PRODUCT SIZE

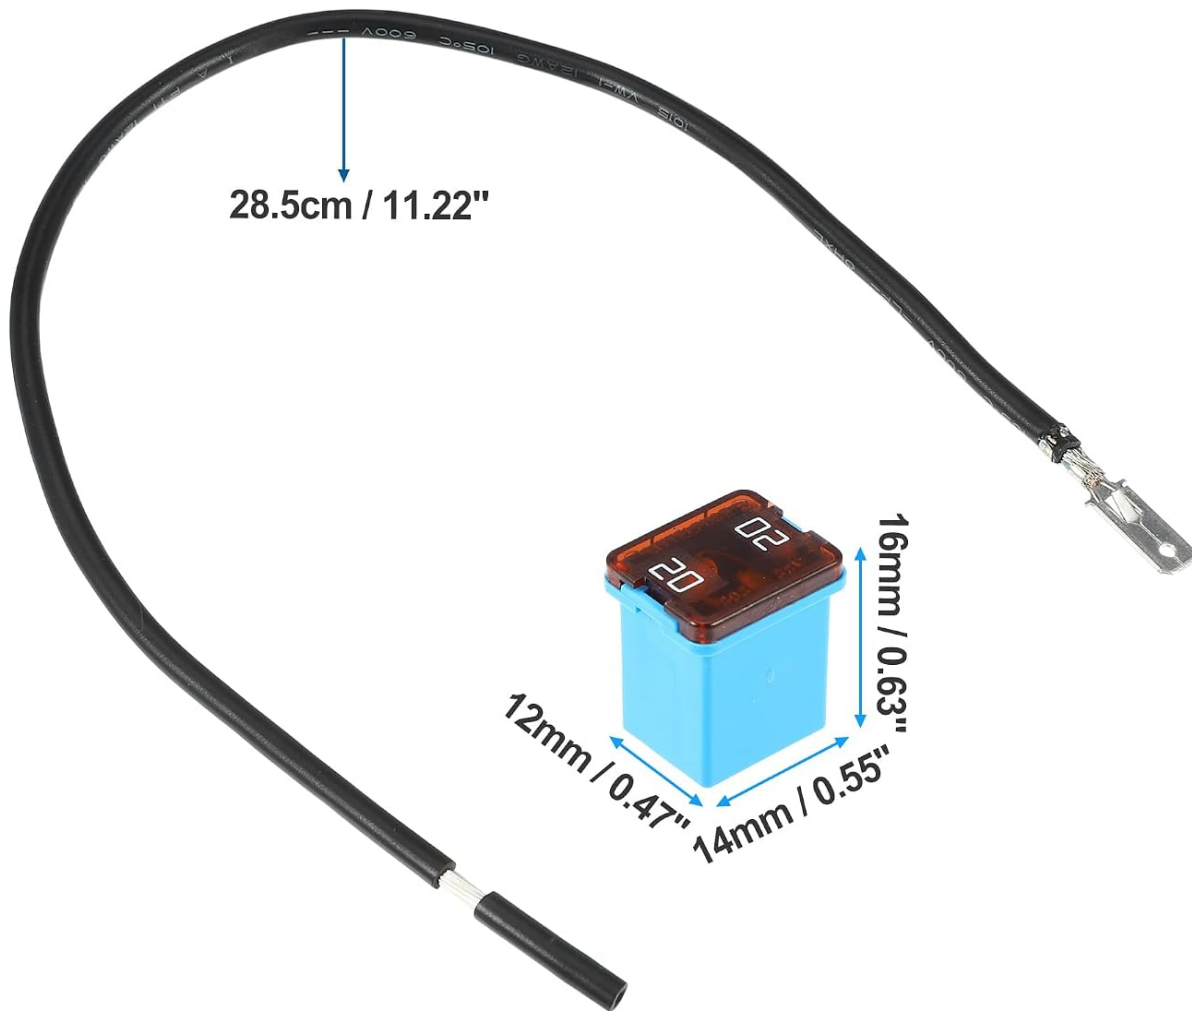


Image: Detailed measurements of the Fuel Pump Fuse Relocation Kit components, including cable length and fuse dimensions.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the Hihaha official website or contact the seller directly through your purchase platform. Please have your product model number (EL3Z-14293-A) and purchase details ready when contacting support.

© 2024 Hihaha. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question