

[Manuals.plus](#) /

> [ZURU](#) /

> ZURU Pets Alive Smitten Kittens (9541) Instruction Manual

ZURU ZUR09541

ZURU Pets Alive Smitten Kittens (9541) Instruction Manual

Model: ZUR09541

INTRODUCTION

This manual provides instructions for the ZURU Pets Alive Smitten Kittens interactive plush toy, model 9541. It covers setup, operation, maintenance, and safety information to ensure proper use and enjoyment of the product.

WHAT'S INCLUDED

Your ZURU Pets Alive Smitten Kittens package contains the following items:

- 1 x Smitten Kitten Plush Toy
- 1 x Yarn Ball Packaging
- 1 x Small Bottle Accessory
- 1 x Packet of Kinetic Sand
- 1 x Collector's Guide / Sticker Sheet



Image: The complete contents of the Smitten Kittens package, showing the plush toy, its yarn ball container, a small bottle, a packet of kinetic sand, and a collector's guide.

SETUP AND FIRST USE

1. **Unboxing:** Carefully remove the outer packaging. The Smitten Kitten is nestled inside a yarn ball-shaped container.
2. **Reveal Your Kitten:** Gently pull the kitten from its yarn ball packaging. The packaging is designed to resemble a yarn ball, adding to the unboxing experience.
3. **Locate Accessories:** Inside the packaging, you will find the small bottle, a packet of kinetic sand, and the collector's guide/sticker sheet.
4. **Battery Activation (if applicable):** If your kitten does not immediately make sounds, check for a battery tab on its back or underside. Remove the tab to activate the batteries. If sounds are still not present, refer to the Troubleshooting section.



Image: The Smitten Kittens product in its yarn ball packaging, ready for unboxing.

OPERATING INSTRUCTIONS

Your Smitten Kitten is designed for interactive play. Follow these steps to engage with your new pet:

- **Activate Sounds:** Gently press or squeeze your kitten to hear over 10 different kitten sounds. Experiment with different areas to discover all its vocalizations.
- **Glow-in-the-Dark Eyes:** The kitten's eyes are designed to glow in the dark. Expose the kitten's eyes to light for a period, then take it into a dark room to observe the glow effect.
- **Feeding with Bottle:** Use the provided small bottle accessory for imaginative feeding play.
- **Kinetic Sand Play:** The kinetic sand can be molded and played with separately. Ensure it is kept clean and stored properly to maintain its texture.



Image: A Smitten Kitten plush toy, bottle, and kinetic sand, illustrating the play accessories.

MAINTENANCE AND CARE

- **Cleaning the Plush Toy:** Surface clean only. Use a damp cloth with mild soap to gently wipe soiled areas. Do not immerse the toy in water, as this may damage electronic components. Allow to air dry completely.
- **Kinetic Sand Care:** Store kinetic sand in an airtight container when not in use to prevent it from drying out or collecting dust. Keep away from water.
- **Battery Replacement:** If the kitten's sounds become faint or stop working, it may be time to replace the batteries. Locate the battery compartment (usually on the back or underside), open it with a small screwdriver, and replace with new batteries of the specified type (refer to the compartment for details). Ensure correct polarity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Kitten makes no sounds or sounds are faint.	Battery tab still in place, or batteries are low/depleted.	Remove battery tab. Replace batteries with new ones, ensuring correct polarity.
Kinetic sand feels dry or hard.	Exposed to air for too long.	Ensure kinetic sand is stored in an airtight container when not in use.

SPECIFICATIONS

- **Model Number:** ZUR09541
- **Product Dimensions:** 7.87 x 7.87 x 7.87 inches
- **Item Weight:** 7.1 ounces
- **Manufacturer:** ZURU
- **Recommended Age:** 3+ (as indicated on packaging)
- **Features:** 10+ Kitten Sounds, Glow-in-the-Dark Eyes

SAFETY INFORMATION

Please read and adhere to the following safety guidelines:

- **Choking Hazard:** Small parts may be present. Not suitable for children under 3 years due to potential choking hazards.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the toy is not used for an extended period. Dispose of batteries responsibly.
- **Kinetic Sand:** For play purposes only. Do not ingest. Wash hands after use. Keep away from hair, clothing, and electronic devices.
- **Supervision:** Adult supervision is recommended during play.

WARRANTY AND SUPPORT

ZURU products are manufactured to high-quality standards. For any questions, concerns, or support regarding your Smitten Kittens toy, please refer to the contact information provided on the product packaging or visit the official ZURU website. Please retain your proof of purchase for warranty claims.

For more information, visit the [ZURU Store on Amazon](#).