

[Manuals.plus](#) /

› [TRIUMPHKEY](#) /

› TRIUMPHKEY Electric Standing Desk User Manual

TRIUMPHKEY 0162

TRIUMPHKEY Electric Standing Desk User Manual

Model: 0162

1. PRODUCT OVERVIEW

The TRIUMPHKEY Electric Standing Desk is designed to enhance productivity and comfort in your home or office. Featuring an electric height adjustment mechanism, it allows seamless transitions between sitting and standing positions, promoting a healthier work environment. This desk includes multi-functional monitor shelves and integrated storage solutions to keep your workspace organized.



Figure 1.1: Overview of the TRIUMPHKEY Electric Standing Desk, showcasing its spacious white desktop, monitor stand, and integrated control panel.

Key Features:

- **Adjustable Height:** Electrically adjustable from 73cm to 118cm to suit various user preferences.
- **Memory Smart Panel:** Two preset height memory functions for quick adjustments.
- **Multi-Functional Monitor Shelves:** Provides ergonomic viewing height and additional storage.
- **Sturdy Construction:** Industrial-grade steel frame supports up to 60KG (including desktop).
- **Quiet Operation:** Motor operates at less than 45dB for a peaceful environment.
- **Cable Management:** Integrated wire collecting holes for a tidy workspace.
- **Headphone Hook:** Convenient storage for headphones.


2. SETUP AND ASSEMBLY

The TRIUMPHKEY Electric Standing Desk is designed for straightforward assembly. All necessary parts are numbered, and clear instructions are provided to guide you through the process. Assembly typically takes approximately 90 minutes for one person.

2.1 Package Contents:

Before beginning assembly, ensure all components are present and undamaged. Refer to the packing list provided in your product box.


Easy to Install

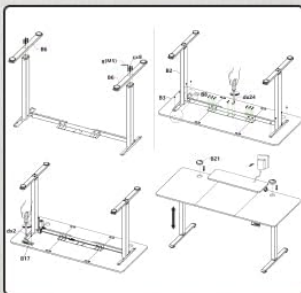

**Clear
Instructions**



**Installation
Video**

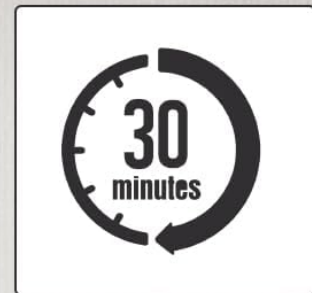

**30 Minutes
to Set Up**

Figure 2.1: Exploded view of desk components and assembly instructions, indicating clear steps and an estimated 30-minute setup time.

2.2 Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify against the parts list.
2. **Assemble Frame:** Attach the desk legs to the crossbar according to the provided diagrams. Ensure all screws are tightened securely.
3. **Install Motor and Control Box:** Mount the electric motor and control box to the designated positions on the frame.

Connect all cables as shown in the instructions.

4. **Attach Desktop Panels:** Secure the desktop panels to the assembled frame. The desktop may consist of multiple sections; align them carefully before fastening.
5. **Install Monitor Shelf:** Attach the monitor shelf to the desktop using the provided brackets. This component is optional and can be removed if not desired.
6. **Connect Control Panel:** Plug the control panel into the control box.
7. **Adjust Feet:** Ensure the adjustable feet are properly installed and leveled to prevent wobbling.

For a visual guide, an installation video is typically available from the manufacturer. Refer to the QR code or link provided in your physical manual for access.

3. OPERATING INSTRUCTIONS

Your TRIUMPHKEY Electric Standing Desk features an intuitive control panel for easy height adjustments and memory settings.

3.1 Control Panel Overview:



Figure 3.1: The Multi-Function Intelligent Controller, showing the LED Digital Display, Memory Height Settings (x2), and UP/Down buttons.

- **LED Digital Display:** Shows the current desk height in centimeters.
- **UP/DOWN Buttons (▲ / ▼):** Press and hold to adjust the desk height continuously. Release to stop at the desired height.
- **Memory Buttons (1, 2):** Used to save and recall preferred desk heights.

3.2 Adjusting Height:

To manually adjust the desk height, press and hold the UP (▲) or DOWN (▼) button until the desk reaches your desired position. The height range is from 73cm (sitting) to 118cm (standing).



Figure 3.2: Demonstrating the height adjustment feature, highlighting the range from 73cm to 118cm for ergonomic use.

3.3 Setting Memory Presets:

1. Adjust the desk to your first desired height (e.g., sitting position).
2. Press the "M" or "SET" button (if available, otherwise assume direct press of 1 or 2 after reaching height) followed

by the desired memory button (1 or 2). The display may flash to confirm.

3. Repeat for the second desired height (e.g., standing position) and save it to the other memory button.

To recall a saved height, simply press the corresponding memory button (1 or 2). The desk will automatically move to the saved position.

3.4 Anti-Collision Protection:

The desk is equipped with an anti-collision system. If the desk encounters an obstacle during height adjustment, it will automatically stop and reverse slightly to prevent damage or injury.

4. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your TRIUMPHKEY Electric Standing Desk.

4.1 Cleaning:

- Wipe the desktop and frame with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the finish.
- Ensure no liquids enter the control panel or motor housing.

4.2 Weight Capacity:

The desk has a maximum load capacity of **60KG (132 lbs)**, including the desktop itself. Do not exceed this weight limit to prevent damage to the motor and frame. Distribute weight evenly across the desktop.

Product Dimensions



Figure 4.1: Product dimensions and weight capacity illustration, clearly indicating the 60KG load limit.

4.3 General Care:

- Regularly check all screws and fasteners to ensure they remain tight.
- Keep the area around the desk clear to allow for smooth height adjustments.
- Avoid placing the desk in direct sunlight or near heat sources to prevent material degradation.

5. TROUBLESHOOTING

If you encounter any issues with your TRIUMPHKEY Electric Standing Desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; motor overload; control panel issue.	Check power connection. Unplug and replug after 10 minutes. Reduce weight on desk.
Uneven height adjustment.	Unbalanced load; loose connections; floor uneven.	Distribute weight evenly. Check all assembly connections. Adjust leveling feet.
Desk stops unexpectedly.	Anti-collision activated; motor overheating.	Remove any obstacles. Allow motor to cool down for 20 minutes before resuming operation.
Noise during operation.	Loose components; normal motor sound.	Ensure all screws are tight. A low hum is normal; excessive noise may indicate an issue.

If the problem persists after attempting these solutions, please contact TRIUMPHKEY customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	TRIUMPHKEY
Model Number	0162
Colour	White
Product Dimensions (L x W x H)	140 x 60 x 73-118 cm
Material	Engineered Wood (Desktop), Alloy Steel (Base)
Item Weight	25.5 kg
Max Load Capacity	60 kg
Special Features	Adjustable Height, Electric, Monitor Shelves, Storage Shelf, Ergonomic
Noise Level	< 45dB

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the official TRIUMPHKEY website or contact their customer service directly. Contact details are typically provided in the product packaging or on the manufacturer's website.

Please retain your purchase receipt as proof of purchase for any warranty claims.

TRIUMPHKEY Store Link: [Visit TRIUMPHKEY Store on Amazon](#)

© 2024 TRIUMPHKEY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question