

[Manuals.plus](#) /

› [YUSWKO](#) /

› YUSWKO Handheld Milk Frother User Manual

YUSWKO B0CJ96FN41

YUSWKO Handheld Milk Frother User Manual

Model: B0CJ96FN41

INTRODUCTION

Thank you for choosing the YUSWKO Handheld Milk Frother. This versatile electric whisk is designed to create rich, creamy foam for various beverages and culinary tasks. Please read this manual carefully before use to ensure proper operation and maintenance.

IMPORTANT SAFETY INSTRUCTIONS

- **Do not immerse the main body of the frother in water.** The main unit is not waterproof. Only the whisk heads are washable.
- Use a tall and large container when operating the frother to prevent liquid splashing, especially at higher speeds.
- Keep out of reach of children.
- Ensure the frother is fully charged before first use.
- Do not attempt to repair or disassemble the main unit. Contact customer support if issues arise.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x YUSWKO Handheld Milk Frother Main Unit
- 1 x Spring Whisk Head (for milk frothing)
- 1 x Balloon Whisk Head (for eggs, cream)
- 1 x Hook Whisk Head (for thicker mixtures)
- 1 x USB Charging Cable



Figure 1: Frother Main Unit and Whisk Heads

PRODUCT OVERVIEW

The YUSWKO Handheld Milk Frother features a sleek design with easy-to-use controls and interchangeable whisk heads for various applications.



Figure 2: Frother Control Panel and Speed Settings

Components:

- **Main Unit:** Contains the motor, battery, and control buttons.
- **Charging Indicator Light:** Displays battery level (Low, Medium, Full).
- **Speed Buttons:** Low, Mid, High for speed selection.
- **Interchangeable Whisk Heads:** Spring, Balloon, and Hook types.

SETUP

Attaching a Whisk Head:

1. Select the desired whisk head (Spring, Balloon, or Hook).
2. Align the whisk head's shaft with the insertion gap on the frother's main unit.
3. Gently push the whisk head into the main unit until it is securely seated. Do not press forcefully. A small gap

(approx. 1mm) after installation is normal.

Removing a Whisk Head:

1. Grasp the whisk head firmly.
2. Pull it straight out from the main unit.

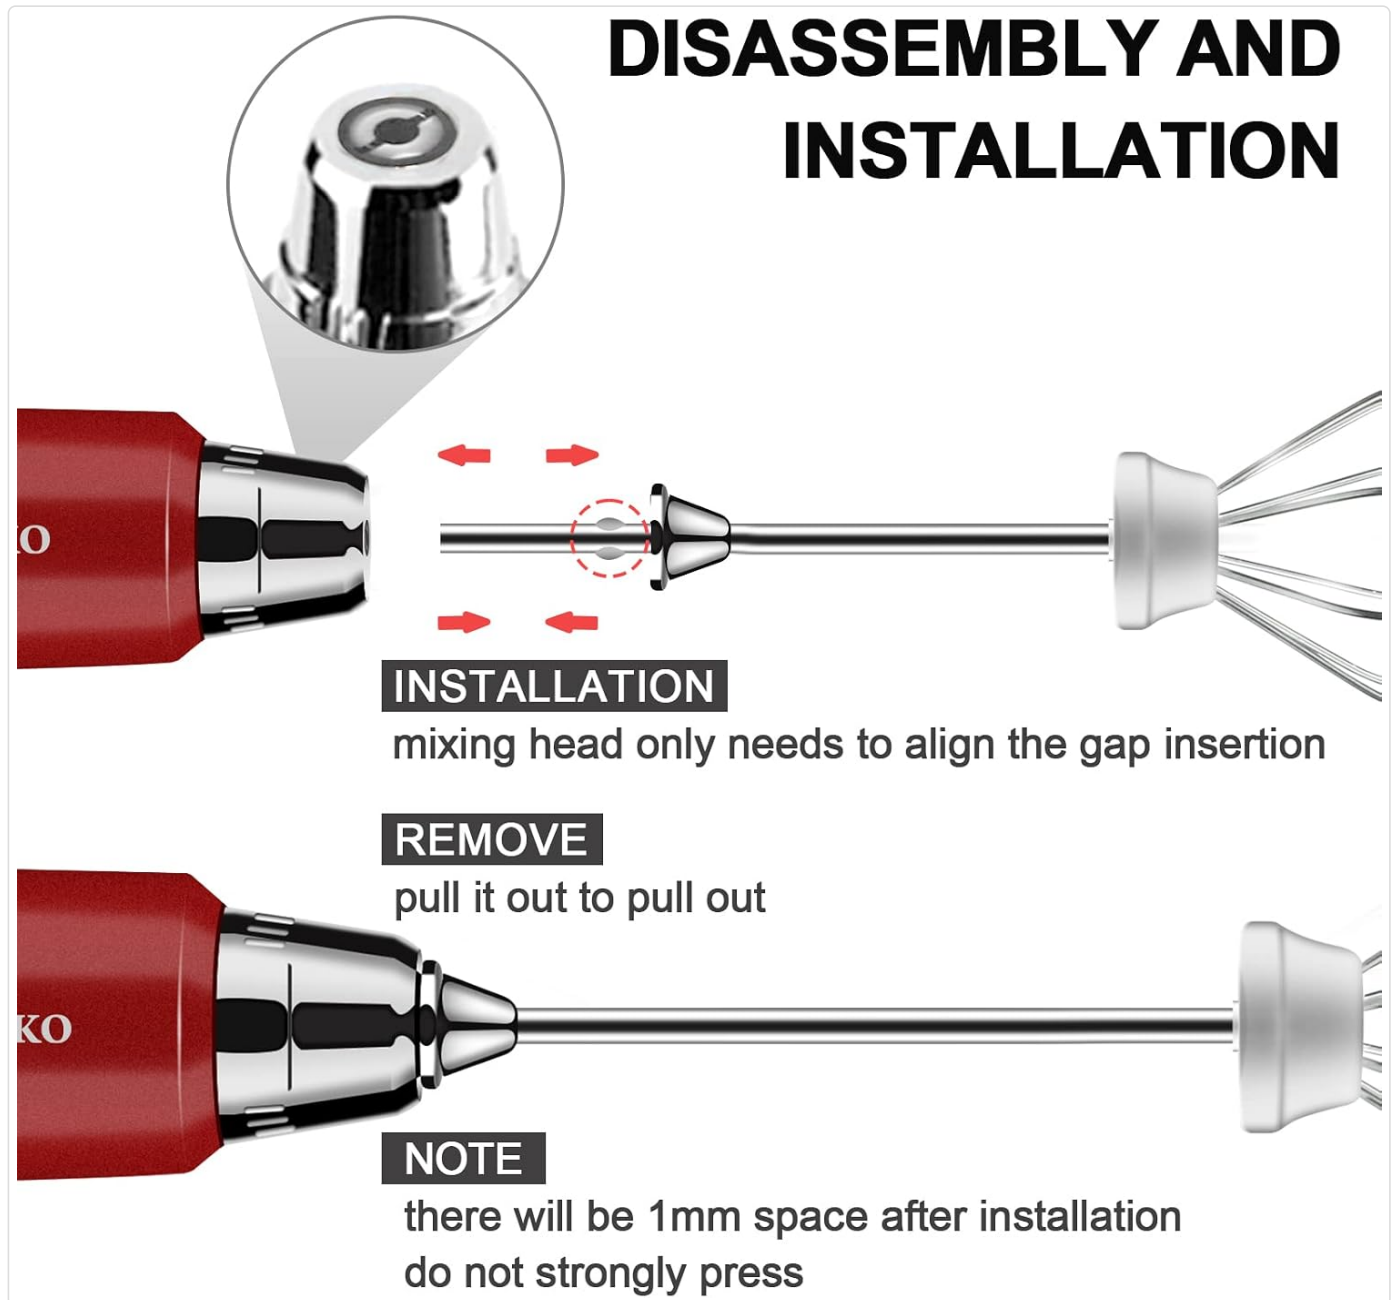


Figure 3: Whisk Head Installation and Removal

CHARGING INSTRUCTIONS

The frother is equipped with a built-in 1200mAh rechargeable battery and uses a USB charging design.

1. Connect the USB charging cable to the frother's charging port.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., computer, wall adapter, power bank).
3. During charging, the indicator light will be **RED**.
4. Once fully charged, the indicator light will turn **GREEN**.

5. A full charge allows for multiple uses throughout the day.



Figure 4: USB Charging Process

OPERATING INSTRUCTIONS

The frother offers three-speed settings for various mixing needs.

1. Ensure a whisk head is securely attached and the frother is charged.
2. Immerse the whisk head into the liquid or mixture you wish to process. Remember to use a tall container to prevent splashing.
3. Press the desired speed button (Low, Mid, or High) on the main unit to start operation.
4. Move the frother gently to achieve consistent mixing or frothing.
5. Press the button again to turn off the frother.

Whisk Head Usage Guide:

- **Spring Whisk:** Ideal for creating rich, creamy foam for lattes, cappuccinos, hot chocolate, and matcha tea.
- **Balloon Whisk:** Best for whisking eggs, mixing protein powders, fruit drinks, and light batters.
- **Hook Whisk:** Suitable for thicker mixtures, such as mixing milk powder or supplements for children, or preparing dressings.

Speed Setting Recommendations:

- **Low Speed:** Gentle stirring for juice, egg liquid, or light mixing.
- **Middle Speed:** Suitable for making jam, matcha tea, or medium-consistency mixtures.
- **High Speed:** For rapid frothing of milk for coffee, latte, cappuccino, and creating cream.



Figure 5: Frothing Milk for Beverages

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.

1. After each use, remove the whisk head from the main unit.
2. Rinse the whisk head under running tap water or immerse it in a cup of hot water and briefly activate the frother to clean it quickly.
3. **Hand wash only.** Do not place whisk heads in a dishwasher.
4. Wipe the main unit with a damp cloth. **Never immerse the main unit in water.**
5. Ensure all parts are dry before storing.



CLEAN AND STORE EASILY



NOTE: Do not immerse the milk frother body in water

Figure 6: Cleaning the Whisk Head

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery.	Charge the frother using the provided USB cable. Check the indicator light.
Whisk head is loose or falls off.	Whisk not properly installed.	Ensure the whisk head is aligned and pushed firmly into the main unit until secure.
Liquid splashes excessively.	Container is too small or speed is too high.	Use a taller and larger container. Try a lower speed setting.
Froth is not dense enough.	Insufficient frothing time or incorrect whisk/speed.	Ensure you are using the Spring Whisk head. Try frothing for a longer duration or using a higher speed setting. Ensure milk is cold for best frothing results.

SPECIFICATIONS

Brand	YUSWKO
Model Name	YUSWKO (ASIN: B0CJ96FN41)
Special Feature	Rechargeable
Color	White
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Power Source	Battery Powered (USB Rechargeable)
Battery Capacity	1200mAh (Built-in)
Number of Speeds	3 (Low, Mid, High)
Included Components	Main Unit, 3 Whisk Heads, USB Charging Cable
Product Care	Hand Wash Only (Whisk Heads)

WARRANTY INFORMATION

Specific warranty details are not provided in the product information. Please refer to your purchase documentation or contact the seller for warranty terms and conditions.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your YUSWKO Handheld Milk Frother, please contact the seller through the platform where you made your purchase. You can also visit the [YUSWKO Store on Amazon](#) for more information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question