

TCL TWF75-P6S

TCL TWF75-P6S 7.5 kg Fully-Automatic Front Load Washing Machine User Manual

Model: TWF75-P6S

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the washing machine is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep flammable materials away from the machine.
- Do not wash items that have been previously cleaned in, washed with, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not operate the machine with a damaged power cord or plug.

2. PRODUCT OVERVIEW

The TCL TWF75-P6S is a 7.5 kg fully-automatic front load washing machine designed for efficient and thorough cleaning. It features a Digital Inverter Motor (BLDC technology) for quiet operation and durability, an in-built heater for effective stain removal and sterilization, and a unique Honeycomb Drum for gentle fabric care.

Digital Inverter Motor



Heat Sterilization




24 Hours Delay



Add Garment



Drum Clean

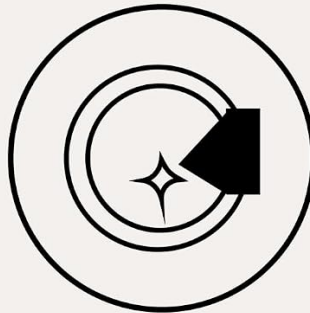

Honeycomb Drum

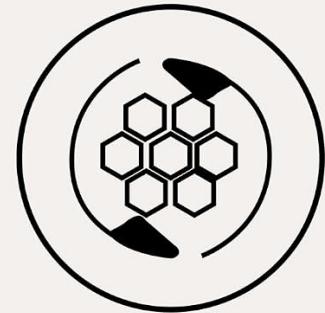


Image: Front view of the TCL TWF75-P6S washing machine.

Key Features:

- **Digital Inverter Motor (BLDC Technology):** Ensures quiet operation, energy efficiency, and extended motor life.
- **In-built Heater:** Provides heat sterilization and improved washing performance for tough stains.
- **Steam Wash:** Utilizes steam for hygienic cleaning and allergen removal.
- **Honeycomb Drum:** Designed to protect clothes from damage during washing.
- **Add Garment Function:** Allows adding forgotten items during a wash cycle.
- **24 Hours Delay:** Schedule your wash cycle to start at a convenient time.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **Drum Clean:** Dedicated program for maintaining drum hygiene.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Ensure all included components are present:

- 1 Washing Machine
- 1 User Manual
- 1 Tapping Screw
- 1 Water Inlet Hose
- 1 Bottom Cover
- 1 Drain Hose Component

3.2 Location Requirements

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and maintenance. Avoid direct sunlight or extreme temperatures. The machine dimensions are 49.5 cm (Depth) x 59.5 cm (Width) x 85 cm (Height).



Image: Diagram showing the dimensions of the washing machine.

3.3 Connecting Water and Drain Hoses

Connect the water inlet hose to a cold water tap and the corresponding inlet on the back of the machine. Ensure connections are tight to prevent leaks. Position the drain hose into a standpipe or laundry tub, ensuring it is securely fastened to prevent dislodging during operation.



Image: Rear view of the washing machine showing water inlet and drain hose connections.

3.4 Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the machine's requirements (240 Volts).

3.5 Leveling the Machine

Use a spirit level to check if the machine is perfectly level. Adjust the leveling feet at the bottom of the machine as needed to ensure stability and prevent excessive vibration during operation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selection dial, a digital display, and various function buttons for customizing your wash cycle.



Image: Close-up view of the washing machine's control panel with program dial and digital display.

4.2 Loading Laundry

Open the door and load clothes loosely into the drum. Do not overload the machine. For optimal results, ensure items are evenly distributed.

DIGITAL INVERTER MOTOR



Image: Front view of the washing machine with the door open, showing the drum interior.

4.3 Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Close the drawer gently.

4.4 Selecting a Wash Program

Turn the program selection dial to choose one of the 16 available wash programs:

- Prewash
- Intensive
- Spin
- Super Quick
- Drum Clean
- Rinse+Spin
- Bedding

- Cotton
- Sports-fitness
- Allergy Care
- Dark Color
- Mix
- Shirt
- Wool
- Synthetics
- Silk

4.5 Adjusting Options

After selecting a program, you can customize settings using the function buttons:

- **Temperature:** Adjust wash water temperature.
- **Spin Speed:** Select desired spin speed (up to 1400 RPM).
- **Delay Start:** Set a delay for the wash cycle to begin.
- **Add Garment:** Press to pause the cycle and add forgotten items.
- **Child Lock:** Press and hold the designated button to activate/deactivate.

4.6 Starting and Pausing a Cycle

Press the 'Start/Pause' button to begin the selected wash cycle. Press it again to pause the cycle if needed.

5. MAINTENANCE

5.1 Cleaning the Detergent Dispenser

Regularly remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and dry before reinserting.

5.2 Drum Clean Program

Use the dedicated 'Drum Clean' program periodically to clean the inner drum and remove any detergent residues or odors. Run this cycle without any laundry inside.



Image: Close-up view of the washing machine's Honeycomb Drum interior.

5.3 Cleaning the Pump Filter

Locate the pump filter, usually at the bottom front of the machine. Open the cover, drain any residual water, and carefully remove and clean the filter of lint and debris. Reinstall securely.

5.4 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Avoid abrasive cleaners or solvents.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, 'Start/Pause' not pressed.	Check power connection, ensure door is latched, press 'Start/Pause'.
Water not filling	Water tap closed, inlet hose kinked, water pressure low.	Open water tap, straighten hose, check water supply.
Water not draining	Drain hose kinked or blocked, pump filter clogged.	Check and clear drain hose, clean pump filter.
Excessive vibration	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry.

Problem	Possible Cause	Solution
Unusual noise	Foreign objects in drum or pump filter, machine not level.	Check drum and filter for objects, level the machine.

7. SPECIFICATIONS

Feature	Specification
Model Number	TWF75-P6S
Capacity	7.5 kg
Dimensions (D x W x H)	49.5D x 59.5W x 85H Centimeters
Item Weight	57 Kilograms
Maximum Rotational Speed	1400 RPM
Voltage	240 Volts
Wattage	1850 Watts
Number of Wash Cycles	16
Drum Material	Stainless Steel
Special Features	Digital Inverter Motor (BLDC technology), Steam Wash, Add Garment, Quick Wash, Child Lock, Drum Clean, Sound Off Function, 24 Hours Delay, Memory Backup, Heat Sterilization, TCL Honeycomb Drum



Image: Energy Savings Guide label for the TCL TWF75-P6S washing machine, indicating 5-star efficiency.

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This TCL washing machine comes with a **2-year comprehensive warranty on the product** and a **10-year warranty on the motor** from the date of purchase. Please retain your purchase receipt for warranty claims.



Image: TCL washing machine displayed with badges indicating 2-year comprehensive warranty and 10-year motor warranty.

8.2 Customer Support

For technical assistance, service requests, or warranty claims, please contact TCL customer support. Refer to the contact information provided in your warranty card or visit the official TCL website for the most up-to-date support details.