

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [vidaXL](#) /

› [vidaXL Laundry Basket with Lid, Water Hyacinth & Metal Frame \(Model 355186\) - Instruction Manual](#)

**vidaXL 355186**

# vidaXL Laundry Basket with Lid, Water Hyacinth & Metal Frame (Model 355186)

Instruction Manual

## 1. INTRODUCTION

---

Thank you for choosing the vidaXL Laundry Basket with Lid. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new laundry hamper. Please read these instructions carefully before assembly and retain them for future reference.



Figure 1: Assembled vidaXL Laundry Basket with Lid. This image shows the complete laundry basket, highlighting its woven water hyacinth exterior, metal frame, and integrated lid with a handle.

## 2. SAFETY INFORMATION

- Keep all packaging materials away from children to prevent suffocation hazards.
- Ensure all components are securely fastened during assembly to prevent instability.
- Do not overload the basket beyond its stated capacity to avoid damage or tipping.
- Avoid placing the basket in excessively damp environments to preserve the water hyacinth material.
- This product is intended for indoor use only.

### 3. PACKAGE CONTENTS

---

Please verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1x Water Hyacinth Basket
- 1x Metal Frame (disassembled)
- 1x Cream Cotton Liner
- 1x Lid (integrated with basket or separate, depending on design)
- Assembly Hardware (screws, bolts, etc., if applicable)



## 4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your vidaXL Laundry Basket. It is recommended to assemble on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Verify against the package contents list.
2. **Assemble the Metal Frame:** Connect the metal frame pieces according to the diagram. Ensure all joints are aligned and secured with the provided hardware.



Figure 3: Detail of the metal frame connection point. This close-up illustrates how the water hyacinth basket attaches to the metal support frame.

3. **Insert the Basket:** Carefully place the water hyacinth basket into the assembled metal frame. Ensure it sits securely and evenly within the frame.
4. **Place the Cotton Liner:** Insert the cream cotton liner into the water hyacinth basket. Adjust it so it fits snugly and covers the interior of the basket.
5. **Attach the Lid:** If the lid is separate, place it on top of the basket. If it's integrated, ensure it opens and closes

smoothly.

6. **Final Check:** Confirm all connections are tight and the basket is stable before use.

## 5. OPERATING INSTRUCTIONS (USAGE)

The vidaXL Laundry Basket is designed for convenient storage of laundry.

- **Placement:** Position the laundry basket in your desired location, such as a bathroom, bedroom, or laundry room. Ensure it is on a flat, stable surface.
- **Loading Laundry:** Lift the lid and place dirty laundry inside the cotton liner. The lid helps to conceal contents and protect them from dust.
- **Transport:** When full, use the integrated handle on the lid or the sturdy metal frame to transport the basket to your washing machine.



Figure 4: The laundry basket positioned in a bathroom next to a washing machine. This image demonstrates a typical placement for the product in a home environment.

## 6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your laundry basket.

- **Cleaning the Basket:** Wipe the water hyacinth exterior with a soft, dry cloth. For light stains, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning the Liner:** The cream cotton liner can be removed and machine washed on a gentle cycle with mild detergent. Air dry or tumble dry on low heat.
- **Metal Frame:** Wipe the metal frame with a damp cloth and dry thoroughly to prevent rust.
- **Storage:** Store in a dry environment to prevent mold or mildew growth on the natural materials.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Basket feels unstable.	Loose frame connections or uneven surface.	Ensure all frame connections are tightened. Move the basket to a flat, level surface.
Lid does not close properly.	Basket contents are overfilling or lid is misaligned.	Reduce the amount of laundry inside. Adjust the lid's position to ensure proper seating.
Unpleasant odor from basket.	Accumulation of damp laundry or lack of ventilation.	Empty the basket regularly. Wash the cotton liner. Allow the basket to air out in a well-ventilated area.

## 8. SPECIFICATIONS

<b>Model Number:</b>	355186
<b>Brand:</b>	vidaXL
<b>Material:</b>	Water Hyacinth, Metal Frame, Cotton Liner
<b>Liner Color:</b>	Cream white
<b>Overall Dimensions (W x D x H):</b>	17.3" x 13.4" x 25.2" (44 cm x 34 cm x 64 cm)
<b>Basket Dimensions (W x D x H):</b>	16.5" x 12.6" x 20.1"/22"
<b>Item Weight:</b>	10.67 pounds (4.85 kg)
<b>Capacity:</b>	Approximately 30 pounds
<b>Assembly Required:</b>	Yes

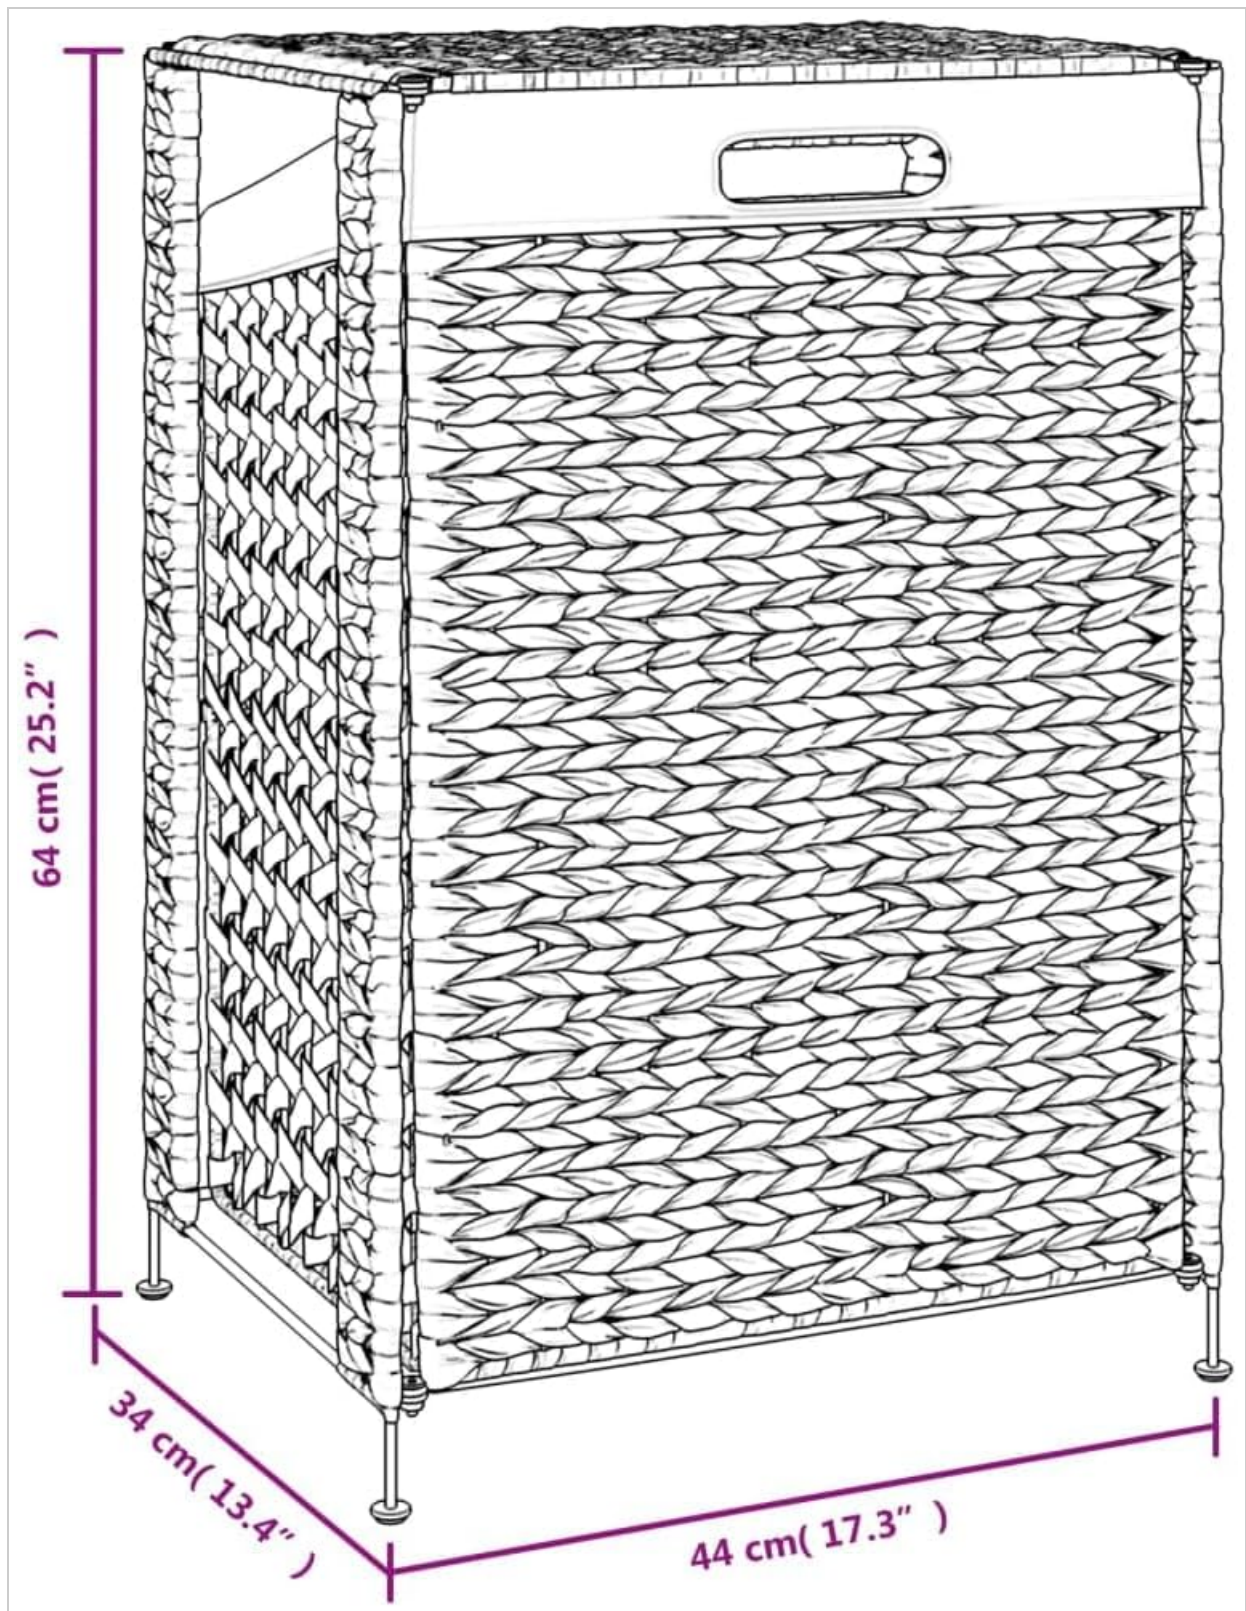


Figure 5: Technical drawing illustrating the dimensions of the laundry basket in both inches and centimeters.

## 9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official vidaXL website or contact their customer service department. Keep your purchase receipt as proof of purchase.

**Website:** [www.vidaxl.com](http://www.vidaxl.com)



