

[Manuals.plus](#) /

› [Audecook](#) /

› Audecook Hot Pot Electric with Steamer User Manual

Audecook AC-8617

Audecook Hot Pot Electric with Steamer User Manual

Model: AC-8617

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

PRODUCT OVERVIEW

The Audecook Hot Pot Electric with Steamer is a versatile and compact cooking appliance designed for various culinary tasks. It features a non-stick interior and adjustable power settings for optimal cooking control.



Image: The Audecook Hot Pot Electric with Steamer, shown with a glass lid and a pair of cooking tongs. This image provides a general view of the product and its included accessory.

Components:

- Electric Hot Pot Base with Non-stick Pan
- Glass Lid with Knob
- Power Adjustment Knob
- Power Cord Inlet
- Optional Steamer Insert (if included with your model)

MULTI-FUNCTIONAL ELECTRIC COOKING HOT POT

Steam Above & Cook Below
Suitable for 1-3 People Dinner



Image: The Audecook Hot Pot Electric shown cooking a red sauce or soup. This highlights its multi-functional capability for various dishes.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the appliance for any damage. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wash the non-stick pan and glass lid with warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the electrical base in water.
3. **Placement:** Place the hot pot on a stable, flat, heat-resistant surface away from flammable materials. Ensure there is adequate ventilation around the appliance.
4. **Power Connection:** Insert the power cord into the appliance's power inlet firmly. Then, plug the power cord into a standard electrical outlet. Ensure the power adjustment knob is in the "OFF" position before plugging in.

OPERATING INSTRUCTIONS

The Audecook Hot Pot offers dual power settings for versatile cooking.



Image: A close-up of the dual power switch on the Audecook Hot Pot, indicating 'LOW' (200W) for dishes like fried eggs and soup, and 'HIGH' (600W) for fried chicken, steak, and hot pot. This illustrates the power adjustment functionality.

- 1. Add Ingredients:** Place your desired ingredients into the non-stick pan. The pot has a 1.7L capacity, suitable for 1-3 people.
- 2. Select Power Setting:** Rotate the power adjustment knob to select your desired cooking power:
 - **LOW (200W):** Ideal for gentle cooking, simmering, keeping warm, or preparing delicate dishes such as fried eggs, milk cereal, or health soups.
 - **HIGH (600W):** Suitable for rapid boiling, frying, sautéing, or cooking dishes like fried chicken, pan-fried steak, or hot pot.
- 3. Cooking:** Allow the appliance to heat up and cook your food. The indicator light will illuminate when the

appliance is powered on.

4. **Monitoring:** Use the transparent glass lid to monitor your cooking progress without releasing heat.
5. **Finish Cooking:** Once cooking is complete, turn the power adjustment knob to the "OFF" position. Unplug the appliance from the wall outlet.
6. **Serving:** Carefully transfer cooked food from the pot. Use heat-resistant utensils to avoid scratching the non-stick coating.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Audecook Hot Pot.



Image: The Audecook Hot Pot showcasing its non-stick coating with fried eggs easily sliding off. This image also highlights the overheat and dry-boil protection features.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.

2. **Cleaning the Pan:** The non-stick interior is designed for easy cleaning. Wipe the interior with a soft cloth or sponge using warm, soapy water. For stubborn food residue, soak the pan in warm water for a few minutes before cleaning. Avoid abrasive cleaners, scouring pads, or metal utensils that can damage the non-stick coating.
3. **Cleaning the Exterior:** Wipe the exterior of the hot pot with a damp cloth. Do not immerse the electrical base in water or any other liquid.
4. **Cleaning the Lid:** The glass lid can be washed with warm, soapy water and rinsed thoroughly.
5. **Drying:** Ensure all parts are completely dry before storing or next use.



Image: Demonstrates the ease of cleaning the Audecook Hot Pot, showing both rinsing under a faucet and wiping the non-stick surface. It emphasizes the environmentally friendly and toxin-free aspects.

Safety Features:

- **Over-Heating Protection:** The appliance is equipped with a safety mechanism that automatically shuts off power if it detects overheating.
- **Dry-Boil Protection:** If the pot runs out of water during operation, the dry-boil protection will activate, turning off the appliance to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Power knob not in ON position.	Ensure power cord is securely plugged into both the appliance and a working wall outlet. Turn power knob to LOW or HIGH.
Food sticks to the pan.	Insufficient oil/liquid; High heat for too long; Damaged non-stick coating.	Add appropriate amount of oil or liquid. Adjust power setting. Avoid using metal utensils.
Appliance shuts off unexpectedly.	Over-heating protection activated; Dry-boil protection activated.	Unplug and allow to cool down. Ensure there is sufficient liquid in the pot for cooking.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. If it persists, discontinue use and contact support.

SPECIFICATIONS

- **Model Number:** AC-8617
- **Capacity:** 1.7 Liters
- **Power Settings:** LOW (200W), HIGH (600W)
- **Product Dimensions:** 15.16 x 8.27 x 4.92 inches
- **Item Weight:** 2.42 pounds
- **Material:** Non-stick coated interior

1.7L CAPACITY



Image: A diagram illustrating the dimensions of the AuDeCook Hot Pot, including its 1.7L capacity, and measurements in both inches and centimeters. This provides a clear visual reference for the product's size.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For details regarding warranty coverage, terms, and conditions, please refer to the product packaging or contact AuDeCook customer support directly.

Customer Support:

For any questions, assistance, or troubleshooting not covered in this manual, please contact AuDeCook customer service. You may also visit the official AuDeCook store for more information and support resources.

AuDeCook Store: <https://www.amazon.com/stores/Audecook/page/5B661167-38B0-49CD-9A1C-22E0BEF7850D>

