

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [UNISWAN](#) /

> [UNISWAN 6-in-1 Convertible Baby High Chair Instruction Manual, Model YY10-1 \(Grey\)](#)

## UNISWAN YY10-1

# UNISWAN 6-in-1 Convertible Baby High Chair Instruction Manual

Model: YY10-1 (Grey)

### 1. INTRODUCTION

Thank you for choosing the UNISWAN 6-in-1 Convertible Baby High Chair. This versatile product is designed to adapt to your child's growth, offering six different modes of use from infancy through toddlerhood. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting. Please read it thoroughly before use and retain it for future reference.


### 2. IMPORTANT SAFETY WARNINGS

**WARNING:** Failure to follow these warnings and instructions could result in serious injury or death.

- **NEVER** leave child unattended. Always keep your child in view while in the high chair.
- Always use the five-point safety harness. Ensure it is properly adjusted and securely fastened before each use.
- Ensure all components are correctly assembled and securely locked into place before placing a child in the high chair.
- Do not use the high chair if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- The high chair is designed with a stable pyramid structure and anti-slip pads to enhance stability. Always place the high chair on a flat, level surface.
- This product is made of non-toxic and food-grade PP material, free from harmful substances. It has passed US CPSIA & ASTM safety tests for stability, asphyxiation, load, and shear.
- Do not allow children to play with the high chair.
- Maximum weight recommendation: 66 pounds (30 kg).

Button to installate  
dinner plate

Button to remove  
the dining chair

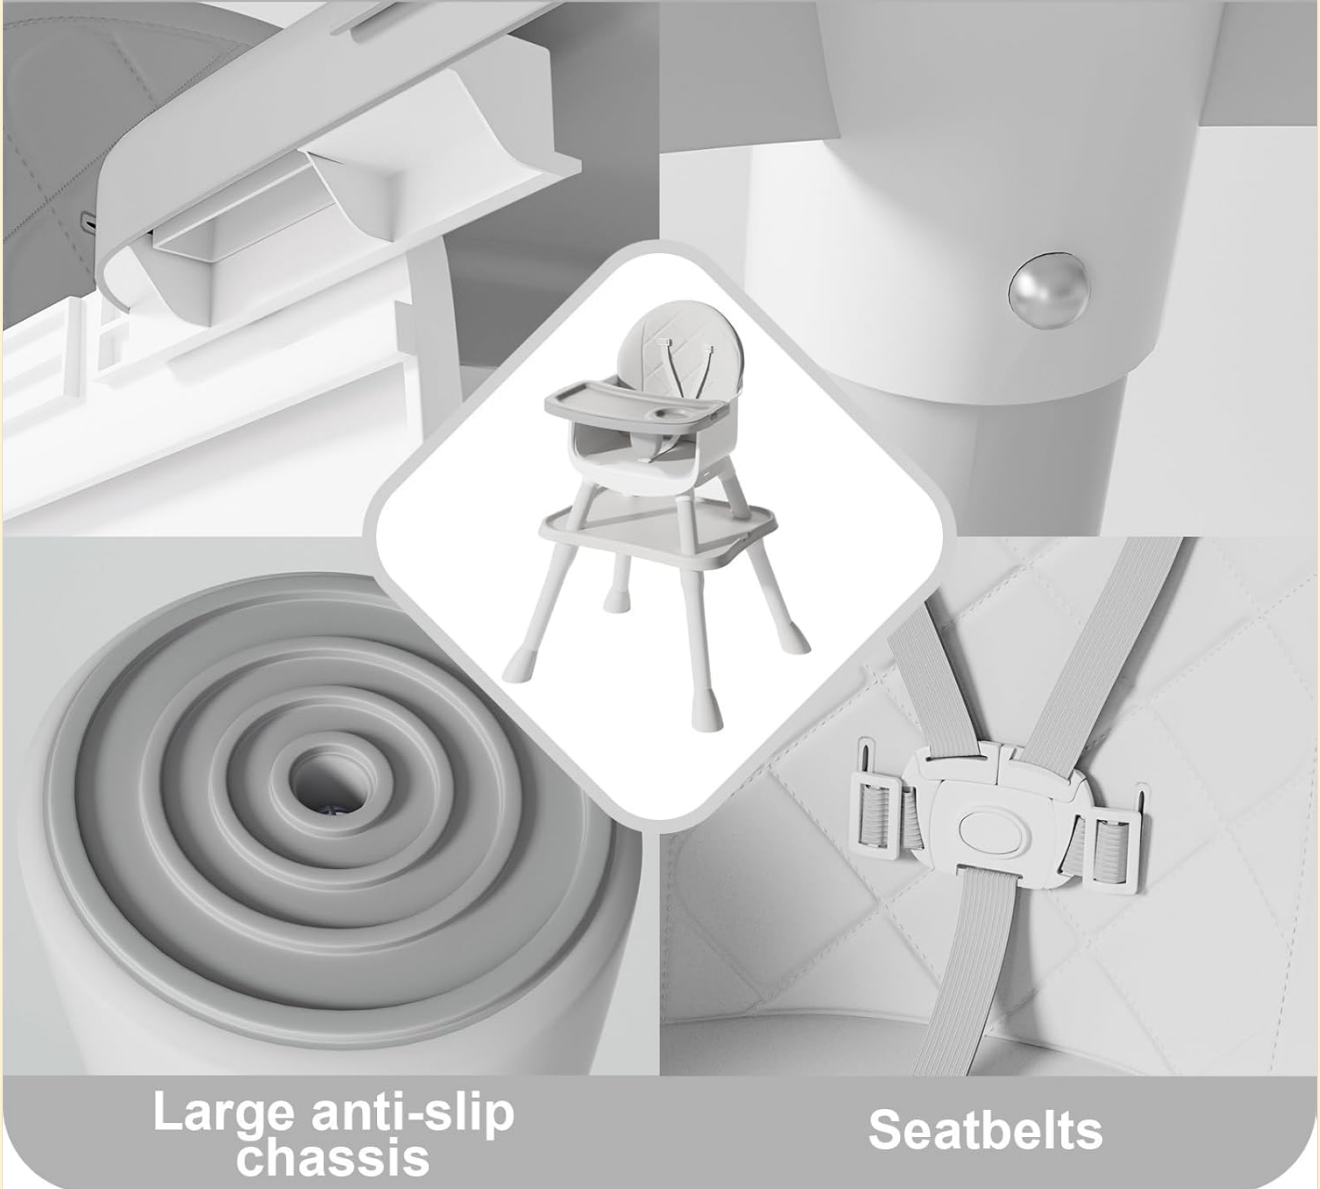

Large anti-slip  
chassis

Seatbelts

*Image: Key safety and functional features, including the five-point harness and anti-slip base.*

### 3. PARTS LIST

Please ensure all components are present before beginning assembly. If any parts are missing or damaged, please contact UNISWAN customer support.

- High Chair Seat with Padded Cushion
- Removable Feeding Tray with Dinner Plate
- Long Legs (for High Chair mode)
- Short Legs (for Toddler Chair/Table modes)
- Footrest
- Tabletop (Smooth and Grooved sides)
- Safety Harness (pre-installed)

- Anti-slip Foot Pads (pre-installed on legs)



*Image: Overview of the high chair and its convertible components.*

#### 4. ASSEMBLY INSTRUCTIONS

The UNISWAN high chair features a self-locking design for tool-free and quick assembly, typically within 5 minutes.

1. **Attach Legs:** Insert the desired set of legs (long for high chair, short for toddler chair/table) into the corresponding slots on the bottom of the seat unit. Ensure the leg release buttons click into place, indicating a secure connection.
2. **Install Footrest (High Chair Mode):** If assembling the high chair, slide the footrest onto the long legs until it locks securely.
3. **Attach Tray:** Align the tray with the armrests of the seat and push it forward until it clicks into place. The tray can be adjusted to different positions.
4. **Place Dinner Plate:** The removable dinner plate sits on top of the main tray. Ensure it is properly seated.

5. **Check Harness:** Verify the five-point safety harness is correctly threaded and adjusted for your child's size.



*Image: Detail of the button for installing the dinner plate.*



*Image: Detail of the button for leg removal/adjustment.*

## 5. OPERATING MODES (6-IN-1 FUNCTIONALITY)

This high chair offers six versatile configurations to support your child's development:

- **Full-Sized Baby High Chair:** For feeding infants and toddlers at table height. Use with long legs, footrest, and feeding tray.
- **Baby Dining Booster Seat:** The seat unit can be detached and secured to an adult dining chair using straps (not included, but typically standard). Use with the feeding tray.
- **Small Dining Chair:** Use the seat unit with the short legs for a low-profile dining option for toddlers.
- **Padded Toddler Chair:** The seat unit with short legs can be used as a comfortable standalone chair for toddlers without the tray.
- **Kids' Learning Table & Chair:** Convert the high chair into a small table and chair set. The tabletop has a smooth side for drawing, eating, or studying.
- **Building Block Table & Chair:** Flip the tabletop to reveal a grooved side, perfect for building blocks and creative play.



**Full-Size Baby High Chair**



**Dining Booster Seat**



**Small Dining Chair**



**Toddler Chair with Cushion**



**Kids Learning Table&Chair**



**Building Block Table&Chair**

**6-in-1**

**Baby High Chair**  
**Grow with your child**

*Image: Visual representation of all six convertible modes.*


## 2 Types of Tabletop for Different Usage Scenarios



Smooth Tabletop  
For Studying, Drawing,  
Eating, etc.



Grooved Tabletop  
For Building Blocks

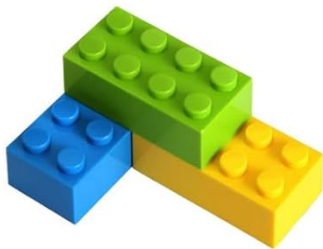 

*Image: The reversible tabletop with smooth and grooved surfaces.*



*Image: Children utilizing the high chair and learning table configurations.*

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures hygiene and extends the product's lifespan.

- **Tray and Dinner Plate:** The dinner plate is easily removable for cleaning. Both the tray and dinner plate can be washed with warm soapy water or wiped clean with a damp cloth.
- **Seat Cushion:** The smooth and waterproof PU seat cushion can be wiped down with a wet cloth. Avoid harsh chemicals that may damage the material.
- **Frame and Legs:** Wipe the plastic frame and legs with a damp cloth and mild soap if necessary. Dry thoroughly.
- **Safety Harness:** The safety harness can be spot cleaned with mild soap and water. Ensure it is completely dry before re-use.
- **General Care:** Avoid using abrasive cleaners or scouring pads. Periodically check all screws and fasteners to ensure they are tight.



*Image: Cleaning procedures for the tray and seat.*

## 7. TROUBLESHOOTING

If you encounter any issues with your UNISWAN high chair, please refer to the following common solutions:

- **Chair feels unstable:** Ensure all legs are fully inserted and the locking buttons are engaged. Verify the high chair is on a flat, level surface. Check that anti-slip pads are intact.
- **Tray not attaching securely:** Make sure there are no obstructions in the tray's attachment points. Push firmly until you hear a click.
- **Harness difficult to fasten/unfasten:** Check for any twists in the straps. Ensure the buckle mechanism is clean and free of debris.
- **Difficulty converting modes:** Ensure all release buttons are pressed correctly when detaching or attaching components. Do not force parts.

If problems persist, please contact UNISWAN customer support for assistance.

## 8. PRODUCT SPECIFICATIONS


<b>Model Number</b>	YY10-1
<b>Product Dimensions (High Chair)</b>	25"D x 26.5"W x 36"H (63.5cm D x 67.3cm W x 91.4cm H)
<b>Item Weight</b>	13.2 pounds (6 kg)
<b>Maximum Weight Recommendation</b>	66 pounds (30 kg)
<b>Material Type</b>	Polypropylene (PP)
<b>Color</b>	Grey
<b>Suitable Age</b>	6 months to 6+ years (depending on mode)



## Product Dimension

Suitable age: 6-36 months

Weight capacity: 55 lbs

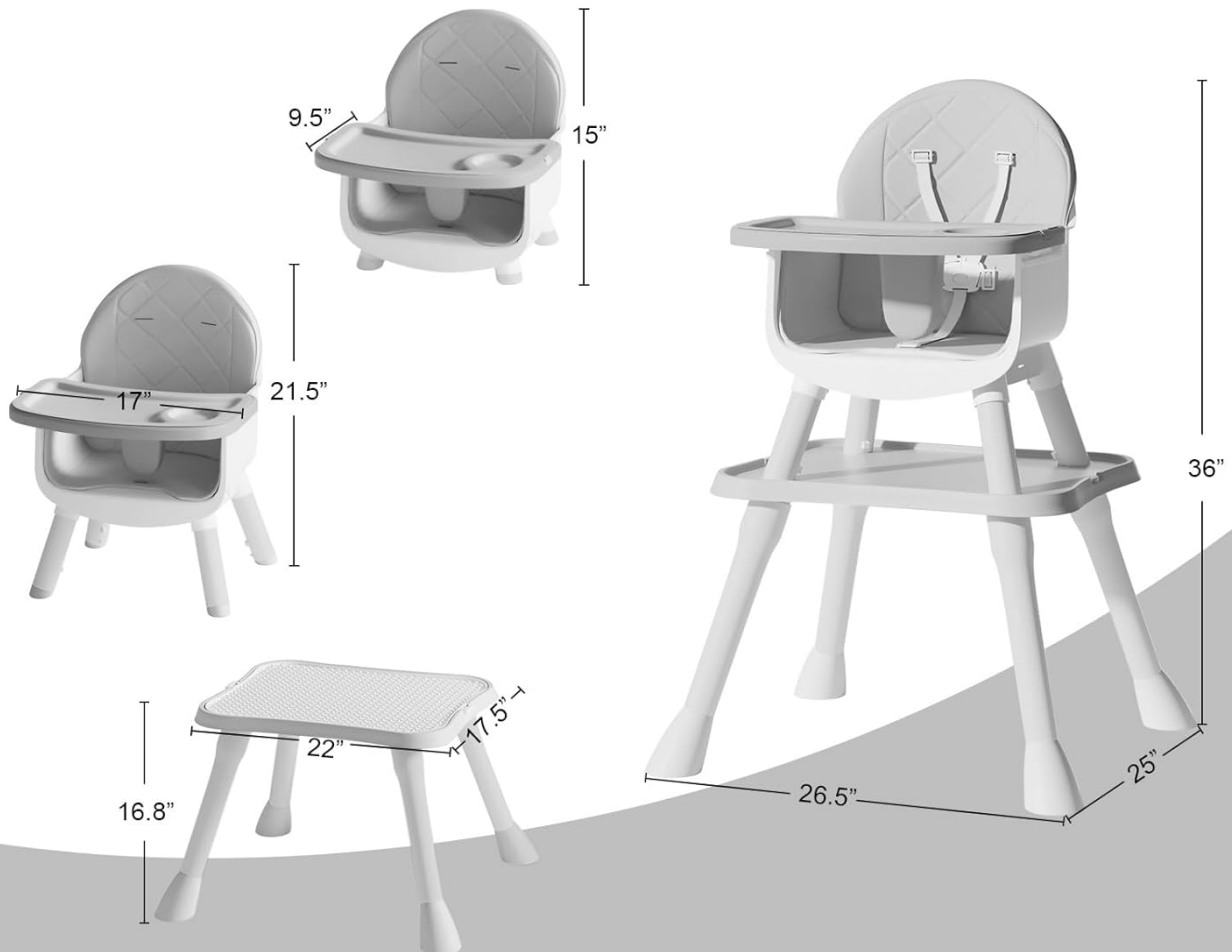 

*Image: Product dimensions for different configurations.*

## **9. WARRANTY AND CUSTOMER SUPPORT**

For warranty information, replacement parts, or any questions regarding your UNISWAN 6-in-1 Convertible Baby High Chair, please contact UNISWAN customer support. Refer to your purchase documentation or the UNISWAN official website for contact details.

We are committed to providing high-quality products and excellent customer service.