

Auertech AU205T

Auertech 1.5 Cu.Ft Portable Clothes Dryer

MODEL: AU205T USER MANUAL

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Auertech 1.5 Cu.Ft Portable Clothes Dryer, Model AU205T. Please read all instructions carefully before using the appliance and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

- Read all instructions before using the dryer.
- **WARNING:** Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the drying compartment.
- Do not reach into the appliance if the drum is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always clean the lint filter before or after each load.
- Do not use heat to dry articles containing foam rubber or similarly textured rubber-like materials.
- Keep the area around the exhaust opening and adjacent surrounding areas free from the accumulation of lint, dust, and dirt.
- The interior of the appliance and exhaust duct should be cleaned periodically by qualified service personnel.

- Do not place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- This appliance must be properly grounded.

PRODUCT OVERVIEW

The Auertech AU205T Portable Clothes Dryer is designed for compact spaces, offering efficient drying with multiple modes. Below are the key components and features of your dryer.

Components



Image: Key components of the Auertech portable dryer, highlighting the stainless steel drum, air intake filter, side handle, and see-through window.

- **Stainless Steel Drum:** Durable and rust-resistant, designed to be gentle on fabrics.
- **Air Intake Filter:** Collects lint and dust, requiring regular cleaning.
- **Side Handle:** For easy portability and positioning.

- **See-through Window:** Allows monitoring of the drying process.
- **Control Knob:** Used to select drying modes and time.

Key Features

- **Fast & Efficient Drying:** 850W power with up to 149°F heat for quick drying.
- **1.5 Cu.Ft Capacity:** Accommodates up to 10 lbs of wet laundry.
- **5 Drying Modes:** Cooling, Anti-Wrinkle, Standard, Heavy, and Refresh.
- **Quiet Operation:** Designed for low-noise performance.
- **Safety Features:** Overheat protection and magnetic door lock.
- **Compact Design:** Ideal for apartments, dorms, RVs, and small laundry spaces.
- **Forward & Reverse Tumble Action:** Reduces tangles and ensures even drying.

SETUP AND INSTALLATION

1. Unpacking

1. Carefully remove the dryer from its packaging.
2. Inspect the dryer for any shipping damage. If damage is found, do not operate the appliance and contact customer support.
3. Remove all packing materials, including any tape or protective films.

2. Placement

The dryer can be placed in various configurations:

Versatile Positioning ✨



Freestanding



Stacking



Under-Counter

Image: Dimensions of the Auertech portable dryer (19" W x 15.8" D x 22" H).



Image: Versatile positioning options for the dryer, including freestanding, stacked, wall-mounted, and rack-mounted. Note: Bracket kit for wall/rack mounting is not included.

- **Freestanding:** Place on a stable, level surface.
- **Stacked:** Can be stacked on a compatible washing machine (ensure stability).
- **Under-Counter:** Fits into standard under-counter spaces.
- Ensure adequate clearance around the dryer for proper ventilation.

3. Ventilation

Proper ventilation is crucial for efficient drying and to prevent moisture buildup.



Image: Included exhaust connector and vent adapter.

1. Connect the provided exhaust connector to the dryer's exhaust outlet.
2. Direct the exhaust hose to an outdoor vent or a suitable indoor lint trap system (sold separately).
3. Ensure the exhaust path is clear and not obstructed.

4. Power Connection

- Plug the dryer into a grounded 120V electrical outlet.
- Do not use extension cords.

OPERATING INSTRUCTIONS

1. Loading Laundry

- Open the dryer door.
- Load clothes loosely into the drum. Do not overload; the maximum capacity is 10 lbs of wet laundry, but for best performance, loads under 5.5 lbs are recommended.
- Close the door securely.

2. Selecting Drying Mode

The dryer features a simple control knob with 5 drying programs.



Image: Control knob with various drying modes and time settings.

1. Turn the control knob to select the desired drying mode:

- **Cooling (0-20 mins)**: For delicate items or to cool down clothes after a cycle.
- **Anti-Wrinkle (20-60 mins)**: Helps reduce wrinkles in fabrics.
- **Standard Clothing (60-120 mins)**: For everyday garments.
- **Heavy (120-200 mins)**: For bulkier items like towels and jeans.
- **Refresh (Cooling Refresh, 20-80 mins)**: To air out or refresh clothes without heat.

- The knob also indicates approximate drying times for each setting.

3. Starting the Dryer

- Once the mode is selected, the dryer will begin operation.
- The dryer will automatically stop when the selected cycle is complete.

MAINTENANCE AND CARE

1. Cleaning the Lint Filter

The lint filter must be cleaned before or after every load to ensure optimal drying performance and safety.



Image: The air intake filter, which should be cleaned regularly.

- Open the dryer door.
- Locate the lint filter inside the drum opening.
- Remove the filter by pulling it out.
- Remove any accumulated lint by hand or with a soft brush.
- Reinsert the clean lint filter firmly into its position.

2. Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

3. Cleaning the Interior Drum

- Periodically wipe the interior of the drum with a damp cloth.
- For stubborn stains, a mild soap solution can be used, followed by wiping with a clean, damp cloth.

TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Dryer does not start.	- Power cord not plugged in. - Door not closed properly. - Circuit breaker tripped.	- Ensure power cord is securely plugged into a grounded outlet. - Close the dryer door firmly until it latches. - Check your home's circuit breaker and reset if necessary.

Problem	Possible Cause	Solution
Clothes are not drying completely.	- Lint filter is clogged. - Overloaded dryer. - Incorrect drying mode selected. - Poor ventilation.	- Clean the lint filter before each load. - Reduce load size. For best performance, load under 5.5 lbs. - Select a longer or hotter drying mode (e.g., "Heavy" for bulky items). - Ensure exhaust hose is clear and properly vented.
Dryer is making unusual noises.	- Foreign objects in the drum. - Dryer not level.	- Check the drum for loose items like coins or buttons. - Ensure the dryer is placed on a stable, level surface.
Dryer stops mid-cycle.	- Overheat protection activated. - Power interruption.	- Clean lint filter and ensure proper ventilation. Allow dryer to cool before restarting. - Check power supply.

SPECIFICATIONS

Feature	Detail
Brand	Auertech
Model Number	AU205T
Capacity	1.5 Cu.Ft (10 lbs wet laundry)
Power	850 Watts
Voltage	120 Volts
Product Dimensions (W x D x H)	19 x 15.8 x 22 inches
Item Weight	32 pounds
Drum Material	Stainless Steel
Drying Modes	Cooling, Anti-Wrinkle, Standard, Heavy, Refresh
Max Temperature	149°F
Included Components	Exhaust connector, Manual, cloth dryer

WARRANTY AND CUSTOMER SUPPORT

Auertech products are manufactured to high-quality standards. For warranty information, technical assistance, or to report any issues, please refer to the warranty card included with your product or visit the official Auertech website. Please have your model number (AU205T) and purchase date available when contacting support. For further assistance, you may visit the [Auertech Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question