

[manuals.plus](#) /

› [Brilvibera](#) /

› [Brilvibera Dawn to Dusk Motion Sensor Wall Light Fixtures - White Wall Mount with E26 Sockets & Tempered Glass, Waterproof Outdoor & Indoor Lights for House, Porch, Garage, Door White 1-Pack User Manual](#)

Brilvibera Dawn to Dusk Outdoor Light Fixture (ae1941b6-c511-4662-a02b-f13f219b32f9)

Brilvibera Dawn to Dusk Motion Sensor Wall Light Fixture User Manual

Model: Dawn to Dusk Outdoor Light Fixture (ae1941b6-c511-4662-a02b-f13f219b32f9)

Brand: Brilvibera

1. INTRODUCTION

Thank you for choosing the Brilvibera Dawn to Dusk Motion Sensor Wall Light Fixture. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read it thoroughly before installation and retain it for future reference.

This outdoor light fixture is designed with a modern aesthetic, featuring heavy-duty metal construction and tempered glass panels. It incorporates a motion sensor and a dusk-to-dawn sensor, offering versatile lighting modes for enhanced security and convenience around your home, porch, garage, or entryway.



Image 1.1: The Brilvibera Dawn to Dusk Motion Sensor Wall Light Fixture in white, showcasing its design and motion sensor.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Risk of Electric Shock. Disconnect power at the fuse or circuit breaker before installing or servicing.

- Always turn off the power supply at the main circuit breaker before beginning installation or performing any maintenance.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- Use only E26 base bulbs with a maximum wattage of 100W.
- Do not attempt to modify the fixture. Any modifications may void the warranty and create a safety hazard.
- Ensure the fixture is securely mounted to a stable surface.
- Keep children away from the installation area.

3. WHAT'S IN THE BOX

Verify that all components are present before beginning installation:

- Wall Light Fixture
- Mounting Hardware
- Shade (pre-assembled)

Note: Bulbs are not included. Please refer to the Bulb Compatibility section for recommended bulb types.

4. SETUP AND INSTALLATION

The Brilvibera wall light fixture is designed for easy installation. It comes with a pre-assembled glass shade and all essential mounting hardware.

4.1 Installation Steps

1. **Prepare for Installation:** Turn off power at the circuit breaker.
2. **Mount the Fixture:** Secure the mounting plate to the junction box using the provided screws.
3. **Wire Connections:** Connect the fixture wires to the house wires according to standard electrical practices (black to black, white to white, ground to ground). Use wire nuts to secure connections.
4. **Attach Fixture:** Carefully push the fixture onto the mounting plate and secure it with the provided screws or nuts.
5. **Install Bulb:** Insert an E26 base bulb (not included) into the socket.
6. **Restore Power:** Turn on power at the circuit breaker.

INSTALL 5 MINUTE

Easy to hook up
Sturdy Mounting Plate



Easy to
Install



Easy to Change
Light Bulb



Image 4.1: Visual guide demonstrating the simple 5-minute installation process and easy bulb replacement.

5. OPERATING INSTRUCTIONS

Your Brilvibera light fixture features a tact switch for easy control of modes and brightness.

5.1 Mode Selection

The light fixture offers three distinct operating modes:

1. **Motion-Only Mode:** Press the tact switch once. In this mode, the light remains off when no motion is detected at night. It turns on to 100% brightness when motion is detected and turns off again after 120 seconds of no motion.
2. **Dusk to Dawn Mode:** Press the tact switch once again. The light maintains a low brightness (15%-50% adjustable) when no motion is detected at dusk. It activates to 100% brightness upon motion detection and returns to low brightness after 120 seconds.
3. **Override Mode:** Press the tact switch a third time. The light stays at 100% brightness all night and automatically turns off at dawn.

One-click Mode Switching

Easy to adjust brightness & switch mode

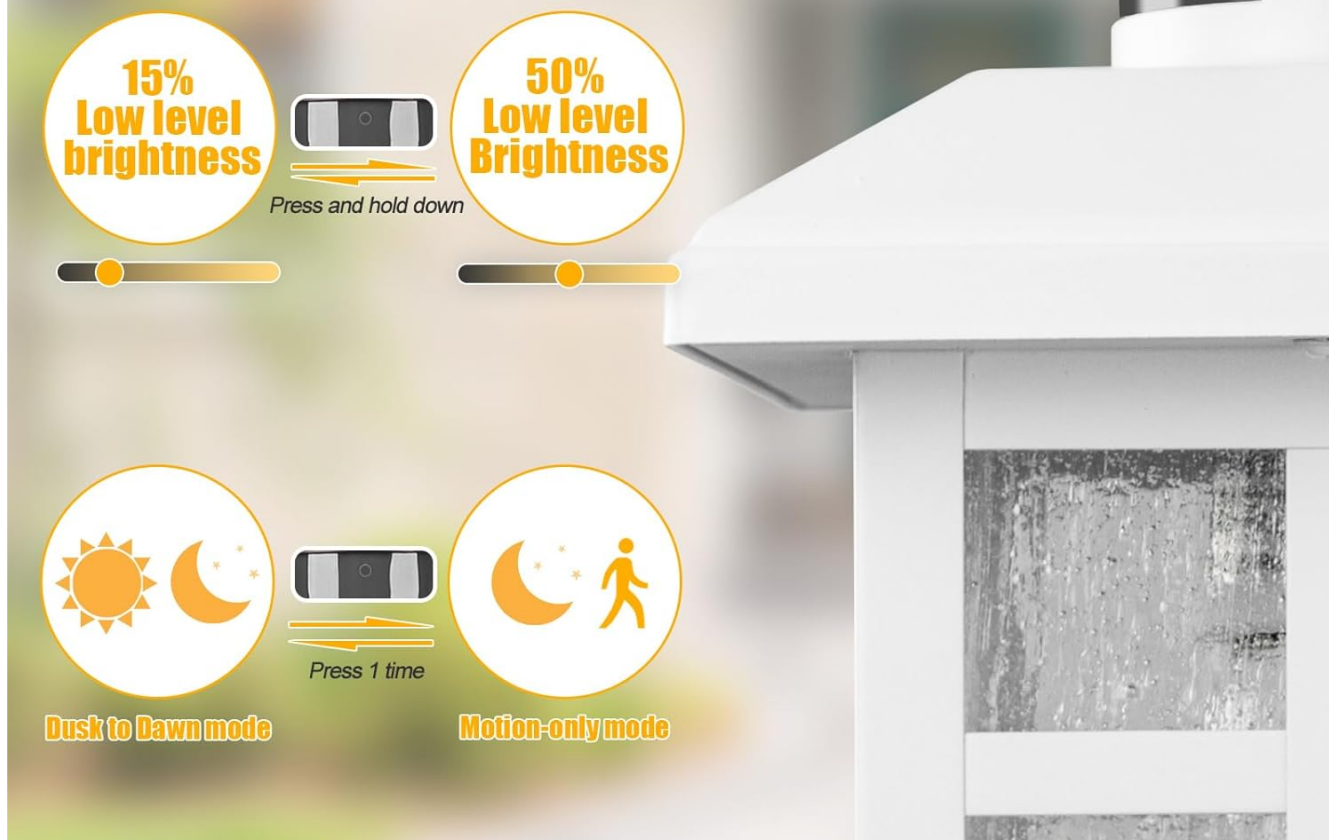


Image 5.1: One-click mode switching and brightness adjustment.

5.2 Brightness Adjustment (Dusk to Dawn Mode)

In Dusk to Dawn Mode, you can adjust the low-level brightness between 15% and 50%. To do this, press and hold the tact switch until the desired brightness level is achieved.

5.3 Motion Detection

The integrated motion sensor offers a generous 40ft detection range and a wide 220° angle, ensuring comprehensive coverage for your outdoor areas.



Image 5.2: Motion detection range and angle.

5.4 Weather Resistance

The fixture is constructed with reinforced metal and sealed with waterproof glue at the glass-to-shade connection, ensuring reliable operation in various outdoor conditions including rain, snow, and fluctuating temperatures.

Dimension

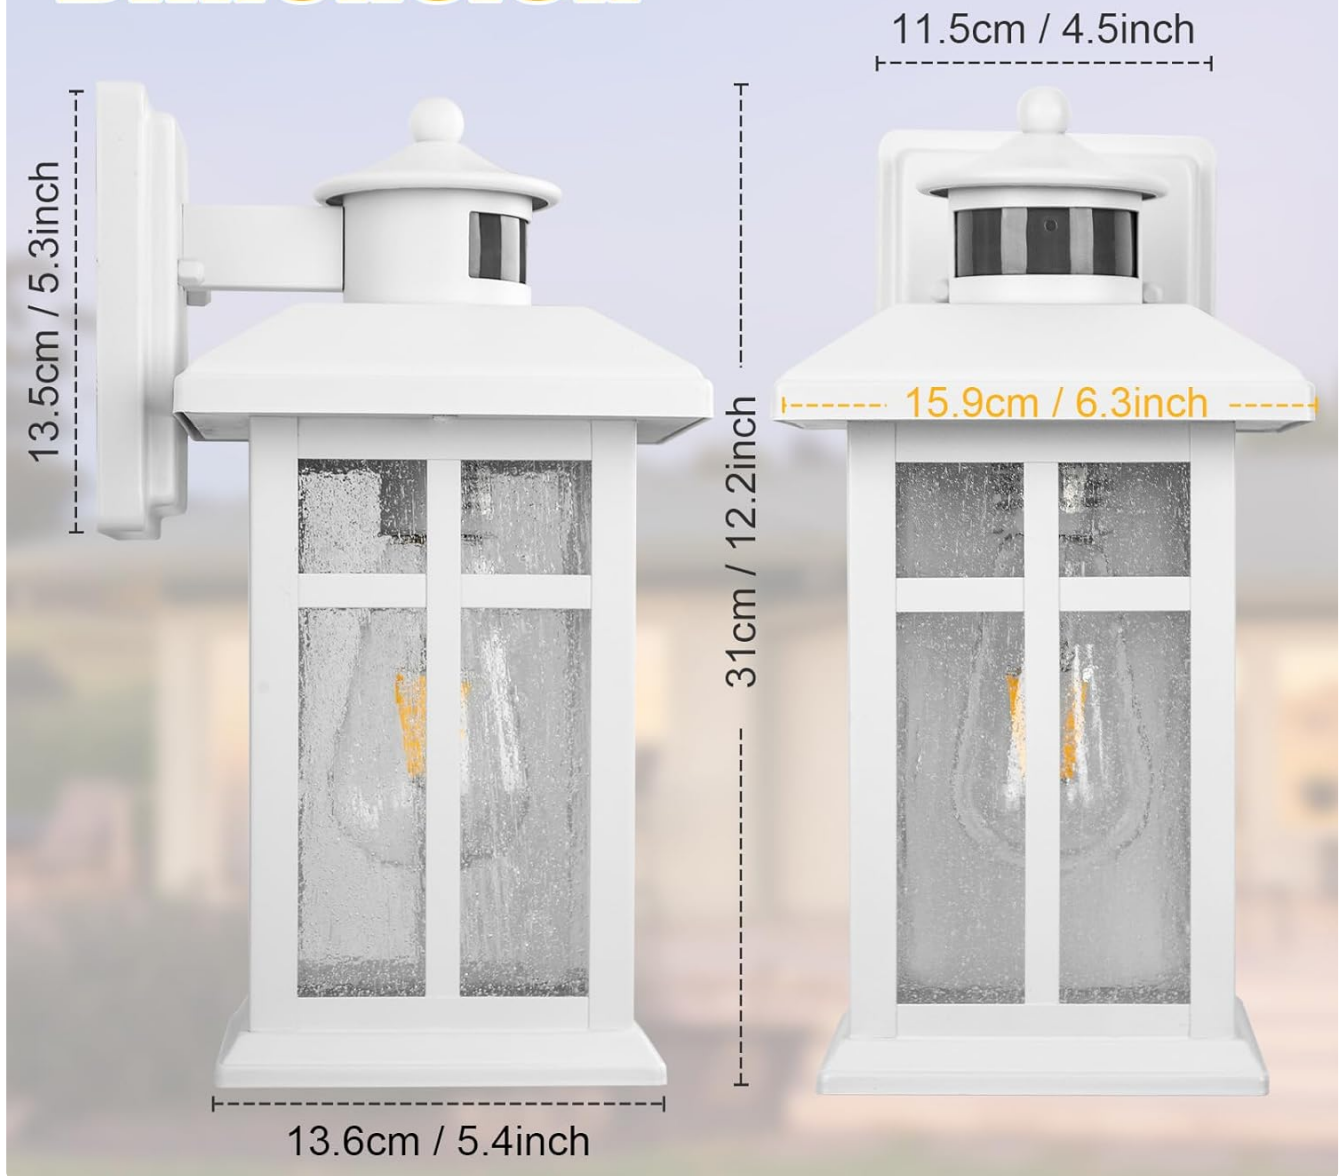


Image 5.3: Weather resistance features.

5.5 Product Overview Video

Your browser does not support the video tag.

Video 5.1: An official product video demonstrating the features and functionality of the Brilvibera Dawn to Dusk Outdoor Light Fixture.

6. MAINTENANCE

6.1 Bulb Replacement

This fixture is compatible with E26 base bulbs (100W Max). To prevent flickering, it is recommended to use dimmable LED bulbs or incandescent bulbs.



Image 6.1: Key features including the E26 bulb base.

6.2 Cleaning

To clean the fixture, ensure power is off. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents as they may damage the finish or glass.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power; Loose wiring; Faulty bulb; Sensor obstructed.	Check circuit breaker. Ensure all connections are secure. Replace bulb. Clear any obstructions from the sensor.

Problem	Possible Cause	Solution
Light flickers.	Incompatible bulb type; Loose bulb.	Use dimmable LED or incandescent bulbs. Tighten bulb.
Motion sensor not working.	Incorrect mode selected; Sensor obstructed; Detection range too low.	Verify correct mode (Motion-Only or Dusk to Dawn). Clear sensor. Adjust sensor sensitivity if applicable (not directly adjustable via tact switch, but ensure proper placement).
Light stays on constantly.	Override mode selected; Constant motion detected.	Switch to Motion-Only or Dusk to Dawn mode. Ensure no continuous motion is within detection range.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Brilvibera
Model Name	Dawn to Dusk Outdoor Light Fixture
Item Model Number	ae1941b6-c511-4662-a02b-f13f219b32f9
Color	White
Material	Glass, Metal
Style	Modern, Classic, Contemporary, Mid-Century Modern
Light Fixture Form	Sconce
Product Dimensions	5.3"L x 5.3"W x 12.2"H
Item Weight	4.09 pounds
Indoor/Outdoor Usage	Outdoor
Power Source	Corded Electric
Installation Type	Wall Mount
Special Features	Energy Efficient, Waterproof, Anti-Rust, Motion Sensor
Control Method	Push Button (Tact Switch)
Light Source Type	Edison, Incandescent, LED
Finish Type	Matte
Shade Material	Glass
Number of Light Sources	1
Voltage	110 Volts

Feature	Detail
Bulb Base	E26
Wattage	100 watts (Max)
Water Resistance Level	Waterproof
Assembly Required	No (pre-assembled shade)
Country of Origin	China



Image 8.1: Product dimensions.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Brilvibera product comes with a Limited Warranty. Please refer to the product packaging or contact customer support for specific warranty terms and conditions.

9.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Brilvibera customer support through the retailer's platform or visit the official Brilvibera store online.

We are committed to providing high-quality products and excellent customer service. Your satisfaction is our priority.