

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PERFASCIN](#) /

› [PERFASCIN Replacement Universal TV Remote Control User Manual for FFALCON/Falcon/BLAUPUNKT/SONIQ/EKO TVs \(Model 24F1 and Compatible Series\)](#)

## PERFASCIN 24F1

# PERFASCIN Replacement Universal TV Remote Control User Manual

For FFALCON/Falcon/BLAUPUNKT/SONIQ/EKO TVs (Model 24F1 and Compatible Series)

## 1. INTRODUCTION

This manual provides essential instructions for the PERFASCIN Replacement Universal TV Remote Control. It is designed to be compatible with a wide range of FFALCON, Falcon, BLAUPUNKT, SONIQ, and EKO television models. Please read this manual carefully to ensure proper setup, operation, and maintenance of your remote control.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

**Note: Ensure batteries are inserted correctly. Incorrect polarity can damage the remote control. Remove batteries if the remote will not be used for an extended period.**

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Operation

This PERFASCIN universal remote control is designed for immediate use with compatible TV models without requiring complex programming or pairing. Simply insert the batteries and point the remote towards your television's infrared (IR) receiver.

### 3.2 Button Functions

The remote control features a standard layout for intuitive navigation and control of your television. Refer to the image below for a visual guide to the buttons and their general functions:





Image: Front view of the remote control, highlighting the button layout and labels.

- **Power Button ( ):** Turns the TV on or off.
- **Mute Button ( ):** Mutes or unmutes the TV audio.
- **Volume Up/Down (+ / -):** Adjusts the TV volume.
- **Channel Up/Down (▲ / ▼):** Changes TV channels.
- **Number Pad (0-9):** Directly enters channel numbers.
- **Navigation Pad (▲ ▼ ◀ ▶, OK):** Navigates menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **MENU:** Opens the TV's main menu.
- **EXIT:** Exits the current menu or function.
- **HOME:** Accesses the TV's home screen or smart hub.
- **N (Netflix):** Direct access to the Netflix application.
- **R (Prime Video):** Direct access to the Prime Video application.
- **GUIDE:** Displays the electronic program guide.
- **SMART:** Accesses smart TV features.
- **INFO:** Displays information about the current program or input.
- **FAV:** Accesses favorite channels list.
- **AV:** Cycles through available input sources (e.g., HDMI, AV).
- **LIST:** Displays a list of channels or recorded content.

- **MAGIC:** Functionality may vary by TV model, often related to smart features or cursor control.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions within TV menus or applications, as indicated on the TV screen.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Previous, Next):** Controls media playback.

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

### 4.2 Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

### 4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## 5. TROUBLESHOOTING

---

If you experience issues with your PERFASCIN remote control, please refer to the following common solutions:

- **Remote is not responding:**
  - Ensure the batteries are correctly installed with the correct polarity.
  - Replace the batteries with fresh AAA batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within the effective operating range (up to 10 meters) and pointing the remote directly at the TV.
- **Some buttons are not working:**
  - While this remote is broadly compatible, certain advanced or brand-specific functions may not be supported by all TV models.
  - Ensure the remote is clean and there is no debris obstructing the buttons.
- **Short transmission distance:**
  - Replace the batteries with new ones.
  - Ensure there are no strong light sources (like direct sunlight) interfering with the infrared signal.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	PERFASCIN
Model	24F1 (and compatible series)
Compatible Devices	FFALCON, Falcon, BLAUPUNKT, SONIQ, EKO Televisions
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)
Special Features	Lightweight design
Product Dimensions	19 x 6 x 2 cm
Item Weight	80 g
Maximum Transmission Distance	Up to 10 meters

## 7. SUPPORT

For further assistance or if you have questions regarding the compatibility of this remote control with your specific television model, please contact PERFASCIN customer support. We aim to respond to inquiries within 12 hours. Please refer to your product's packaging or the retailer's website for specific contact details.