



Manuals.plus /

› Ice-Watch /

› Ice-Watch ICE digit retro Black Silver Digital Watch User Manual

Ice-Watch 022064

Ice-Watch ICE digit retro Black Silver Digital Watch User Manual

Model: 022064 | Brand: Ice-Watch

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Ice-Watch ICE digit retro digital watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Image 1.1: Front view of the Ice-Watch ICE digit retro Black Silver Digital Watch, displaying the digital time, day, and date.

2. PRODUCT FEATURES

- **Design:** The ICE digit retro watch combines a classic digital display with a modern design, suitable for various occasions.
- **Case and Strap:** Features a durable silicone case (32mm small size) and a comfortable plastic strap.
- **Water Resistance:** Water resistant up to 10 ATM (100 meters / 330 feet), suitable for swimming and water sports, but not for diving.
- **Functions:** Includes time display, date, day of the week, alarm, stopwatch, and backlight.
- **Packaging:** Delivered with a presentation box.



Image 2.1: Angled view of the Ice-Watch ICE digit retro Black Silver Digital Watch, highlighting the gold-tone case and black strap.

3. SETUP

3.1 Button Identification

Familiarize yourself with the four buttons on your watch:

- **RESET (Top Left):** Used to reset values or return to a previous setting.
- **ST/STP (Top Right):** Used to start/stop functions like stopwatch or timer, and to adjust settings.
- **MODE (Bottom Left):** Used to cycle through different watch modes (Time, Alarm, Stopwatch, Timer).
- **LIGHT (Bottom Right):** Activates the backlight for illumination.



Image 3.1: Side view of the watch, showing the two control buttons on the left side of the case.

3.2 Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in time setting mode.
2. Press the **ST/STP** button to cycle through the settings: seconds, hours, minutes, month, date, day of the week.
3. Use the **RESET** button to adjust the flashing value. Hold **RESET** to change values quickly.

4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

3.3 Setting the Alarm

1. From the normal time display, press the **MODE** button once to enter Alarm Mode. The alarm time will be displayed.
2. Press the **ST/STP** button to select the hour or minute setting. The selected value will flash.
3. Use the **RESET** button to adjust the flashing hour or minute.
4. Press **MODE** to exit Alarm Setting Mode.
5. To activate/deactivate the alarm, press the **RESET** button while in Alarm Mode. An alarm icon will appear/disappear on the display.

4. OPERATING

4.1 Mode Selection

Press the **MODE** button to cycle through the following functions:

- **Time Display:** Shows current time, day, and date.
- **Alarm:** Displays and allows setting of the alarm time.
- **Stopwatch:** Measures elapsed time.
- **Timer:** Countdown timer function.

4.2 Stopwatch Function

1. Press **MODE** until you reach the Stopwatch Mode (usually indicated by '00:00:00').
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to stop the stopwatch.
4. Press **RESET** to clear the stopwatch to zero.

4.3 Timer Function

1. Press **MODE** until you reach the Timer Mode.
2. To set the timer, press and hold **ST/STP** until the timer digits flash.
3. Use **MODE** to select hours, minutes, or seconds. Use **RESET** to adjust the flashing value.
4. Press **ST/STP** to start the countdown.
5. Press **ST/STP** again to pause/resume the countdown.
6. When the timer reaches zero, an alarm will sound. Press any button to stop the alarm.

4.4 Backlight

Press the **LIGHT** button (bottom right) to illuminate the display for a few seconds, allowing you to read the time in low-light conditions.

5. MAINTENANCE

5.1 Water Resistance

Your Ice-Watch ICE digit retro is water resistant up to 10 ATM (100 meters / 330 feet). This means it is suitable

for everyday use, showering, bathing, swimming, and snorkeling. It is **not** suitable for high-impact water sports or diving. Do not operate buttons while the watch is wet or submerged.

5.2 Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the case and strap materials.

5.3 Battery Replacement

The watch is powered by one Lithium metal battery (included). When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.



Image 5.1: Back view of the watch, showing the stainless steel case back with model number and water resistance information.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim	Low battery	Replace the battery.
Time is incorrect	Time not set correctly or accidental button press.	Refer to Section 3.2 to reset the time.
Buttons are unresponsive	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons to see if any respond. If not, a battery replacement might resolve it. If the issue persists, contact customer support.
Water inside the watch	Water resistance compromised (e.g., buttons pressed underwater, extreme pressure).	Immediately take the watch to a professional watch repair service to prevent further damage.

7. SPECIFICATIONS

Feature	Detail
Model Number	022064
ASIN	B0CJBZ7RR2
Case Material	Silicone
Strap Material	Plastic
Case Size	32mm (Small)
Water Resistance	10 ATM (100 meters / 330 feet)
Battery Type	1 Lithium metal (included)
Package Dimensions	11 x 7.4 x 7.3 cm
Item Weight	28 grams
Country of Origin	China

8. WARRANTY AND SUPPORT

Ice-Watch products are manufactured to high-quality standards and are covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and how to make a claim.

For further assistance, product support, or to locate an authorized service center, please visit the official Ice-Watch website or contact their customer service department. Keep your proof of purchase for warranty purposes.

