

[Manuals.plus](#) /

- › [Kitchen in the box](#) /
- › Kitchen in the box 32 QT Air Fryer Combo Toaster Oven Instruction Manual

## Kitchen in the box KITB-AF30

# Kitchen in the box 32 QT Air Fryer Combo Toaster Oven Instruction Manual

Model: KITB-AF30

## 1. INTRODUCTION AND OVERVIEW

The Kitchen in the box 32 QT Air Fryer Combo Toaster Oven is a versatile 18-in-1 countertop appliance designed to simplify your cooking experience. It combines the functionalities of an air fryer, convection oven, toaster, dehydrator, and rotisserie, offering a wide range of cooking options.

Equipped with advanced 360° air convection technology and 1800W heating elements, this appliance ensures even cooking and crispy results with up to 75% less fat compared to traditional frying methods. Its extra-large capacity is ideal for family meals, accommodating a 13-inch pizza, 9 slices of toast, or a 6 lbs rotisserie chicken.



Figure 1: Kitchen in the box 32 QT Air Fryer Combo Toaster Oven.

# EXTRA-LARGE CAPACITY

## PERFECT FOR GATHERINGS WITH MULTIPLE PEOPLE



 
6 Slice Toast



1.2 LBS  
French Fries



6 LBS Roast

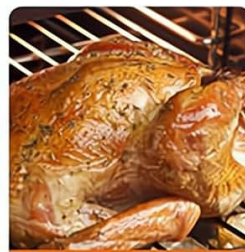

6 LBS Chicken



13-IN Pizza

Figure 2: The 32 QT extra-large capacity of the oven, showing space for a whole chicken, pizza, and fries.

## 2. SAFETY INSTRUCTIONS

- Always read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### 3. PRODUCT COMPONENTS AND ACCESSORIES


Your Kitchen in the box Air Fryer Combo Toaster Oven comes with several accessories to enhance your cooking versatility:

Component	Description
Enamel Baking Pan	Advanced non-stick coating, perfect for baking chicken, fish, beef, pork, roasts, and veggies.
Oven Rack	Ideal for baking pizza and toast.
Rotisserie Kit and Fork	Essential for roasting whole chickens or other large cuts of meat.
Air Fry Basket	Designed for air frying fries, chicken wings, and nuggets.
Crumb Tray	Catches crumbs and drips for easier cleaning.



## Enamel Baking Pan

Using an advanced non-stick coating, which perfect for chicken, fish, beef, pork, roasts, and veggies.

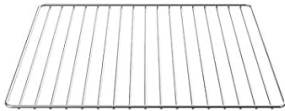


## Oven Rack

Great for baking pizza and toast.



## Rotisserie Kit and Fork

Great helper for roasting a chicken.

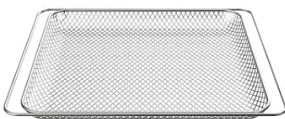

## Air Fry Basket

Great for fries, chicken wings and nuggets.



## Crumb Tray

Catch the crumb and dirt for easier cleaning.



Figure 3: Included accessories: Enamel Baking Pan, Oven Rack, Rotisserie Kit and Fork, Air Fry Basket, and Crumb Tray.

## 4. SETUP

1. **Unboxing:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe down the interior and exterior of the oven with a damp cloth. Wash all accessories (baking pan, racks, basket, rotisserie kit) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the oven on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 4 inches) on all sides for proper ventilation. Do not place it directly under cabinets or near flammable materials.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Video 1: Unboxing and initial setup of the Kitchen in the box Air Fryer Oven, demonstrating removal from packaging and placement of accessories.

## 5. OPERATING INSTRUCTIONS

The Kitchen in the box Air Fryer Combo Toaster Oven features a digital touch control panel with 18 preset functions. The display shows temperature, time, and selected functions.



Figure 4: Overview of the one-touch digital control panel and its various functions.

# 18-IN-1 LIMITLESS MEAL OPTIONS

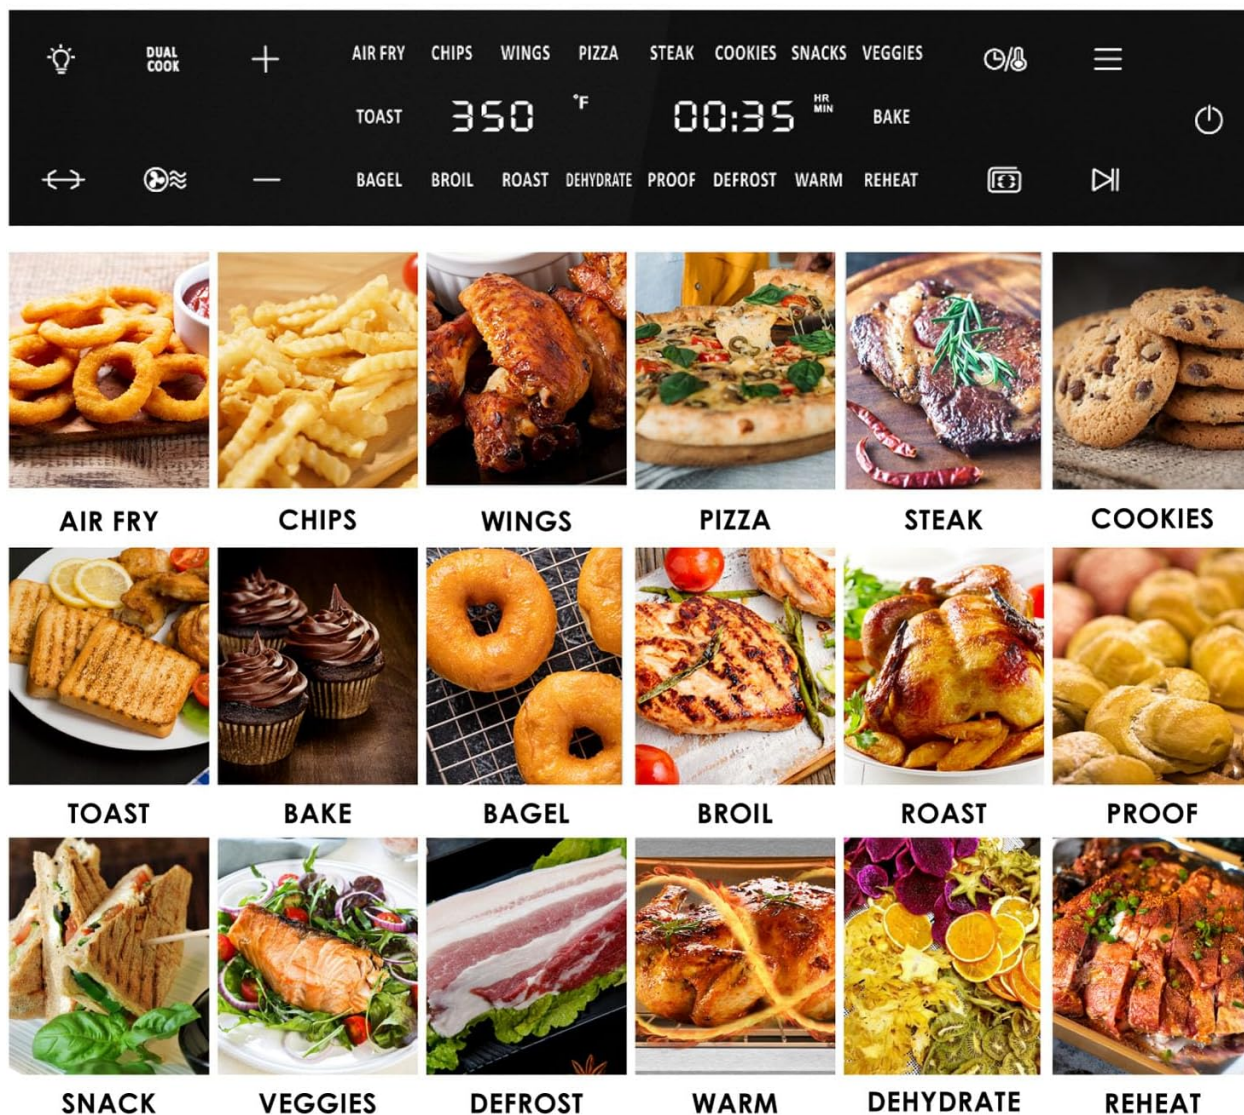


Figure 5: The 18-in-1 limitless meal options available on the control panel, including Air Fry, Chips, Wings, Pizza, Steak, Cookies, Snacks, Veggies, Toast, Bagel, Broil, Roast, Dehydrate, Proof, Defrost, Warm, and Reheat.

## 5.1. Setting Time and Temperature

1. Press the ON/OFF button to switch on the oven.
2. Select the desired function from the preset options.
3. Press the TEMP/TIME button to enter DIY mode.
4. Use the "+" or "-" buttons to adjust the temperature.
5. Press the TEMP/TIME button again to adjust the cooking time.
6. Use the "+" or "-" buttons to set the desired time. Note that some functions have a time range of up to 12 hours.
7. Press the START/STOP button to begin cooking.

Video 2: Demonstration on how to set the time and temperature on the oven's control panel.

## 5.2. Using the Dual Cook Function

The innovative Dual Cook function allows you to combine two different cooking functions sequentially, making complex recipes effortless.

1. Press the ON/OFF button to turn on the oven.
2. Press the DUAL COOK button. The display will show 5 functions (AIR FRY, BROIL, BAKE, ROAST, WARM).
3. Press the "+" or "-" button to choose your first function. The selected function will flash.
4. Press the MENUS button to select the first function.
5. Press the "+" or "-" button to choose your second function from the remaining 4 functions.
6. Press the MENUS button to select the second function.
7. Press the START/STOP button to begin the dual cooking process.

## ADVANCED DUAL FUNCTION

**JUST SET IT UP ONCE, AUTO SWITCH TO THE SECOND MODE**

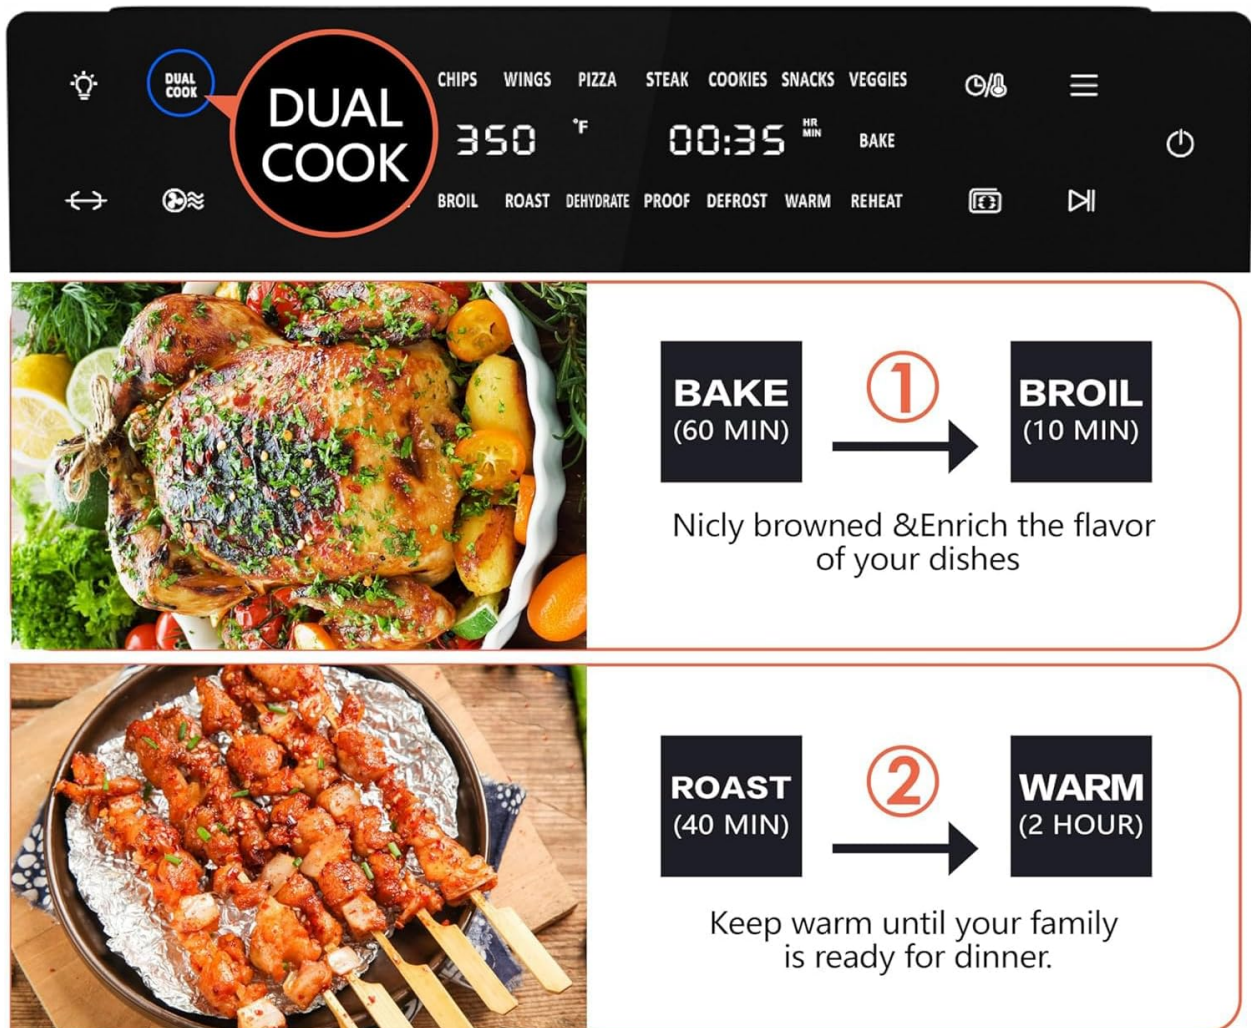 


Figure 6: Illustration of the Advanced Dual Cook function, showing how to combine two cooking modes like Bake then Broil, or Roast then Warm.

Video 3: Step-by-step guide on how to use the Dual Cook function for sequential cooking.

### 5.3. Selecting Different Menus

The oven offers 18 preset functions for various dishes. Follow these steps to select a menu:

1. Press the ON/OFF button to turn on the oven.
2. Press the MENUS button to select the desired function. The icon for the selected function will flash.
3. Press the "+" or "-" button to adjust the temperature or time as needed for the selected function.

4. Press the START/STOP button to begin cooking.

Video 4: Instructions on how to navigate and choose different cooking menus on the control panel.

### 5.4. Using the Air Fryer Function

To use the air fryer function, place food in the Air Fry Basket and insert it into the oven. Select the 'Air Fry' preset for optimal results.

Video 5: A demonstration of how to effectively use the air fryer function for various foods.

### 5.5. Using the Rotisserie Function

The rotisserie function is perfect for evenly cooking whole poultry or roasts. Secure the food onto the rotisserie spit using the forks, then insert the spit into the designated slots inside the oven. Select the 'Roast' or 'Rotisserie' preset.

Video 6: A short clip showing a chicken being cooked using the rotisserie function inside the oven.

### 5.6. Using the Toast Function

To toast, place bread slices on the oven rack. Select the 'Toast' function and adjust the gear (level of toasting) according to your preference. There are seven gears to choose from; the higher the gear, the more focused the toast.

Video 7: A demonstration of the toast function, showing the control panel and the toasting process.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your oven. Always ensure the appliance is unplugged and completely cooled down before cleaning.

1. **Interior Cleaning:** Wipe the inner walls of the oven with a soft cloth dampened with a mixture of water and white vinegar, or a mild neutral detergent. For stubborn grease, a homemade cleanser (mixing water and white vinegar) can be effective. Always clean the inner wall with water again after using cleanser.
2. **Exterior Cleaning:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Accessory Cleaning:** All removable accessories (baking pan, racks, air fry basket, crumb tray, rotisserie kit) can be washed with warm, soapy water. Rinse thoroughly and dry completely before storing or reinserting.
4. **Crumb Tray:** The crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards. Slide it out from the bottom of the oven, empty crumbs, and wash as described above.

Video 8: Detailed instructions on how to clean the interior of the air fryer oven.

## 7. TROUBLESHOOTING

If you encounter any issues with your Kitchen in the box Air Fryer Combo Toaster Oven, refer to the common problems and solutions below:

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a grounded electrical outlet. Check if the outlet is functioning by plugging in another appliance.
- **Food not cooking evenly:** Ensure the oven is preheated properly. For air frying, avoid overcrowding the

basket to allow for optimal air circulation. Flip or shake food halfway through cooking.

- **Unusual odors during first use:** It is normal for a new appliance to emit a slight odor during its first few uses. This should dissipate quickly. Ensure good ventilation.
- **Control panel unresponsive:** Unplug the appliance from the power outlet, wait for a few minutes, then plug it back in. This may reset the controls.
- **Excessive smoke:** This may be due to grease buildup. Unplug the oven, allow it to cool, and clean the interior and accessories thoroughly, especially the crumb tray.

If the problem persists after attempting these solutions, please contact customer support for further assistance.

## 8. SPECIFICATIONS

Specification	Detail
Brand	Kitchen in the box
Model Name	Air Fryer Oven
Item Model Number	KITB-AF30
Color	Black
Product Dimensions	16.9"D x 18"W x 14.4"H
Item Weight	28.3 pounds
Special Feature	Timer, 18 Cooking Presets, Infrared Heating Elements, Advanced Dual Function
Control Type	Touch Control
Door Style	Dropdown Door
Door Material Type	Tempered Glass
Power Source	AC adapter
Temperature Range	90°F-450°F Degrees Fahrenheit

## 9. WARRANTY AND SUPPORT

Your Kitchen in the box 32 QT Air Fryer Combo Toaster Oven is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact the manufacturer directly through their official website or the contact information provided in your product manual. You may also visit the [Kitchen in the box Store on Amazon](#) for additional resources and support.

