



Manuals.plus /

- › Cleyver /
- › CLEYVER Earbuds Pro Wireless Headphones User Manual

## Cleyver ODEWPRO

# CLEYVER Earbuds Pro Wireless Headphones User Manual

Model: ODEWPRO

## INTRODUCTION

Thank you for choosing CLEYVER Earbuds Pro. This user manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new wireless headphones. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: The CLEYVER Earbuds Pro displayed with the CLEYVER brand logo.

## PACKAGE CONTENTS

Ensure all items are present in your package:

- CLEYVER Earbuds Pro (Left and Right)
- Wireless Charging Case
- USB-C Charging Cable
- Eartips (Small, Medium, Large sizes)
- User Manual (this document)

 CLEYVER



Image: The CLEYVER Earbuds Pro and their accompanying charging case.

## PRODUCT OVERVIEW

The CLEYVER Earbuds Pro are designed for a superior audio experience with advanced features. Each earbud is equipped with a dual microphone system for clear calls and Environmental Noise Cancellation (ENC) technology. The earbuds feature a hybrid Touch & Push-button control system for easy management of calls and media playback. The compact charging case provides extended battery life and supports both wired (USB-C) and wireless charging.



Image: The CLEYVER Earbuds Pro securely placed within their charging case.

## SETUP

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- **Wired Charging:** Connect the provided USB-C cable to the charging port on the case and to a power source.
- **Wireless Charging:** Place the charging case on a compatible wireless charging pad.

The charging case has a 500 mAh battery, providing up to 40 hours of listening time or 7 hours of talk time. A quick 10-minute charge can provide up to 2 hours of autonomy.



Image: Visual representation highlighting the 40 hours of playtime for the CLEYVER Earbuds Pro.

## 2. Pairing with Your Device

1. Open the lid of the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "CLEYVER Earbuds Pro" from the list.
4. Once connected, a confirmation sound will play, and the earbuds will be ready for use.

The earbuds feature instant pairing when the case lid is opened, simplifying the connection process.

# SIMPLE SETUP

*Instant pairing and connection as soon as you open the case lid*



Image: A smartphone screen displaying the CLEYVER Earbuds Pro as a connected Bluetooth device, illustrating the simple setup process.

### **3. Wearing the Earbuds**

Choose the eartip size (S, M, L) that provides the most comfortable and secure fit for optimal sound quality and noise isolation. Gently insert the earbuds into your ears and twist slightly to secure them.

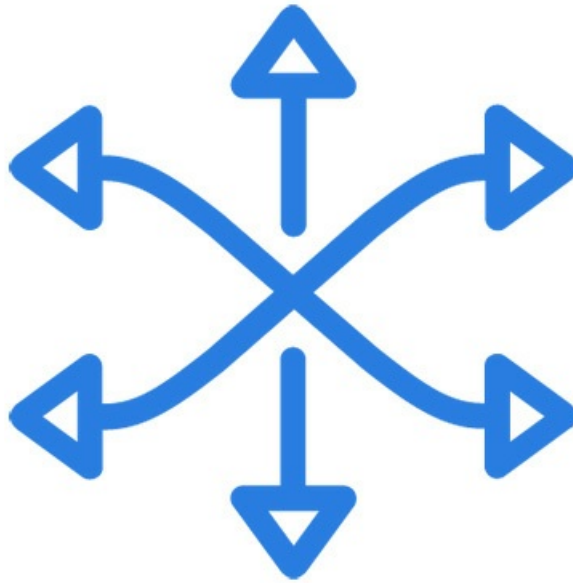


Image: A person demonstrating how to properly insert a CLEYVER Earbud Pro into their ear.

## OPERATING THE EARBUDS

### Touch & Push-Button Controls

The CLEYVER Earbuds Pro feature a hybrid control system combining touch gestures with a physical push-button for precise command execution. Specific functions for playback, call management, and mode switching are detailed in the quick start guide included in the package.

### Sound Modes

- **Environmental Noise Cancellation (ENC):** This technology actively reduces ambient noise, providing clearer audio during calls and an immersive listening experience.
- **Transparency Mode:** Allows you to hear your surroundings without removing the earbuds. You can choose between full or partial noise isolation to stay aware of your environment.

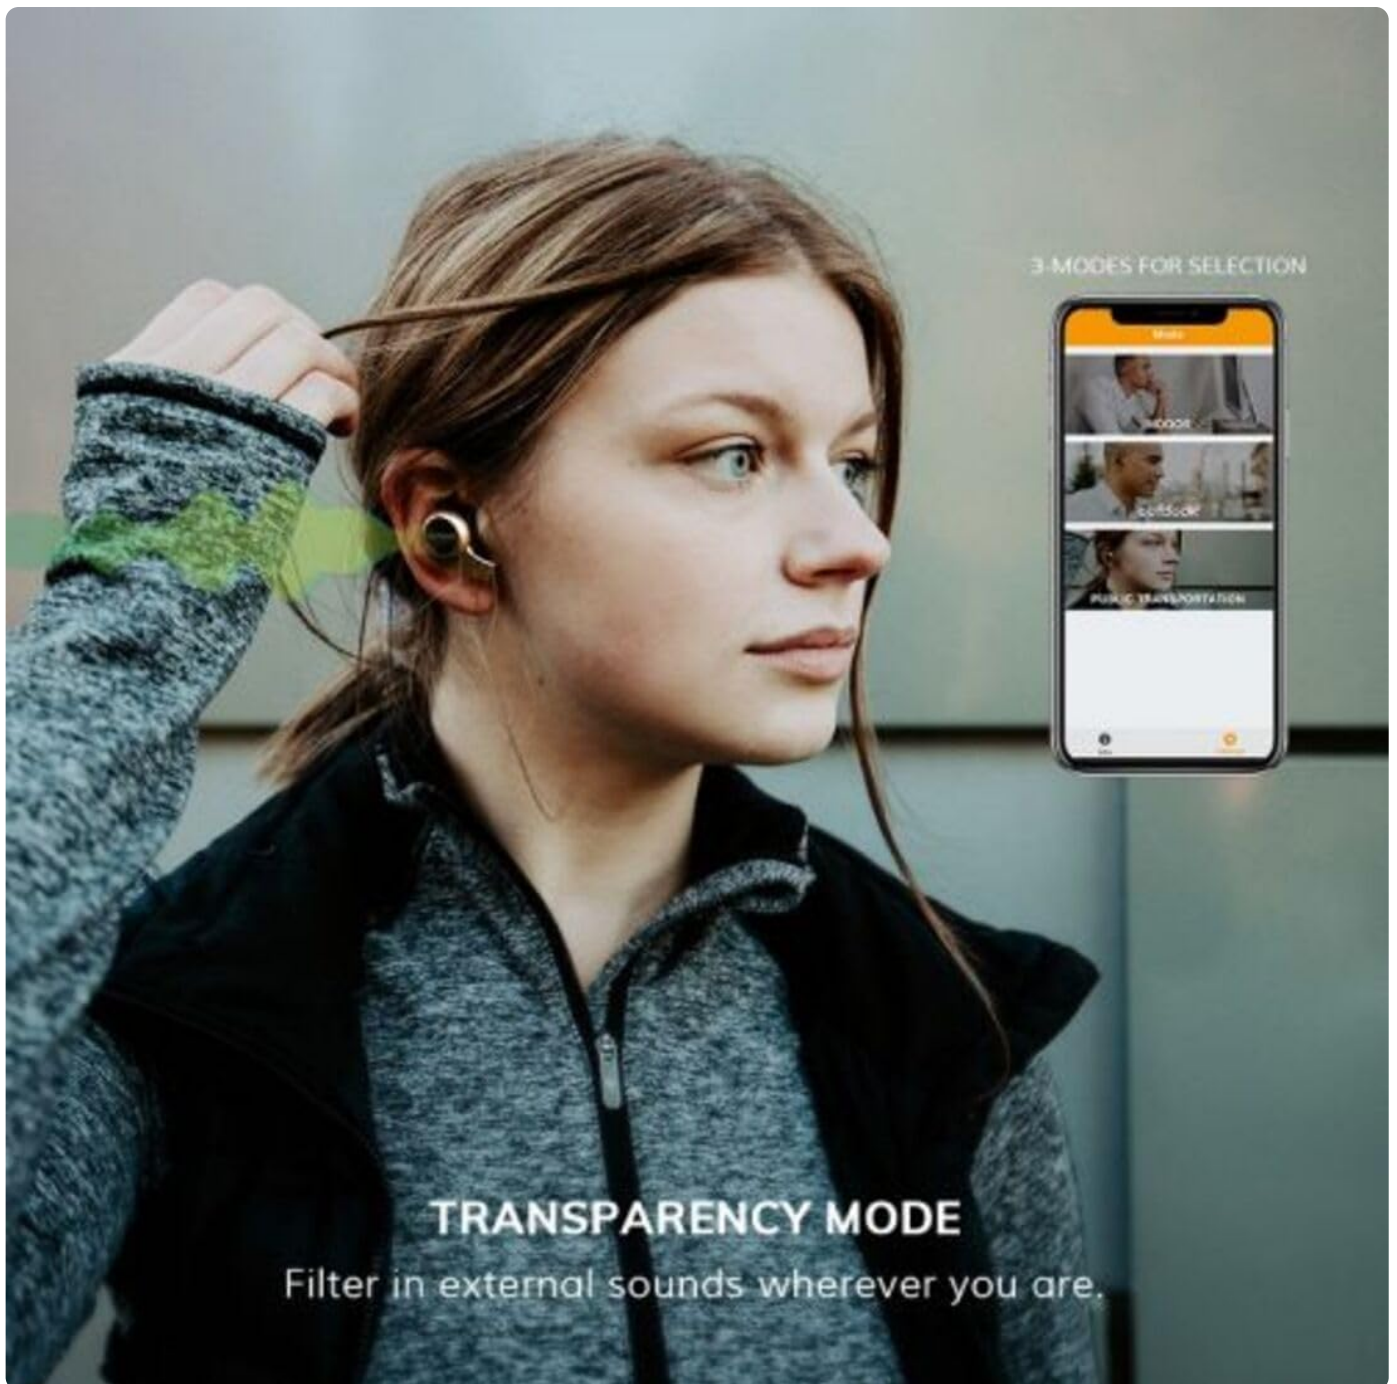


Image: A person wearing CLEVER Earbuds Pro, with an overlay indicating 'Transparency Mode' and a phone screen showing options for different sound modes.

### **Gaming Mode**

Activate Gaming Mode for reduced audio latency, ensuring synchronized sound with on-screen action during gaming sessions.

# GAMING MODE

*Feel the action the moment you see it on screen*



Image: The CLEYVER Earbuds Pro positioned beside a smartphone screen showing a dynamic racing game, illustrating the 'Gaming Mode' feature.

## Call Functions

Benefit from HD audio and a dual microphone system per earbud, designed to deliver crystal-clear voice quality during calls while minimizing background noise.

## Mono or Stereo Use

The earbuds can be used individually (mono mode) or together (stereo mode) according to your preference and situation.

## MAINTENANCE

### Cleaning

Regularly clean your earbuds and charging case to maintain optimal performance and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and case.

- For eartips, remove them from the earbuds and clean with a damp cloth, then dry thoroughly before reattaching.
- Avoid using abrasive materials, solvents, or harsh chemicals.

## Storage

When not in use, store the earbuds in their charging case to protect them from dust, damage, and to keep them charged.

## Water Resistance

The CLEYVER Earbuds Pro are IPX5 certified, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for workouts and light rain, but they are not designed for submersion in water.

## TROUBLESHOOTING

If you encounter issues with your CLEYVER Earbuds Pro, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on your device's Bluetooth. Place earbuds back in case, close, then reopen to re-enter pairing mode.
No sound from one earbud	Check battery level of both earbuds. Re-pair the earbuds with your device. Ensure both earbuds are properly seated in the charging case for connection.
Charging case not charging	Verify the USB-C cable is securely connected to both the case and power source. If using wireless charging, ensure the case is correctly positioned on the charging pad.
Poor sound quality	Ensure earbuds are clean and eartips are correctly sized and sealed in your ear. Move closer to your connected device to avoid interference.

## SPECIFICATIONS

Feature	Detail
Brand	Cleyver
Model Name	ODEWPRO
Color	Black
Form Factor	In-ear
Connectivity Technology	Wireless (Bluetooth 5.2)
Bluetooth Range	Up to 30 meters
Microphones	2 per earbud (with ENC Technology)
Noise Control	Environmental Noise Cancellation (ENC), Transparency Mode
Water Resistance	IPX5 Standard (splash resistant)
Earbud Playtime	Up to 40 hours (with charging case)
Earbud Talk Time	Up to 7 hours
Standby Time	Up to 200 hours
Charging Case Battery	500 mAh
Charging Type	USB-C (wired) or Wireless Charging
Included Components	User Manual, USB-C Cable, Wireless Charging Case, Eartips

## WARRANTY AND SUPPORT

### Warranty Information

The CLEYVER Earbuds Pro come with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

### Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Cleyver website or contact their customer service through the details provided on your purchase receipt or packaging.

