

Nokia TA-1584

Nokia C210 Smartphone User Manual

INTRODUCTION

Welcome to the user manual for your new Nokia C210 smartphone. This device is designed to be a reliable daily companion, featuring a robust metal chassis and toughened display glass for enhanced durability. It is equipped with a powerful octa-core processor for seamless multitasking and a dual 13 MP camera with AI modes for high-quality photography. Enjoy immersive entertainment on its large 6.3-inch HD+ display and benefit from all-day battery life.



The Nokia C210 smartphone, showcasing its sleek design and dual camera setup.

WHAT'S IN THE BOX

Upon opening your Nokia C210 package, you should find the following items:

- Nokia C210 Smartphone
- SIM Tray Ejector Tool
- USB Type-C Cable (for charging and data transfer)

- Quick Start Guide
- Safety Booklet
- USB-A Wall Charger (5V, 2A)




Illustration of the items included in the Nokia C210 retail packaging.

PRODUCT OVERVIEW

Familiarize yourself with the physical components of your Nokia C210 smartphone:

- **Display:** Large 6.3-inch HD+ LCD display with a V-notch for the front camera.
- **Rear Camera:** Dual 13 MP camera system with AI modes, located on the back.
- **Front Camera:** 5 MP camera, located in the V-notch on the front display.
- **Power Button:** Located on the right side of the device.
- **Volume Buttons:** Located on the right side, above the power button.

- **USB-C Port:** Located at the bottom for charging and data transfer.
- **3.5mm Audio Jack:** Located at the top for headphones.
- **SIM/MicroSD Card Tray:** Located on the left side of the device.
- **Speaker:** Located on the bottom of the device.

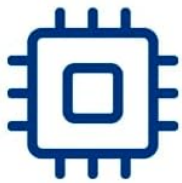

Smooth performance

Powerful octa-core
Qualcomm processor



Detailed view of the dual rear camera setup.



Durable body

Smooth and intuitive
experience across
the device

The robust and durable body of the Nokia C210.



Imagery

Dual Rear Cam: 13MP AF +
2MP Depth
Front Cam: 5MP FF

The display showcasing smooth performance with the octa-core processor.

SETUP

Inserting SIM and MicroSD Card

To insert your SIM card and an optional MicroSD card for expanded storage:

1. Locate the SIM/MicroSD card tray on the left side of your phone.
2. Insert the SIM tray ejector tool into the small hole next to the tray. Push firmly until the tray pops out.
3. Carefully pull out the tray.
4. Place your Nano-SIM card(s) and MicroSD card (if applicable) into the designated slots on the tray, ensuring they are correctly oriented.
5. Gently push the tray back into the phone until it clicks into place.

Powering On Your Phone

To turn on your Nokia C210, press and hold the Power button located on the right side of the device until the

Nokia logo appears on the screen.

Initial Android Setup

Follow the on-screen prompts to complete the initial setup of your Android 13 device:

1. Select your preferred language and region.
2. Connect to a Wi-Fi network to download necessary updates and set up your Google account.
3. Sign in with your Google account or create a new one.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, password, or fingerprint).
6. Restore data from a previous device (optional).
7. Complete any additional setup steps as prompted.

OPERATING YOUR DEVICE

Basic Navigation

Your Nokia C210 runs on Android 13, offering an intuitive user experience. Navigate using gestures or the traditional three-button navigation bar at the bottom of the screen.

Making Calls and Sending Messages

Use the Phone app to make calls and the Messages app to send and receive SMS/MMS messages. Ensure your SIM card is properly inserted and activated with your carrier.

Using the Camera

The Nokia C210 features a dual 13 MP rear camera and a 5 MP front camera. Open the Camera app to capture photos and videos. Utilize AI camera modes for enhanced image quality.

Internet and Connectivity

Connect to the internet via Wi-Fi or your mobile data (LTE only). Access web content using the pre-installed Chrome browser. Bluetooth connectivity allows you to pair with wireless accessories.

Watch this video for a product overview of the Nokia C210, demonstrating its features and capabilities.

MAINTENANCE

Software Updates

Keeping your phone's software up to date ensures optimal performance, security, and access to new features. To check for updates:

1. Slide up the bottom menu to access your apps.
2. Select **Settings**.

3. Scroll down and tap on **System**.
4. Tap on **Advanced**.
5. Select **System update**.
6. Tap **Check for update** and follow any on-screen instructions.

Learn how to update your Nokia phone's software with this helpful video guide.

Battery Care

The Nokia C210 is designed for all-day battery life. To maximize battery longevity:

- Avoid extreme temperatures.
- Use the provided USB cable and charger.
- Unplug the charger once the battery is full.
- Charging time is approximately 3 hours for a full charge.

TROUBLESHOOTING

Phone Not Responding (Reboot)

If your phone becomes unresponsive, you can perform a forced reboot:

1. Press and hold the **Volume Up key** and the **Power button** simultaneously.
2. Continue holding for approximately 15 seconds, or until the phone vibrates and the Nokia logo appears.
3. Release the buttons. Your phone should now restart normally.

This video provides a visual guide on how to reboot your Nokia phone if it becomes unresponsive.

Further Assistance

For more detailed troubleshooting steps, please refer to the official [Troubleshooting Guide \(PDF\)](#) provided by Nokia.

SPECIFICATIONS

Feature	Detail
Model Name	C210 (TA-1584)
Operating System	Android 13.0
RAM	3 GB
Internal Storage	32 GB (Expandable Memory)

Screen Size	6.3 Inches
Resolution	1560 x 720
Rear Camera	13MP Dual Camera
Front Camera	5MP
Battery Capacity	3000 mAh
Phone Talk Time	12 Hours
Charging Time	3 Hours
Connectivity	Bluetooth, Wi-Fi, USB (LTE only)
Dimensions	6.28 x 2.91 x 0.34 inches
Weight	5.9 ounces
Color	Charcoal

SUPPORT AND WARRANTY

Contacting Support

For any issues or questions regarding your Nokia C210, you can contact Nokia mobile support directly through the My Phone app on your device:

1. Slide up the bottom menu to access your apps.
2. Open the **My Phone** app.
3. Click on **Support**.
4. Select **Support chat** to immediately start a conversation with a Nokia mobile support representative.

English chat support is available 24/7. Other languages may be subject to business hours.

This video demonstrates how to chat with Nokia Support for assistance.

Official User Guide

For comprehensive information and detailed instructions, please download the official [User Guide \(PDF\)](#).

Warranty Information

Information regarding your product's warranty can typically be found within the Safety Booklet included in your product packaging or by contacting Nokia mobile support directly.