

Pyle PCASRSD18BT.5

Pyle PCASRSD18BT.5 Bluetooth Cassette Player User Manual

Model: PCASRSD18BT.5

1. INTRODUCTION

This manual provides instructions for the operation and maintenance of your Pyle PCASRSD18BT.5 Bluetooth Cassette Player. Please read this manual thoroughly before using the device to ensure proper function and to prevent damage. Keep this manual for future reference.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Use only specified power sources (2*AA batteries or 5V DC USB adapter).
- Keep the device away from water and other liquids.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Pyle PCASRSD18BT.5 Bluetooth Cassette Player
- USB Power Cable
- Earphones

What's IN THE BOX?



Image: The Pyle PCASRSD18BT.5 cassette player shown alongside its included USB power cable and earphones, illustrating the complete package contents.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your cassette player.



Image: A multi-angle diagram of the Pyle PCASRSD18BT.5 cassette player, highlighting key components such as the PLAY, STOP, FAST FORWARD, REWIND, DIR (Auto-reverse switch), LID SWITCHER, 5V DC PORT, AUX PORT, VOLUME control, and Wireless BT LED Indicator.

- **PLAY Button:** Initiates tape playback.
- **STOP Button:** Halts tape playback.
- **F.F (Fast Forward) Button:** Advances the tape quickly.
- **REW (Rewind) Button:** Rewinds the tape quickly.
- **DIR (Direction) Button:** Activates the auto-reverse function to play the other side of the tape.
- **Auto-reverse Switch:** Toggles continuous auto-reverse playback.
- **Volume Control:** Adjusts the audio output level.
- **Lid Switcher:** Releases the cassette compartment lid.
- **AUX Port (3.5mm Earphone Jack):** For connecting wired earphones or external audio devices.
- **5V DC Port:** For connecting the USB power cable.
- **Wireless BT LED Indicator:** Indicates Bluetooth status (quick flash for searching, slow flash for successful pairing).

5. SETUP

5.1 Power Supply

The device can be powered by two (2) AA batteries or via a USB power supply.

- **Battery Installation:** Open the battery compartment cover on the back of the unit. Insert two AA batteries, ensuring correct polarity (+/-). Close the cover.
- **USB Power Supply:** Connect the supplied USB power cable to the 5V DC port on the device and to a USB power adapter (5V DC, not included) or a computer USB port. It is recommended to use the USB cable for power for better sound effect.



Image: The Pyle PCASRD18BT.5 cassette player demonstrating its two power options: connection via a USB power cable and insertion of two AA batteries into the battery compartment.

5.2 Loading a Cassette Tape

1. Press the Lid Switcher to open the cassette compartment.
2. Insert a cassette tape with the desired side facing up.
3. Close the cassette compartment lid firmly until it clicks.

What's IN THE BOX?



Image: A hand is shown inserting a blue cassette tape into the open compartment of the Pyle PCASRSD18BT.5 cassette player, illustrating the tape loading process.

6. OPERATING INSTRUCTIONS

6.1 Basic Playback

1. Ensure the device is powered on (via batteries or USB).
2. Insert a cassette tape.
3. Connect the included earphones to the AUX port or pair a Bluetooth device (see 6.2 Bluetooth Connectivity).
4. Press the **PLAY** button to start playback.
5. Adjust the **Volume Control** to your desired listening level.
6. To fast forward, press the **F.F** button. To rewind, press the **REW** button.
7. To stop playback, press the **STOP** button.
8. To switch tape sides, press the **DIR** button. The device also features an auto-reverse switch for continuous playback.

6.2 Bluetooth Connectivity

The Pyle PCASRSD18BT.5 can transmit audio from the cassette tape to other Bluetooth receivers, such as Bluetooth speakers or headphones.

1. Ensure the cassette player is powered on and a tape is loaded.
2. Place your Bluetooth receiving device (e.g., speaker, headphones) in pairing mode. Refer to your receiving device's manual for instructions.
3. Press the **PLAY** button on the cassette player. The Wireless BT LED Indicator will begin to quick flash, indicating it is searching for a Bluetooth receiver.
4. Once successfully paired, the Wireless BT LED Indicator will slow flash. Audio from the cassette tape will now transmit to your paired Bluetooth device.



Image: The Pyle PCASRSD18BT.5 cassette player is depicted transmitting music from a cassette tape to a smart speaker via Bluetooth, illustrating its wireless audio output capability.

6.3 Using the AUX Port

The 3.5mm AUX port allows you to connect wired earphones or an external audio system.

- Plug the 3.5mm jack of your earphones or audio cable into the AUX port on the cassette player.
- Ensure the volume is set to a low level before starting playback to prevent sudden loud sounds.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use abrasive cleaners or solvents.
- **Tape Heads:** Periodically clean the tape heads with a specialized tape head cleaning kit to ensure optimal sound quality.
- **Storage:** When not in use for extended periods, remove the batteries and store the device in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Dead batteries / Incorrect battery polarity / USB cable not connected	Replace batteries / Check battery polarity / Connect USB cable securely
No sound from earphones	Earphones not fully plugged in / Volume too low / Faulty earphones	Ensure earphones are fully inserted / Increase volume / Test with different earphones
Bluetooth pairing fails	Receiving device not in pairing mode / Too far from receiving device / Interference	Put receiving device in pairing mode / Move closer to receiving device / Restart both devices
Poor sound quality	Dirty tape heads / Worn-out tape / Low battery power	Clean tape heads / Try a different tape / Replace batteries or use USB power
Tape not playing or moving	Tape jammed / Play button not pressed / Device malfunction	Check tape for damage or tangles / Ensure PLAY button is pressed / Contact support if issue persists

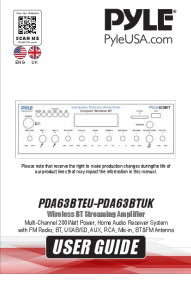 

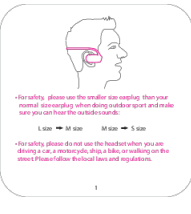 


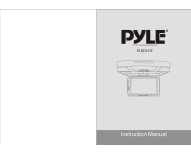 
9. SPECIFICATIONS

- **Bluetooth Version:** 4.2
- **Effective Distance:** 10m
- **Supporting Agreement:** A2DP, AVRCP, AVCTP, AVDTP, HFP, SPP, SMP, ATT, GAP, GATT, RFCOMM, SDP, I2CAP
- **Signal-Noise Ratio:** >90db
- **Frequency Range:** 2.402GHz - 2.480GHz
- **Audio Channel:** Stereo L/R
- **Audio Input:** Cassette tape
- **Audio Output:** 3.5mm Earphone Jack, Bluetooth Transmitter
- **Power Supply:** 2*AA Battery, or USB Port Power Supply (5V DC Adapter)
- **Bit Rate:** 128Kbps
- **Product Dimensions (L x W x H):** 4.45" x 3.35" x 1.19" inches
- **Item Weight:** 8.6 ounces

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product packaging or visit the official Pyle website. Contact information for customer service can typically be found there.

Related Documents - PCASRSD18BT.5

	<p>Pyle PDA63BTEU-PDA63BTUK 200W Wireless Bluetooth Amplifier User Guide</p> <p>Get the most out of your Pyle PDA63BTEU-PDA63BTUK 200W wireless Bluetooth streaming amplifier. This user guide covers setup, features, controls, technical specifications, and safety information for this multi-channel home audio receiver.</p>
	<p>Pyle PSWP14BK Waterproof MP3 Player with Headphones User Manual</p> <p>Comprehensive user manual for the Pyle PSWP14BK Flexxtreme waterproof MP3 player with headphones. Learn about features, operation, charging, troubleshooting, and specifications for sports and swimming.</p>
	<p>Pyle PSWP6BK Waterproof MP3 Player User Manual</p> <p>User manual for the Pyle PSWP6BK Waterproof MP3 Player with Headphones, detailing features, operation, charging, troubleshooting, and specifications.</p>
	<p>Pyle PD3000BT Wireless BT Home Theater Preamplifier - 3000 Watt Pro Audio Stereo Receiver</p> <p>User manual for the Pyle PD3000BT, a 3000 Watt 4-Channel Pro Audio Stereo Receiver and Home Theater Preamplifier with Wireless BT streaming, CD/DVD player, USB reader, AM/FM radio, and microphone inputs. Includes setup, operation, playback, and troubleshooting guides.</p>
	<p>Pyle PLDAND697 User Manual</p> <p>This user manual provides comprehensive instructions for operating the Pyle PLDAND697 car audio and navigation system. It covers installation, basic functions, Bluetooth connectivity, music and video playback, mirror link, camera functions, settings, and troubleshooting.</p>
	<p>Pyle PLRD143F 13.3" TFT LCD Monitor/DVD Player Instruction Manual</p> <p>This instruction manual provides comprehensive details for the Pyle PLRD143F 13.3" TFT LCD Monitor/DVD Player, covering its specifications, features, operation, installation, troubleshooting, and setup options.</p>