

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MOSENMO](#) /

> [MOSENMO CR1632 40-inch Selfie Stick Tripod with Wireless Remote User Manual](#)

MOSENMO CR1632

MOSENMO CR1632 40-inch Selfie Stick Tripod with Wireless Remote User Manual

Model: CR1632 | Brand: MOSENMO

INTRODUCTION

Thank you for choosing the MOSENMO CR1632 Selfie Stick Tripod. This device combines a portable selfie stick with a stable tripod stand, featuring an extendable design and a detachable wireless remote control. It is designed to enhance your mobile photography and videography experience, offering versatility for various shooting scenarios with both iPhone and Android smartphones. Please read this manual carefully to ensure proper use and optimal performance of your device.

PRODUCT OVERVIEW

The MOSENMO CR1632 is a versatile 2-in-1 device that functions as both a selfie stick and a tripod. Key features include:

- **Extendable Design:** Reaches up to 40 inches (approximately 101 cm) for wide-angle shots and group photos.
- **Integrated Tripod:** Foldable legs provide a stable base for hands-free recording.
- **Rotatable Phone Holder:** Supports 180-degree rotation for horizontal and vertical phone mounting, and 360-degree adjustment for optimal shooting angles. Accommodates phones up to 3.7 inches wide.
- **Detachable Wireless Remote:** Bluetooth-enabled remote control for convenient photo and video capture from a distance of up to 33 feet (10 meters).
- **Compact and Lightweight:** Folds down to 7.5 inches (approximately 19 cm) for easy portability.



Image: The MOSENMO CR1632 Selfie Stick Tripod in its fully extended tripod configuration, with a smartphone securely mounted and the wireless remote being held by a hand, indicating remote photo capture.

SETUP INSTRUCTIONS

Follow these steps to set up your MOSENMO CR1632 Selfie Stick Tripod:

1. **Unpack the Device:** Carefully remove the selfie stick tripod and wireless remote from its packaging.
2. **Extend the Stick:** Gently pull the top section of the stick upwards to extend it to your desired length.
3. **Open the Tripod (Optional):** If using as a tripod, locate the legs at the base of the handle. Spread them outwards until they form a stable triangular base.
4. **Mount Your Phone:** Open the phone holder clamp and carefully insert your smartphone. Ensure it is securely gripped by the holder. The holder supports phones up to 3.7 inches in width.
5. **Pair the Wireless Remote:**
 - Remove the remote control from its slot on the handle.
 - Press and hold the camera button on the remote until the indicator light flashes, indicating it is in pairing mode.
 - On your smartphone, go to Bluetooth settings and search for new devices.

- Select "SelfieShow" or "MOSENMO" (device name may vary) from the list of available devices to pair. The indicator light on the remote will stop flashing once successfully paired.

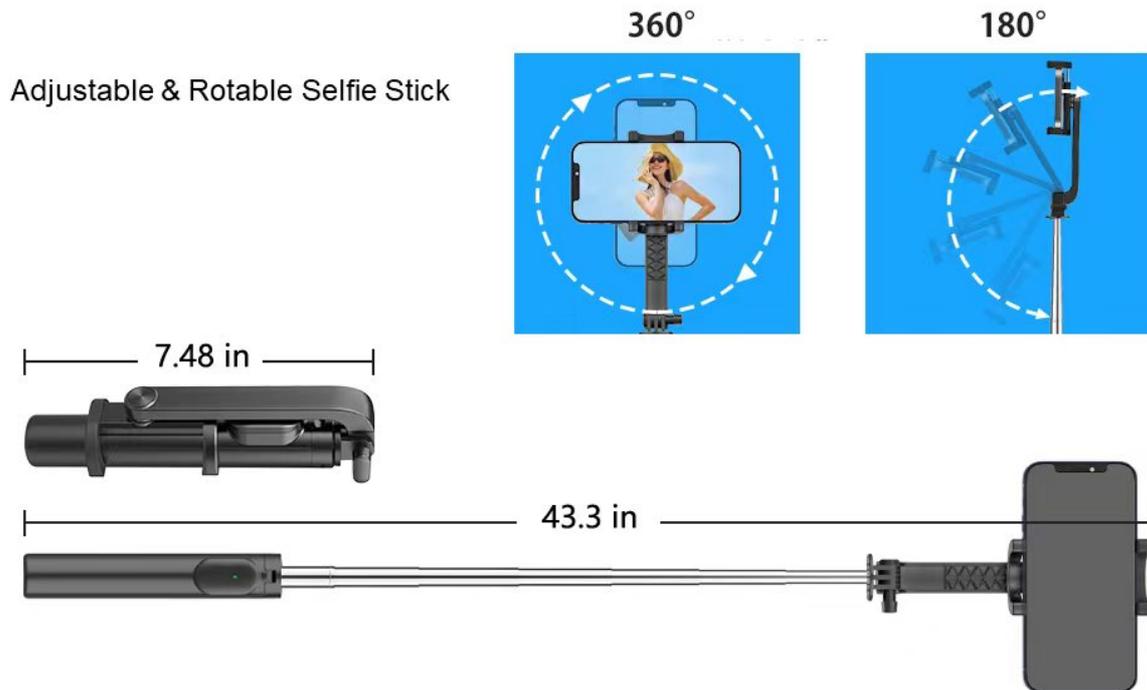


Image: A visual guide demonstrating the setup process, including extending the stick, deploying the tripod legs, securing the phone, detaching the remote, pairing via Bluetooth, and capturing an image.

OPERATING INSTRUCTIONS

Once set up, your MOSENMO CR1632 is ready for use:

- **Adjusting Phone Holder Angle:** The phone holder can be rotated 180 degrees to switch between horizontal and vertical phone orientations. It can also be tilted 360 degrees to achieve the perfect shooting angle.
- **Using as a Selfie Stick:** Hold the handle firmly and extend the stick to your desired length. Use the detachable remote to capture photos or start/stop video recording.
- **Using as a Tripod:** Place the tripod on a flat, stable surface. Adjust the stick's height and phone holder angle as needed. Use the remote to take photos or videos without touching your phone, minimizing shake.
- **Capturing Photos/Videos:** Open your phone's camera application. Press the camera button on the wireless remote to trigger the shutter or start/stop video recording.

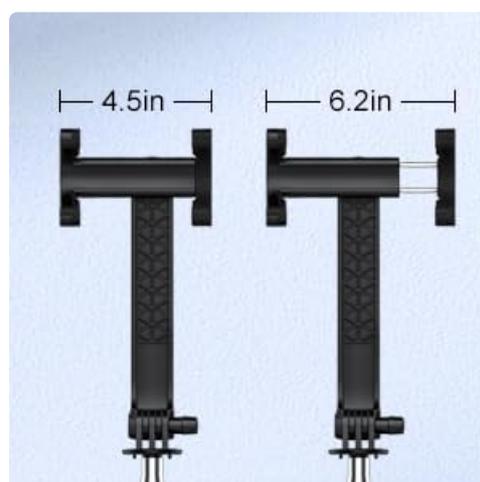


Image: A diagram illustrating the adjustable width of the phone holder, accommodating devices from 4.5 inches to 6.2 inches.

MAINTENANCE

To ensure the longevity and proper functioning of your selfie stick tripod:

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, collapse the selfie stick tripod to its compact size and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Remote Battery Replacement:** The wireless remote uses a CR1632 lithium battery. If the remote fails to turn on or connect, the battery may need replacement. To replace, gently pry open the battery cover on the remote, remove the old battery, and insert a new CR1632 battery with the positive (+) side facing up.



Image: A detailed view of the detachable wireless remote, highlighting the camera button, the internal lithium battery, and the battery cover for replacement.

TROUBLESHOOTING

If you encounter issues with your MOSENMO CR1632, refer to the following common solutions:

- **Remote Not Pairing:**
 - Ensure the remote is charged or has a fresh CR1632 battery.
 - Make sure Bluetooth is enabled on your smartphone.
 - Turn off and on the remote, then try pairing again.
 - Forget the device in your phone's Bluetooth settings and attempt to pair from scratch.
- **Remote Not Working After Pairing:**
 - Check the remote's battery. It may have run out, especially if received with low charge.
 - Ensure your phone's camera app is open and active.
 - Verify that the remote is within the 33-foot operating range.

- **Tripod Stability Issues:**

- Ensure the tripod legs are fully extended and locked into position on a flat, even surface.
- Avoid placing heavy accessories on the phone holder that might unbalance the tripod.
- While designed for stability, some slight wobble may occur when fully extended, especially with heavier phones. Ensure the phone is centered in the holder.

- **Phone Not Fitting in Holder:**

- The holder accommodates phones up to 3.7 inches (approximately 9.4 cm) wide. Verify your phone's dimensions, especially if it has a bulky case.
- Ensure you are fully extending the spring-loaded clamp.

SPECIFICATIONS

Model Number	CR1632
Folded Size	7.5 inches (19 cm)
Maximum Extension Length	40 inches (101 cm)
Item Weight	6.7 ounces (190 grams)
Phone Holder Width	Up to 3.7 inches (9.4 cm)
Wireless Remote Battery	1 x CR1632 3V Lithium Battery
Bluetooth Control Distance	Up to 33 feet (10 meters)
Compatible Devices	iPhone, Android Smartphones



Image: A close-up of the tripod base, illustrating its stable three-point contact with the surface, ensuring steady support for your device.

WARRANTY AND SUPPORT

Warranty Information: This product comes with a standard manufacturer's warranty. Please refer to the product packaging or contact MOSENMO customer service for specific warranty terms and conditions.

Customer Support: For any questions, technical assistance, or issues not covered in this manual, please contact MOSENMO customer support through the retailer's platform or the official MOSENMO website. Please have your model number (CR1632) and purchase details ready when contacting support.

