

## KANBIT B0CJF3VDX5

# KANBIT Digital Stopwatch Timer Instruction Manual

Model: B0CJF3VDX5

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your KANBIT Digital Stopwatch Timer. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your device.



Image: KANBIT Digital Stopwatch Timer, front view. This image displays the overall design of the stopwatch, featuring a large digital display and three control buttons.

## PRODUCT FEATURES

- **Clear and Readable Display:** Equipped with a large LCD digital display for easy viewing of time, calendar, minutes, and seconds.
- **Silent Operation:** Operates without any alarms or beep sounds, suitable for environments requiring quiet.
- **User-Friendly Setup:** Lightweight and simple to operate with three primary buttons.
- **Lanyard Included:** Comes with a 22-inch lanyard for convenient carrying during activities.
- **Accurate Timing:** Provides reliable and accurate timekeeping for various activities.
- **Versatile Use:** Suitable for a wide range of sports and activities including swimming, running, cycling, and general fitness training.



Image: The KANBIT Digital Stopwatch Timer is depicted in various sports settings, including a gym, football field, running track, and cycling route, highlighting its versatility.

## PACKAGE CONTENTS

---

Each package contains two KANBIT Digital Stopwatch Timers and a user manual.

## SETUP

---

### Battery Installation and Initial Use

The stopwatch comes with one LR44 battery pre-installed. Before first use, remove the protective plastic film from the display. The device will power on automatically.

Video: This video demonstrates the initial step of removing the protective plastic film from the stopwatch display before use, followed by demonstrations of the stopwatch and clock modes.

## OPERATING MODES

---

### Button Functions

# Easy To Operate

Split/Reset

Mode

Start/Stop



Water Resistant



22" Lanyard

Image: A close-up view of the stopwatch clearly labels the three control buttons: 'SPLIT/RESET', 'MODE', and 'START/STOP'. It also highlights water resistance and the included 22-inch lanyard.

- **MODE Button:** Cycles between Stopwatch Timer Mode and Clock Mode.
- **START/STOP Button:** Initiates and pauses timing in Stopwatch Mode; adjusts values in Clock Mode.
- **SPLIT/RESET Button:** Records split times and resets the timer in Stopwatch Mode; selects fields for adjustment in Clock Mode.

## Stopwatch Timer Mode

To use the stopwatch function:

1. Press the **MODE** button until the display shows '0:00:00' or a similar stopwatch format.
2. Press **START/STOP** to begin timing.
3. To record a split time, press **SPLIT/RESET**. The display will show the split time while the timer continues in the background. Press **SPLIT/RESET** again to return to the running time.
4. Press **START/STOP** to pause the timer.
5. With the timer paused, press **SPLIT/RESET** to reset the stopwatch to zero.

## Clock and Date Mode

To set the current time and date:

1. Press the **MODE** button until the display shows the current time (e.g., '7:53:01').
2. Press the **MODE** button four times to enter the time setting mode. The seconds will flash.
3. Press **START/STOP** to set the seconds to '00'.
4. Press **SPLIT/RESET**. The minutes will flash. Press **START/STOP** to adjust the minutes.
5. Press **SPLIT/RESET**. The hour will flash. Press **START/STOP** to adjust the hour (12-hour or 24-hour format, depending on the model's default or last setting).
6. Press **SPLIT/RESET**. The day will flash. Press **START/STOP** to adjust the day.
7. Press **SPLIT/RESET**. The month will flash. Press **START/STOP** to adjust the month.
8. Press **SPLIT/RESET**. The year will flash. Press **START/STOP** to adjust the year.
9. Press **MODE** twice to exit the setting mode and return to the stopwatch timer mode.

## MAINTENANCE

---

- **Cleaning:** Wipe the stopwatch with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Water Resistance:** The stopwatch is designed to be water-resistant, but it is not fully waterproof. Avoid submerging it in water or exposing it to heavy rain for extended periods.
- **Storage:** Store the stopwatch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** The LR44 battery is typically long-lasting. If the display becomes dim or unresponsive, the battery may need replacement. Consult a professional for battery replacement as the device is not designed for user-replaceable batteries.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display is blank or dim.	Battery is low or depleted.	The LR44 battery may need replacement. As the device is not designed for user-replaceable batteries, professional assistance is recommended.
Buttons are unresponsive.	Internal malfunction or debris.	Ensure buttons are not stuck. If the issue persists, contact customer support.
Time/Date is incorrect.	Incorrect setting or battery interruption.	Follow the "Clock and Date Mode" instructions to reset the time and date.
Display flickering.	Internal connection issue or battery problem.	Try replacing the battery. If the issue continues, contact customer support.

## SPECIFICATIONS

---

Feature	Detail
Brand	KANBIT

Feature	Detail
Model	B0CJF3VDX5
Color	Black
Material	Plastic
Product Dimensions	0.32"D x 2.4"W x 3.3"H
Item Weight	2.39 ounces
Battery	1 LR44 battery (included)
Screen Size	3.3 Inches

## Stopwatch Comfortable Size



Image: The KANBIT Digital Stopwatch Timer is shown with its key dimensions labeled: 2.4 inches in width, 3.3 inches in height, and 0.7 inches in thickness.

### WARRANTY AND SUPPORT

KANBIT products are designed for reliability and performance. If you encounter any issues or require assistance, our customer support team is available to help. Please contact us with your product model and

a description of the issue. We aim to respond to all inquiries within 24 hours.