

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ROMOKE](#) /

› ROMOKE T19 Wireless Earbuds User Manual

## ROMOKE T19

# ROMOKE T19 Wireless Earbuds User Manual

Model: T19

## INTRODUCTION

---

Thank you for choosing ROMOKE T19 Wireless Earbuds. These earbuds feature advanced Bluetooth 5.3 technology, Hi-Fi stereo bass, 4 ENC microphones for clear calls, and a long-lasting 40-hour battery life with the charging case. They are designed for comfort, durability, and wide compatibility with various devices.

## WHAT'S IN THE BOX

---

- T19 Bluetooth Earbuds
- USB-C Cable
- Charging Case
- User Manual



Image: The ROMOKE T19 Wireless Earbuds in their charging case, displaying the digital battery level. This image shows the main product components.

## PRODUCT OVERVIEW

---

### Earbud Features

- 14.2mm Dynamic Speakers for Hi-Fi Stereo Bass
- 4 ENC Microphones for Clear Calls
- Touch Controls

- IP7 Waterproof Rating
- Ergonomic Semi-In-Ear Design

## 40 Hrs Long Battery Life



Image: An exploded view of the earbud, highlighting the 14.2mm speaker driver and dual microphones for ENC noise cancellation.

## Charging Case Features

- Dual LED Power Display
- USB-C Fast Charging
- Compact and Portable Design
- Provides up to 32 hours of additional battery life

## The New Bluetooth 5.3 Chip

Advanced Bluetooth 5.3 transmission technology provide connection stability with no delay

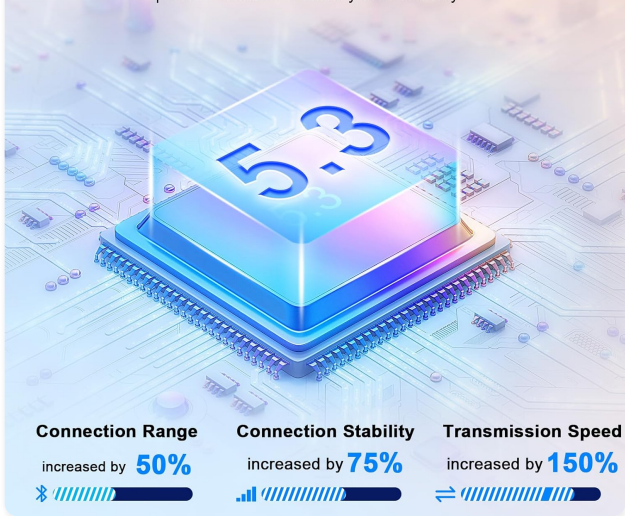


Image: The charging case connected to a USB-C cable, illustrating the fast charging capability and the digital power display.


## SETUP AND FIRST USE

## 1. Charging the Case and Earbuds

Before first use, fully charge the charging case and earbuds. Connect the provided USB-C cable to the charging port on the case and a power source. The dual LED display on the case will show the battery percentage, flashing from 1% to 100% during charging. The earbud icons will flash to indicate their charging status.

# The New Bluetooth 5.3 Chip

Advanced Bluetooth 5.3 transmission technology  
provide connection stability with no delay

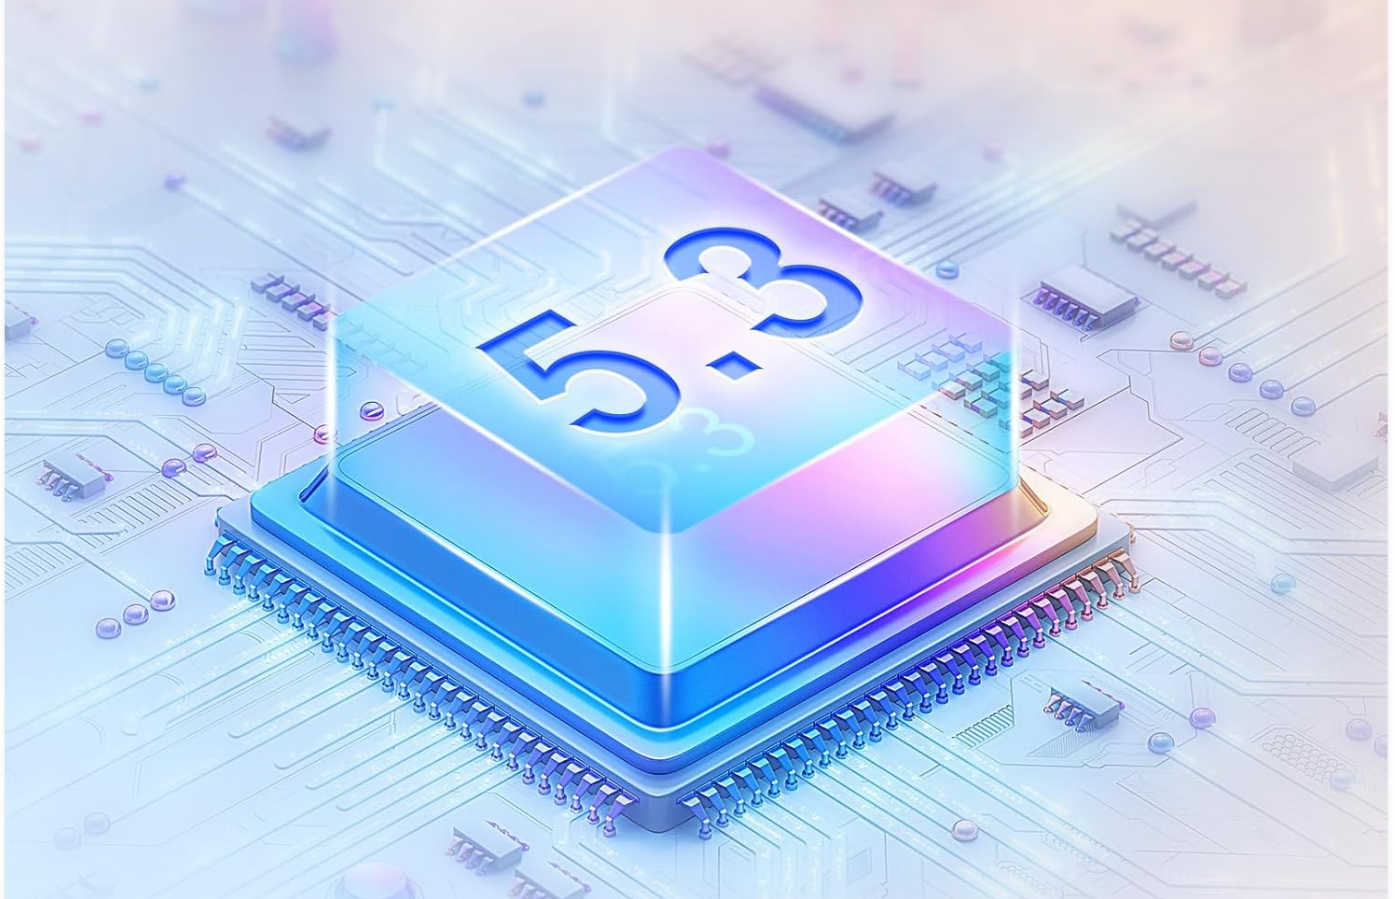

### Connection Range

increased by **50%**



### Connection Stability

increased by **75%**



### Transmission Speed

increased by **150%**



Image: The charging case with a USB-C cable plugged in, showing the digital battery percentage display. This illustrates the charging process.

## 2. Pairing with Your Device (One-Step Pairing)

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device, search for Bluetooth devices and select "T19" from the list.
4. Once connected, the earbuds are ready for use. They will automatically reconnect to the last paired device when taken out of the case.

# One Step Pairing

Fast Automatic Connection

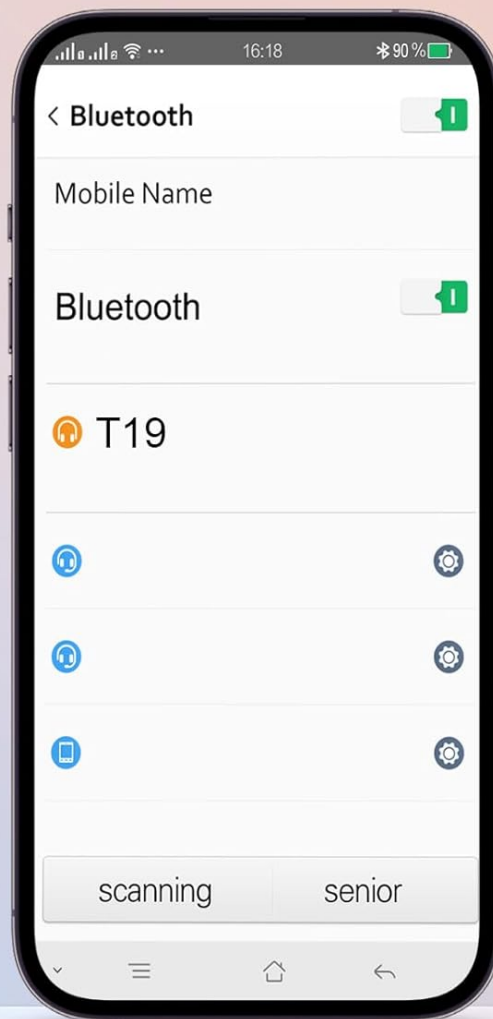


Image: A visual representation of the one-step pairing process, showing the earbuds connecting to a smartphone via Bluetooth.

Your browser does not support the video tag.

Video: An official product video demonstrating the features of the ROMOKE T19 Wireless Earbuds, including the Bluetooth 5.3 technology, ENC microphones, and fast charging. This video provides a visual guide to the product's capabilities.

## OPERATING INSTRUCTIONS

### Touch Controls

The ROMOKE T19 earbuds feature intuitive touch controls for easy management of music and calls.

Action	Left Earbud (L)	Right Earbud (R)
Play/Pause	Double tap	Double tap

Action	Left Earbud (L)	Right Earbud (R)
Next Track	Triple tap	
Previous Track		Triple tap
Volume Up	Single tap	
Volume Down		Single tap
Answer/End Call	Single tap	Single tap
Reject Call	Press and hold for 2 seconds	Press and hold for 2 seconds
Activate Voice Assistant (Siri/Google Assistant)	Press and hold for 3 seconds	Press and hold for 3 seconds



Image: A detailed diagram showing the touch control functions for both the left and right earbuds, including actions for music playback, calls, and voice assistant activation.

## MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are IP7 waterproof, meaning they can withstand splashes and sweat. However, they are not designed for swimming or prolonged submersion. Ensure they are dry before placing them back in the charging case.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Avoid extreme temperatures.
- **Battery Life:** To maximize battery lifespan, avoid fully discharging the earbuds and charging case frequently. Charge them regularly.

# Super Light & Portable

4g only ultra-light earbud with supermini portable charging case



Image: The earbuds are shown in a water droplet, emphasizing their IP7 waterproof rating, suitable for sports and active use.

## TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing with device.	<ul style="list-style-type: none"><li>◦ Ensure earbuds are charged and out of the case.</li><li>◦ Turn off and on Bluetooth on your device.</li><li>◦ Forget "T19" from your device's Bluetooth list and re-pair.</li><li>◦ Reset the earbuds (refer to manufacturer's specific reset instructions if available, otherwise try placing them back in the case and taking them out).</li></ul>

Problem	Possible Solution
Only one earbud working.	<ul style="list-style-type: none"> <li>Place both earbuds back in the charging case, close the lid, wait a few seconds, then take them out again.</li> <li>Ensure both earbuds are charged.</li> <li>Try resetting the earbuds.</li> </ul>
Low volume or poor sound quality.	<ul style="list-style-type: none"> <li>Adjust volume on both your device and the earbuds.</li> <li>Clean any debris from the earbud speakers.</li> <li>Ensure earbuds are properly seated in your ears.</li> </ul>
Charging case not charging.	<ul style="list-style-type: none"> <li>Check the USB-C cable and power adapter.</li> <li>Try a different USB-C cable or power source.</li> <li>Ensure the charging port is clean and free of debris.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Model Name	T19
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Version	5.3
Bluetooth Range	10 Meters
Audio Driver Size	14.2 Millimeters
Microphones	4 ENC Mics
Earbud Battery Life (Single Charge)	Approx. 6 Hours (at 50%-60% volume)
Total Playback Time (with Charging Case)	Up to 40 Hours
Charging Case Battery Capacity	350 Milliamp Hours
Charging Case Charging Time	1.5 Hours
Charging Port	USB-C
Waterproof Rating	IP7
Control Method	Touch
Earbud Weight	0.14 ounces (per earbud)
Charging Case Weight	32 Grams

Feature	Detail
Product Dimensions	2.24 x 1.1 x 2.01 inches (Charging Case)

## WARRANTY AND SUPPORT

---

ROMOKE is committed to providing high-quality products and excellent customer service. If you encounter any issues with your ROMOKE T19 Wireless Earbuds, please contact us directly.

- **Warranty:** We provide a 365-day warranty from the date of purchase.
- **Customer Service:** For questions about your order, returns, or technical support (e.g., headphones not connecting), please contact ROMOKE customer service. We aim to resolve issues within 24 hours.

You can typically find contact information on the product packaging, the seller's page on Amazon, or the official ROMOKE website.



### High-Quality Service

- Have a question about your order?
- Can't return an item to Amazon?
- Headphones won't connect to Bluetooth devices?

Whatever the problem with your product or order,  
Please contact us directly!  
We will solve the problem for you within 24 hour.  
Also we provide 365 days warranty from the date  
of purchase.

Image: An illustration representing customer support, indicating that assistance is available for product inquiries and issues.