

[Manuals.plus](#) /

› [hofstein](#) /

› Hofstein Talok H3669037 Suspension Lamp User Manual

hofstein H3669037

Hofstein Talok H3669037 Suspension Lamp User Manual

Model: H3669037

1. INTRODUCTION

The Hofstein Talok H3669037 is a modern suspension lamp designed to provide elegant illumination for various indoor living spaces. This fixture features a black metal ceiling plate and six smoked glass shades, offering a contemporary aesthetic. It is suitable for installation in dining rooms, hallways, kitchens, bedrooms, and living rooms.

This manual provides essential information for the safe installation, operation, and maintenance of your Hofstein Talok suspension lamp. Please read these instructions carefully before beginning installation and retain them for future reference.



Image 1.1: The Hofstein Talok H3669037 suspension lamp, showcasing its six smoked glass shades and black metal ceiling fixture.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Risk of electric shock. Disconnect power before installation or servicing.

- Installation should be performed by a qualified electrician in accordance with all local electrical codes and regulations.
- Ensure the main power supply is switched off at the circuit breaker or fuse box before commencing any work on the lamp.
- This product is designed for indoor use only (IP20 rating). Do not expose to moisture or direct water spray.
- This is a Class I appliance and must be earthed. Ensure the earth wire is correctly connected.
- Do not exceed the maximum wattage of 40 Watts per bulb.
- Use only E27 base bulbs.
- Do not modify the lamp in any way. Any modifications may void the warranty and create a safety hazard.

- Keep packaging materials out of reach of children.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all components are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the lamp. Contact your retailer for assistance.

- 1x Suspension Lamp Fixture (Black metal ceiling plate with integrated cables and lamp holders)
- 6x Smoked Glass Shades
- 1x Mounting Bracket
- 1x Set of Mounting Hardware (screws, wall anchors)
- 1x User Manual (this document)

Note: E27 light bulbs are not included and must be purchased separately.

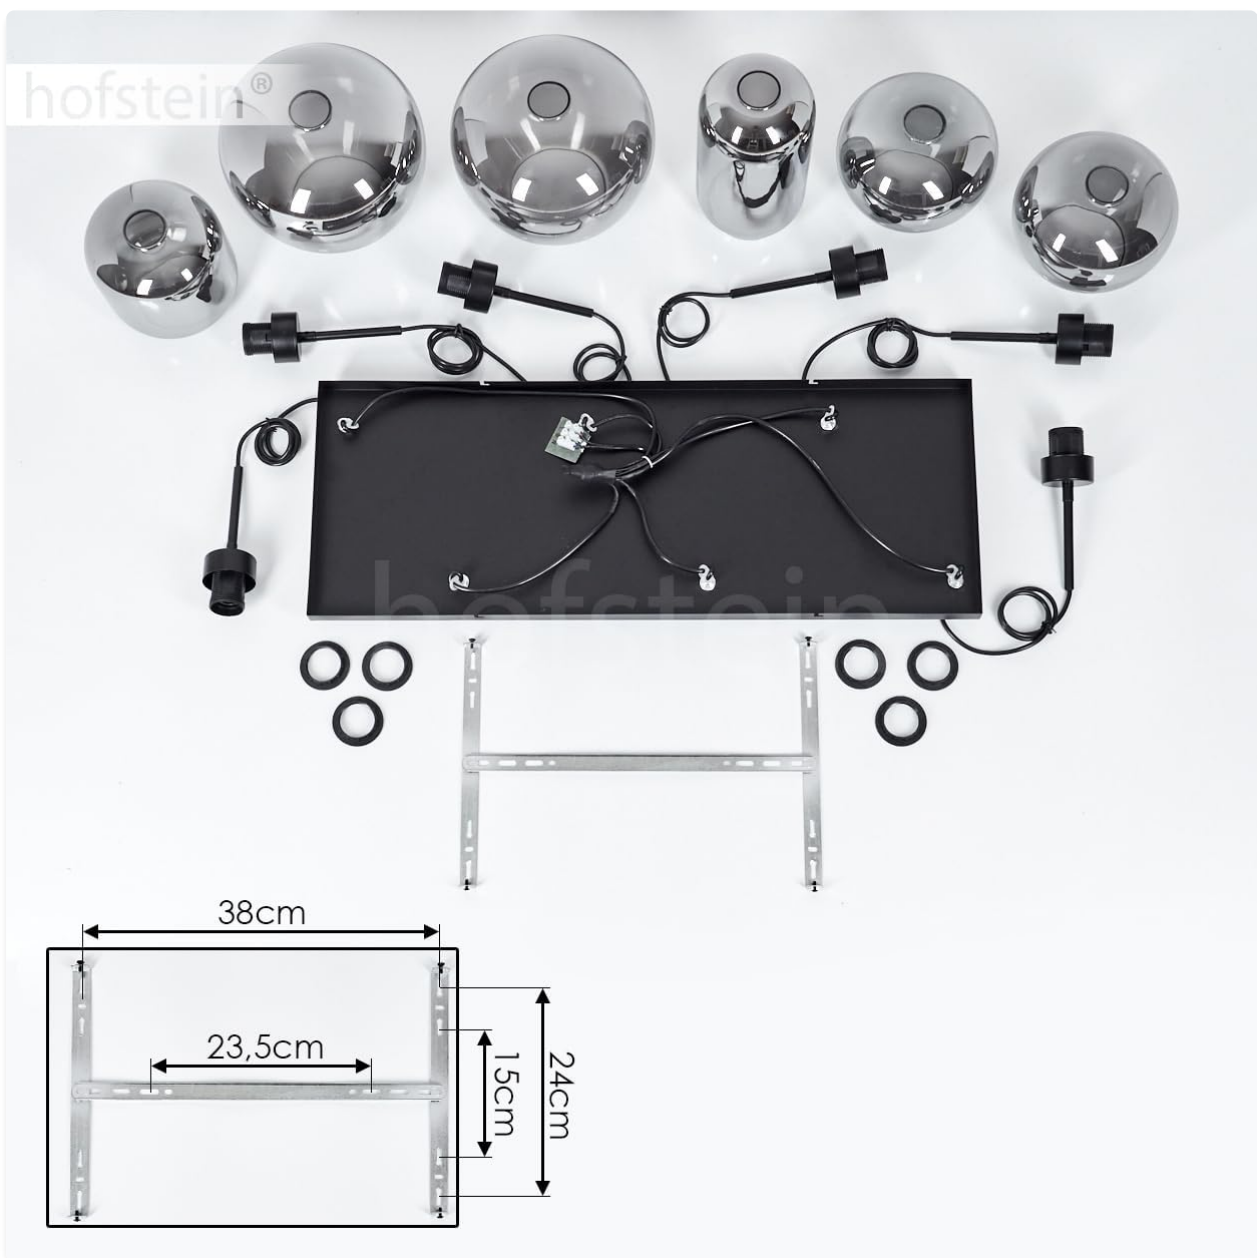


Image 3.1: Components of the Talok suspension lamp, showing the main fixture, individual glass shades, and the mounting bracket.

4. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	H3669037
Brand	Hofstein
Fixture Material	Metal
Fixture Color	Black
Shade Material	Glass
Shade Color	Smoked
Number of Lights	6
Socket Type	E27
Max Wattage per Bulb	40 Watt
Voltage	230 Volt
Dimmable	Yes, with external dimmer (not included)
Protection Rating	IP20 (Indoor use only)
Protection Class	Class I (Requires earthing)
Ceiling Plate Dimensions	Approx. 75 cm (Length) x 28 cm (Width) x 2.5 cm (Height)
Max Total Height	Approx. 117 cm (Adjustable during installation)



Image 4.1: Detailed dimensions of the Talok suspension lamp, including the ceiling plate and individual shades.

5. INSTALLATION INSTRUCTIONS

IMPORTANT: Ensure power is disconnected at the main circuit breaker before installation.

1. Prepare for Installation:

Gather necessary tools: screwdriver, wire strippers, drill, pencil, measuring tape. Ensure the ceiling can support the weight of the fixture.

2. Mark Mounting Points:

Hold the mounting bracket against the ceiling at the desired installation location. Use a pencil to mark the drilling points.

3. Drill Holes:

Drill holes at the marked points. Insert appropriate wall anchors (if required for your ceiling type).

4. Attach Mounting Bracket:

Secure the mounting bracket to the ceiling using the provided screws. Ensure it is firmly attached.

5. Electrical Connection:

Connect the household electrical wires to the corresponding wires on the lamp fixture.

- Connect the Live (L) wire (usually brown or red) to the Live terminal on the fixture.
- Connect the Neutral (N) wire (usually blue or black) to the Neutral terminal on the fixture.
- Connect the Earth (E) wire (usually green/yellow) to the Earth terminal on the fixture.

Ensure all connections are secure and insulated.

6. Attach Fixture to Bracket:

Carefully lift the lamp fixture and align it with the mounting bracket. Secure the fixture to the bracket using the screws provided, ensuring a snug fit against the ceiling.

7. Adjust Cable Lengths (Optional):

The suspension cables can be adjusted in length by pushing the cable into the ceiling plate mechanism. Adjust each cable to achieve the desired height for each shade.

8. Install Glass Shades:

Carefully attach each smoked glass shade to its respective lamp holder. Ensure they are securely fastened.

9. Insert Bulbs:

Screw E27 bulbs (not included, max 40W each) into the lamp holders.

10. Restore Power:

Once all steps are complete and connections are secure, restore power at the main circuit breaker. Test the lamp.



Image 5.1: Detail of the ceiling plate, illustrating how the suspension cables connect and can be adjusted.

6. OPERATING INSTRUCTIONS

The Hofstein Talok H3669037 suspension lamp is operated via a standard wall switch connected to its electrical circuit.

- **Turning On/Off:** Use the wall switch to turn the lamp on or off.
- **Dimming Functionality:** If an external dimmer switch compatible with E27 bulbs has been installed in your electrical circuit, you can adjust the light intensity using that dimmer. The lamp itself does not include a dimmer.

7. CARE AND MAINTENANCE

CAUTION: Always disconnect power before cleaning or performing maintenance.

- **Cleaning:** To clean the lamp, use a soft, dry, lint-free cloth. For the glass shades, a slightly damp cloth can be used, followed by a dry cloth to prevent water spots.
- **Avoid Chemicals:** Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish of the metal and glass.
- **Bulb Replacement:** Ensure the lamp is cool and power is off before replacing bulbs. Unscrew the old bulb and screw in a new E27 bulb (max 40W).
- **Regular Checks:** Periodically check all connections and mounting screws to ensure they remain secure.

8. TROUBLESHOOTING

If you encounter issues with your Hofstein Talok suspension lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply. Faulty bulb. Incorrect wiring.	Check the circuit breaker and wall switch. Replace the bulb with a new, working one. Verify all electrical connections (consult a qualified electrician if unsure).
Lamp flickers.	Loose bulb. Incompatible dimmer switch. Faulty bulb.	Tighten the bulb. Ensure your dimmer switch is compatible with the type of E27 bulbs used. Replace the bulb.
Shades are not level.	Uneven cable adjustment.	Adjust the cable lengths within the ceiling plate until the shades are level.

If the problem persists after attempting these solutions, please contact your retailer or a qualified electrician.

9. WARRANTY AND SUPPORT

Hofstein is committed to providing high-quality lighting solutions. While specific warranty details are not provided in this manual, Hofstein prioritizes customer satisfaction. For any questions, concerns, or support needs regarding your Talok H3669037 suspension lamp, please contact your point of purchase or refer to the Hofstein official website for customer service information.

Please retain your proof of purchase for any warranty claims.