

ACTIVE active-disposal-v2-24

ACTIVE Garbage Disposal Cleaner Deodorizer Tablets - User Manual

Model: active-disposal-v2-24 | Brand: ACTIVE

INTRODUCTION

The ACTIVE Garbage Disposal Cleaner Deodorizer Tablets are designed to effectively clean and freshen all kitchen waste disposal models. These powerful XL foaming tablets penetrate residue and grime buildup, remove odors, and help maintain disposal performance. Each pack provides a 1-year supply for consistent maintenance.



Image: Front view of the ACTIVE Garbage Disposal Cleaner 24-pack box, highlighting its 1-year supply and key benefits: Cleans, Deodorizes, Refreshes, Protects.

SAFETY INFORMATION

WARNING: Keep out of reach of children.

CAUTION: EYE IRRITANT. HARMFUL IF SWALLOWED. See back for details.

In case of contact with eyes, rinse immediately with plenty of water for at least 15 minutes. If swallowed, do not induce vomiting. Call a poison control center or doctor immediately. Always handle tablets with dry hands.

PRODUCT FEATURES

- **Deep Cleaning:** Formulated to penetrate residue and grime buildup within the disposal.
- **Odor Removal:** Effectively removes unpleasant odors, leaving a fresh citrus scent.
- **Performance Maintenance:** Helps maintain the optimal performance of your garbage disposal.
- **Septic Safe:** Designed to be safe for septic systems.
- **Convenient Supply:** A 24-pack provides a 1-year supply for regular maintenance.



ACTIVE[®]

**REFORMULATED
XL TABLETS**
WITH MORE FOAM!

**REFRESH YOUR
DISPOSAL**

-  PENETRATES **RESIDUE AND GRIME BUILDUP**
-  REMOVES **ODORS AND REFRESHES**
-  POWERFUL FOAM **CLEANS ENTIRE DISPOSAL**
-  HELPS MAINTAIN **DISPOSAL PERFORMANCE**
-  SAFE FOR **SEPTIC SYSTEMS**

FRESH CITRUS SCENT 

**1 YEAR
SUPPLY VALUE
PACK**

Image: Visual representation of the tablets' action, showing powerful foam penetrating residue and grime buildup to refresh the disposal.

THOROUGHLY CLEANS GREASE & FOOD RESIDUE

Scrubs Internal Disposal Areas



DEODORIZES
TO KEEP DISPOSAL
SMELLING FRESH



POWERFUL FOAM
REMOVES GRIME
& BUILDUP



REFORMULATED
XL TABLETS
WITH MORE FOAM!

ACTIVE®



Image: A cutaway diagram of a garbage disposal illustrating how the powerful foam removes grime and buildup from internal areas, deodorizing and cleaning grease and food residue.

USAGE INSTRUCTIONS

Setup & Preparation

1. **Ensure Disposal is Empty:** Make sure your garbage disposal is clear of any food debris or obstructions.
2. **Run Hot Water:** Turn on your hot water faucet and let a small stream of hot water run into the sink, away from the drain, for approximately one minute. The stream should be about the width of a pencil.

DIRECTIONS TO USE

Compatible with All Disposals



1 ENSURE DISPOSAL IS EMPTY

Then run a small stream of hot water away from the drain (about the width of a pencil).



2 TURN ON DISPOSAL

Then toss 1-2 tablets into disposal.



3 CONTINUE RUNNING DISPOSAL

And water for about 1 minute until foam drains



TIPS:

- ✓ Note that foam may not be visible in the sink while cleaning. The tablet is still cleaning properly even if there is no visible foam. If more foam is desired, use 2 tablets.
- ✓ It is recommended to use Active disposal cleaner twice per month or whenever odors are present.



Image: Step 1 of the cleaning process, showing a small stream of hot water running into the sink to prepare the disposal.

Operating the Tablets

3. **Add Tablets:** With the hot water still trickling, drop 1-2 ACTIVE Disposal Cleaner tablets into the disposal.
4. **Turn on Disposal:** Immediately turn on the garbage disposal. The tablet will begin to foam and dissolve. Continue running the disposal and water for about 1 minute until the foam drains away.



Image: Illustration of the foaming action extending into the pipes, breaking down odor-causing grime and flushing away buildup.

Product in Action (Visual Aid)

Video: A demonstration of the foaming action of the ACTIVE Disposal Cleaner tablets in a sink, showing the foam expanding and cleaning the disposal area.

Maintenance Schedule

For optimal results and to prevent future odors and buildup, it is recommended to use ACTIVE Disposal Cleaner tablets 1-2 times per month. If stronger odors are present, consider using 2 tablets per cleaning cycle.

Note: Foam may not always be visible in the sink while cleaning. The tablet is still cleaning properly even if there is no visible foam. If more foam is desired, use 2 tablets.

COMPATIBILITY

ACTIVE Garbage Disposal Cleaner tablets are compatible with all major garbage disposal brands and models,

including Insinkerator, Moen, GE, Frigidaire, Kohler, Kitchenaid, Waste Maid, Waste King, Farberware, and more.

Usage and Compatibility Guide


Disposal Size	Tablet Usage
1/3 HP	1 Tablet
1/2 HP	1-2 Tablets
3/4 HP	2 Tablets
1 HP	2 Tablets


Note: Larger size disposals (1HP+) may require additional tablets to adequately foam and clean. Please follow product instructions to maximize cleaning performance.


ACTIVE[®]


COMPATIBILITY GUIDE


COMPATIBLE WITH MOST GARBAGE DISPOSAL BRANDS & MODELS, INCLUDING:























LARGE VOLUME (1HP+) DISPOSAL MAY REQUIRE ADDITIONAL TABLETS TO ADEQUATELY FOAM AND CLEAN YOUR DISPOSAL.

Please follow product instructions to maximize cleaning Performance.

Image: A visual guide displaying logos of various garbage disposal brands compatible with ACTIVE tablets, including Insinkerator, Waste King, Moen, WasteMaid, American Standard, GE, Franke, Frigidaire, and Kraus.

SPECIFICATIONS

Attribute	Value
Product Dimensions	8.6 x 7.6 x 0.59 inches
Item Weight	15.5 ounces
Manufacturer	ACTIVE
ASIN	B0CJHCXS4V
Item Model Number	active-disposal-v2-24
Specific Instructions for Use	Garbage Disposal Cleaner and Deodorizer
Volume	284.07 Cubic Centimeters
Mildew-resistant	BPA Free, Bleach Free, Chlorine Free
Perfume	Citrus
Batteries Required	No
Included Components	Garbage disposal deodorizer tablets
Scent	Citrus
State of Matter	Solid
Product Benefits	Deodorizer, Cleans Drain

TROUBLESHOOTING

Issue: Little to no foam observed during cleaning.

Solution: While the tablets are designed to produce foam, the amount visible can vary depending on water hardness, disposal size, and existing buildup. The tablet is still actively cleaning even if foam is not highly visible. For increased foam production or for heavily soiled disposals, use two tablets per cleaning cycle.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ACTIVE Garbage Disposal Cleaner tablets, please refer to the manufacturer's contact information provided on the product packaging or visit the official ACTIVE website. Keep your purchase receipt for any warranty claims.