

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [YINOCHE](#) /

› YINOCHE Kids Tablet ZIDS702 Instruction Manual

YINOCHE ZIDS702

YINOCHE Kids Tablet ZIDS702 Instruction Manual

Brand: YINOCHE | Model: ZIDS702

INTRODUCTION

The YINOCHE Kids Tablet ZIDS702 is a 7-inch Android tablet designed for children aged 3-7, with features suitable for older kids up to 12. It offers a safe and engaging environment for learning and entertainment, incorporating parental controls and eye protection technology. This manual provides essential information for setting up, operating, and maintaining your tablet.

WHAT'S IN THE BOX

- 7 Kids tablet ×1
- Kids tablet for toddler Charger ×1
- Tablet for kids 3-7 Manual ×1
- Toddler tablet USB Cable ×1
- Toddler tablet quick solution guide ×1

SETUP

1. **Initial Charge:** Before first use, fully charge the tablet using the provided charger and USB cable. A low battery may display an exclamation mark; charge for at least 15 minutes before normal charging.
2. **Power On:** Press and hold the Power Button (located on the side) until the screen lights up.
3. **Wi-Fi Setting (Android Interface):**
 - Go to "Settings" > "Network & Internet" > "Wi-Fi".
 - Select your Wi-Fi network and enter the password. A signal symbol will appear once connected.
4. **Wi-Fi Setting (Kids Software Interface):**
 - Click on the Wi-Fi icon and input the password to enter the Wi-Fi settings.

OPERATING INSTRUCTIONS

Basic Controls:

- **Volume Buttons:** Adjust audio volume.
- **Power Button:** Press to turn on/off or put the tablet to sleep/wake.
- **Earphone Jack:** Connect headphones for private listening.
- **Type-C Cable:** For charging and data transfer.
- **TF Card Slot:** Insert a TF (microSD) card for expanded storage.
- **Reset Hole:** Use a pin to reset the device if unresponsive.
- **Speaker:** Audio output.
- **Rear Camera:** For taking photos and videos.

Kids Mode Interface:

1. **Log In:** When in the Android interface, find and click on the "Kids Mode" software to enter.
2. **Exit:** Click the red arrow shown on the screen, then enter the default password (0000) or your own password to exit.

PARENTAL CONTROLS

The YINOCHE Kids Tablet features advanced parental controls to ensure a safe and educational experience for your child.

- **Screen Time Limits:** Customize daily screen time limits to prevent overuse.
- **App Restrictions:** Approve or restrict access to specific applications.
- **Content Filters:** Ensure your child only accesses age-appropriate content and approves app downloads like Netflix and Zoom.
- **Educational Goals:** Prioritize learning time over games.
- **Password Setting:** Set a password for parental control access. If you forget your password, input "257518" to reset.

EYE PROTECTION FEATURE

The 7-inch HD touchscreen (1024 x 600) includes an eye protection mode that automatically adjusts brightness. This feature helps prevent eye strain, promoting healthy usage for children.

MEDIA INTEGRATION

Product Images

Kids Offline Apps Pre-Installed



Theme



First Learning



Video



Music



Brain Training



Camera



Montessori



Kids TV



Draw



Karaoke



Mini Games



Gallery



Image: YINOCHE Kids Tablet displaying various pre-installed offline apps like Theme, First Learning, Video, Music, Brain Training, Camera, Montessori, Kids TV, Draw, Karaoke, Mini Games, and Gallery. A young girl is holding the tablet.

Easy to use Parent Dashboard

Keep Parents Peace in Mind

- *Set Screen Time
- *App Access Control
- *Content Fliter
- *Monitor Activity



Image: YINOCHE Kids Tablet displaying its easy-to-use Parent Dashboard with options for setting screen time, app access control, content filters, and activity monitoring. Two children are happily using the tablet in the background.

Kid-Proof Hard Case



Anti-drop



Tablet stand



Image: A young child playing with the YINOCHE Kids Tablet, which is protected by a blue kid-proof hard case with anti-drop features and a built-in tablet stand.

Eye Protective HD Screen



Anti-blue light



1024*600 IPS



7" HD Display



Image: Two children looking at the YINOCHE Kids Tablet, highlighting its Eye Protective HD Screen with anti-blue light technology and 1024x600 IPS 7" HD Display.

Long-Last Battery Life



Video



Game



Web



Standby



Image: Two children using the YINOCHE Kids Tablet in a car, illustrating its long-lasting battery life with estimates for video (7 hours), game (8 hours), web (12 hours), and standby (48 hours).

Best Gift for Kids

(On Children's Day, Birthday, Christmas Day)



Image: Two children opening gifts, with one receiving the YINOCHE Kids Tablet, presented as an ideal gift for Children's Day, birthdays, or Christmas.

Learning by Playing



Image: Two children sitting outdoors, engaged with the YINOCHE Kids Tablet, emphasizing the "Learning by Playing" aspect of the device.

Official Product Videos

Your browser does not support the video tag.

Video: A short promotional video showcasing the YINOCHE Kids Tablet, highlighting its features and suitability as a Christmas gift for children. This video is provided by Maccassi, a Seller.

Your browser does not support the video tag.

Video: A video demonstrating the YINOCHE Toddler Tablet, emphasizing its appeal as an "awesome kids tablet gift." This video is provided by Maccassi, a Seller.

Your browser does not support the video tag.

Video: A brief overview of the YINOCHE Kids Tablet for children, highlighting its 7-inch size and features. This video is provided by Maccassi, a Seller.

SPECIFICATIONS

Feature	Detail
Standing Screen Display Size	7 Inches
Screen Resolution	1024x600 Pixels
Processor	1.6 GHz (Allwinner)
RAM	2 GB
Flash Memory Size / Storage	32 GB
Operating System	Android
Wireless Type	802.11g
Average Battery Life	8 Hours
Rear Webcam Resolution	5 MP
Item Weight	1.1 pounds
Product Dimensions (LxWxH)	7.5 x 5.9 x 0.6 inches
Color	Blue

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the tablet in a cool, dry place away from extreme temperatures, humidity, and dust.
- **Water Resistance:** The device is not waterproof. Keep it away from liquids.
- **Screen Protection:** Maintain the protective film on the device screen and camera.

TROUBLESHOOTING

- **Device Unresponsive:** If the tablet becomes unresponsive, use a thin pin to press the "Reset Hole" to restart the device.
- **Charging Issues:** Ensure you are using the original charger and cable. Non-original chargers may damage the device.
- **Wi-Fi Connection Problems:** Verify your Wi-Fi password and ensure the tablet is within range of the router.
- **Parental Control Password Reset:** If you forget the parental control password, input "257518" to reset it.

WARRANTY AND SUPPORT

YINOCHE offers a 30-day free exchange policy and lifetime technical support for this product. For any questions or issues, please contact customer service.

Contact: Refer to the quick solution guide or user manual for specific contact details, or visit the [YINOCHE Store on Amazon](#).

